15

IN THE UNITED STATES PATENT AND TRADEMARK OFFICE BEFORE THE UNITED STATES RECEIVING OFFICE

(Attorney Docket No. DN38307RX)

JUSB17

TITLE:

5

A LOW-POWER WIRELESS BEACONING NETWORK SUPPORTING PROXIMAL FORMATION, SEPARATION AND REFORMATION

SPECIFICATION

Cross Reference to Related Applications

This application is based on and claims priority to U.S. Provisional Application Serial No. ______ (Attorney Docket No. 38307P4) filed on July 17, 1998, and U.S. Provisional Application Serial No. 60/080,700 filed on April 3, 1998. This application is also based on and claims priority to PCT Patent Application PCT/US98/02317 filed February 26, 1998, which claims priority to U.S. Provisional Application Serial No. 60/055,709 filed on August 14, 1997, and U.S. Provisional Application Serial No. 60/036,895 filed February 6, 1997.

Incorporation by Reference

The applications identified above in the section entitled "Cross Reference to Related Applications" are hereby incorporated by reference in their entirety. The following applications and Appendices are also hereby incorporated by reference in their

10

15

20

25

30

35

entirety.

- 1. U.S. Patent 5,748,619, filed 12/26/96, and issued 05/05/98.
- 2. U.S. Patent 5,673,031, filed 07/05/94, and issued 09/30/97.
- 3. U.S. Provisional Application No. 60/043,395, filed 04/02/97, attorney docket number 38314P1.
- 4. U.S. Provisional Application for Russell W. Libonati entitled "Antenna Screw for Small Radio Devices", filed 04/03/98 with Express Mail Label No. EE 047 970 011 US, attorney docket number 38337P1.
- 5. U.S. Application No. 08/916,601, filed 08/22/97, attorney docket number 38314R.
- 6. U.S. Application No. 09/053,275, filed 04/01/98, attorney docket number 38314R2.
- 7. APPENDIX A attached hereto entitled "HARDWARE PERFORMANCE SPECIFICATION", including pages 1-24.
- 8. APPENDIX B attached hereto entitled "MICROLINK RADIO ARCHITECTURE AND PROTOCOL", including pages 1-38.
- 9. APPENDIX C attached hereto entitled "THEORY OF OPERATION WIRELESS PERSONAL AREA NETWORK", including pages 1-9.
- 10. APPENDIX D attached hereto entitled "MICROLINK SPECIFICATION", including pages 1-2.
- 11. APPENDIX E attached hereto including pages 1-35 showing object code for a test release of Microlink. The code implementation of Microlink follows the state machine descriptions in APPENDIX E.
- 12. APPENDIX F attached hereto including pages 1-10 showing descriptive slides on wireless data communication.
- 13. APPENDIX G attached hereto entitled "PROPOSAL FOR A PERSONAL AREA NETWORK MEDIUM ACCESS CONTROL AND PHYSICAL LAYER", including slides 1-25.
 - 14. APPENDIX H attached hereto containing engineering schematics of a

20

5

10

Microlink Printed Circuit Board in accordance with the present invention, including Sheets 1-4 {B} for Board Number 144-781-007, Sheets 1-2 of Drawing Number 224-194 for Board Number 144-781-07, and Sheets 1-4 of Drawing Number 144-781-007 for Board Number 114-781-07.

15. APPENDIX I attached hereto providing a parts list for the schematics contained in APPENDIX H.

BACKGROUND

1. Technical Field

The present invention relates generally to wireless communication systems; and more specifically, to low power wireless networks that include a plurality of wireless devices, such wireless devices used in data collection applications, parcel delivery applications, and such other applications that require wireless communication between a plurality of portable devices.

2. Related Art

Wireless networks are well known in the art. Wireless networks are typically implemented in conjunction with an infrastructure network wherein a plurality of base stations (access points) allow wireless devices to communicate with the infrastructure network. The base stations provide wireless communications within respective cells and are typically spaced throughout a premises or area to provide wireless communications throughout the premises or area. Within the premises or area, wireless devices may communicate with devices connected to the infrastructure network. Further, the base stations and the infrastructure network facilitate communications between wireless devices operating within the premises or area.

Within the wireless networks, portable wireless devices communicate with the

10

15

20

base stations. For example, in a data gathering application within a premises, a wireless data terminal communicates with one or more of the base stations when requiring communication with devices connected to the infrastructure network. Further, the wireless data terminal may communicate with other wireless devices connected to the wireless network via one or more base stations. However, such communications require relatively high power transmissions. Thus, because the portable data terminal is battery powered, the high power transmissions may significantly reduce battery life.

Wireless communications are generally managed according to an operating protocol. Most of these operating protocols require ongoing wireless activity. Such ongoing wireless activity, even merely to receive transmissions, further shortens battery life in battery powered portable devices, reducing the duration within which the devices may operate or requiring more frequent recharging or battery substitution.

Additional concerns in wireless communication relate to synchronization of radio timing. Such synchronization becomes especially critical in the management of wireless communications wherein scheduling future coordinated activities proves important to carry out operations or power saving strategies. Wireless devices typically provide their own timing mechanisms; however, it is common for the timing mechanisms to vary in their operations from device to device so that they fail to provide an accurate reference for synchronization.

Thus, there exists a need in the art for improved wireless communications, particularly with portable devices that operate with battery power. Further, there exists a need in the art for wireless communications which provide stable synchronization of

10

15

20

wireless transmissions but also allow portable devices to conserve battery power while operating according to established protocols.

SUMMARY OF THE INVENTION

These and other objects of the present invention are achieved in a low power wireless communication (personal LAN) system constructed according to the present invention. The personal LAN includes a plurality of wireless devices with each wireless device including a radio transceiver. The radio transceiver may take the form of an insertable card that fits within a slot in the wireless device. In operation, the plurality of wireless devices establish a wireless network. In the wireless network, at least two of the plurality of wireless devices share beaconing responsibilities to coordinate operation of the wireless network.

In the personal LAN, the beacons are provided on a periodic basis with at least two of the plurality of wireless devices sharing beaconing responsibilities. The beaconing responsibilities may be shared on a round robin basis or may be shared according to the operating characteristics of the wireless devices with some wireless devices assuming greater beaconing responsibilities than other of the wireless devices.

The plurality of wireless devices may include a primary beaconing wireless device. In such case, other wireless devices of the plurality of wireless devices coordinate their wireless communications to beacons provided by the primary beaconing wireless device. Further, the other wireless devices may coordinate low power operations to beacons provided by the primary beaconing wireless device. In this fashion, the other

15

20

wireless devices may enter low power operations for multiple beacon cycles of beacons provided by the primary beaconing wireless device. The other wireless devices may also coordinate lower power operations based upon the contents of beacons received from the primary beaconing wireless device. The other wireless devices may also adjust timing parameters based on actual measurements so that they wake up appropriately from low power operations to receive the beacons from the primary beaconing wireless device.

The primary beaconing wireless device may also coordinate communications among the plurality of wireless devices. Alternately, the other wireless devices may coordinate their own communications but with reference to the beacons of the primary beaconing device. Further, beaconing responsibilities may be coordinated to satisfy wireless device limitations. For example, should one of the wireless devices face an operating condition which prevents it from providing beacons, its beaconing responsibilities may be passed to other of the wireless devices.

At least one of the wireless devices may also communicate with an infrastructure network at a relatively higher power level. In this fashion, at least one wireless device may communicate with another wireless network via the infrastructure network.

In another embodiment of the personal LAN, one of the plurality of wireless devices may separate from the wireless network to become a separated wireless device. In such case, at least one of the wireless devices attempts to reestablish communications with the separated wireless device. Further, the separated wireless device may also attempt to reestablish communication with the wireless network. Such operations are accomplished with predetermined operations that are initiated upon sensing the

15

20

separation.

In attempting to rejoin the wireless network, the separated wireless device may camp on a predefined channel, waiting for a beacon signal from at least one of the plurality of wireless devices with the separated wireless device rejoining the wireless network in response to receipt of the beacon signal. In another operation, the separated wireless device may scan a plurality of predetermined control channels for a beacon signal and may rejoin the wireless network in response to receipt of the beacon signal.

Should the separated wireless network device fail to rejoin the wireless network, it may selectively join another wireless network. Alternatively, the separated wireless network device may establish wireless communication with an infrastructure network.

In still another embodiment of the personal LAN, at least two of the wireless devices may separate from the wireless network to form an alternate wireless network separate from the wireless network. In such case, the at least two wireless devices of the alternate network may rejoin the wireless network after the separation. For example, the at least two wireless devices may form the alternate network when they are physically separated from the other wireless devices and rejoin the wireless network when in proximity to wireless devices of the wireless network.

When separated, at least one of the plurality of wireless devices not in the alternate wireless network may transmit beacon signals intended for the at least two wireless devices forming the alternate wireless network. These beacons signals may be transmitted on at least one control channel. In transmitting these beacon signals, the plurality of wireless devices may establish a beaconing pattern to coordinate operation of

10

15

20

the wireless network prior to separation of the at least two wireless devices. After separation, the at least two wireless devices of the alternate wireless network may then continue transmission of the beaconing pattern. Then, the at least two wireless devices may recognize the wireless network based upon identification of the beaconing pattern.

In a further embodiment of the personal LAN, each wireless device includes a radio transceiver capable of transmitting at both a higher power level and at a lower power level. In the embodiment, the plurality of wireless devices establish a wireless network when proximate to one another and operating at the lower power level. Further, after establishment of the wireless network, the plurality of wireless devices communicate within the wireless network at the higher power level.

In the personal LAN, the plurality of wireless devices establish the wireless network when in a first proximity to one another. Further, the plurality of wireless devices communicate within the wireless network when in a second proximity to one another, wherein the first proximity is less than the second proximity. One of the plurality of wireless devices separates from the wireless network when it moves outside of the second proximity.

Further, in the embodiment, at least one of the wireless devices may also communicate with an infrastructure network. Such communications with the infrastructure network occur at a power level greater than the higher power level.

The present invention also includes a method of establishing a wireless network.

The method includes selecting at least two wireless devices from a plurality of wireless devices, each capable of participation within the wireless network in a higher power

15

20

mode, placing the at least two wireless devices in close proximity to one another, the at least two wireless devices interacting in a lower power mode to establish the wireless network, and returning to the higher power mode for wireless network communications.

Moreover, other aspects of the present invention will become apparent with further reference to the drawings and specification which follow.

Brief Descriptions of the Drawings

A better understanding of the present invention can be obtained when the following detailed description in conjunction with the following drawings, in which:

Figure 1 is a perspective diagram showing a wireless personal local area network (LAN) LAN with a plurality of network devices, each of the plurality of network devices being capable of transmitting beacons;

Figure 2 is a perspective diagram showing the devices of the personal wireless LAN in communication with a base station that is part of an infrastructure network, employing relatively higher power wireless communications;

Figure 3 is a perspective diagram showing two personal LANs, one of which is linked to a base station of an infrastructure network in its proximity, while the other personal LAN is not linked to any base station and works independently of the infrastructure network;

Figure 4A is a timing diagram showing two consecutive beacons transmitted by stations on a personal LAN;

Figure 4B is a timing diagram showing a plurality of devices responsible for

15

transmitting consecutive beacons;

Figure 5 is a timing diagram showing a device sleeping through multiple beacons while still being able to wake up in time for a subsequent beacon;

Figure 6 is a perspective diagram showing roaming devices on a low power personal

LAN disassociating and establishing separate personal LANs;

Figure 7 is a timing diagram showing a missing beacon from one of the devices of the lower power network with subsequent attempts by other devices to replace the missing beacon;

Figure 8 illustrates a specific embodiment of a personal LAN according to the present invention operating to collect data and in coordination with an infrastructure network;

Figure 9 illustrates operation of a personal LAN 801 according to the present invention in a route delivery scenario; and

Figure 10 is a schematic block diagram illustrating the radio module and its interface with a host unit.

10

15

20

Detailed Descriptions of the Drawings

Figure 1 is a perspective diagram showing an exemplary embodiment of a wireless personal LAN (local area network) 100 with a plurality of network devices 105, 107, 109 and 111, each of the plurality of network devices 105, 107, 109 and 111 being capable of transmitting beacons. Each of the devices 105, 107, 109 and 111 contain radio modules, such as a radio card 117, operating pursuant to a common communication protocol.

More specifically, a hand held device 105, a data collection device 107, a printer 109, and a personal digital assistant (PDA) 111 participate in distributed beaconing. The beacons that are transmitted by the devices 105, 107, 109, and 111 are primarily used for synchronization and identification purposes. Typically, one network device transmits a sequence of beacons while the other network devices synchronize to selectively receive the beacons. In the period between any two consecutive beacons, the network devices 105, 107, 109 and 111 selectively transmit and receive information from each other.

The wireless personal LAN 100 might support a small number of devices, e.g., (up to 10). A user selects a set of devices to be part of the personal wireless LAN 100 and initiates an automatic configuration process whereby the devices communicate with each other to establish the personal LAN. Alternately, the user establishes the personal wireless LAN 100 by collecting the desired devices and requesting the formation of the personal wireless LAN 100 via one of the devices such as the data collection device 107. The data collection device 107, through wireless interaction with the collected devices, delivers a list of candidate devices to the user for selection. Thereafter, through the data collection device 107, or through other initiating device, the personal wireless LAN 100 is formed.

15

20

5

Alternatively, the personal wireless LAN 100 may be established using search and rescue operations as further described below.

In many environments, the selection of a set of devices is made from a great number of available devices. To prevent unselected devices from complicating or confusing network formation, the devices are all placed in very close proximity before initiating formation. Communication regarding formation takes place at very low power, avoiding unintentional participation by the unselected devices.

Specifically, in one embodiment of the personal LAN initialization activity, one of the devices in the personal LAN 100, such as the data collection device 107, sends an "initiate frame" to establish a personal LAN at a very low power level, perhaps reaching receivers no more that a few feet away. This frame is always broadcast, and it includes a type field indicating the type of network being created, and a network identification to identify the personal LAN being created. Devices receiving this frame will determine whether they want to join the personal LAN being initiated and request to join by sending an "attach request frame." The attach request frame is broadcast using the network identification, and includes the address of the sending device. After receiving attach request frames from the other devices, the data collection device 107 sends an "attach response frame" (indicating acceptability of a device) to the devices that are to be included, the personal LAN 100.

The personal wireless LAN 100 operates in the vicinity of a high density of overlapping networks. For example, in one embodiment 15 to 20 personal wireless LANs can simultaneously independently operate within a 300 foot area. The personal LAN can

10

15

20

also operate in the vicinity of an infrastructure network that is typically used in a warehouse or a factory as part of the work environment.

Although in one embodiment only a single network device, such as a data collection device 107, is responsible for transmitting beacons, in other embodiments, more than one network device selectively participates in distributed beaconing. Likewise, although beaconing intervals are rather fixed (i.e., of a predetermined duration), such intervals may vary depending on the intended functionality expected during each specific interval.

When more than one network device participates in distributed beaconing, they transmit beacons in either a predetermined order or in a dynamically determined order. Again, not all the network devices need to participate in such beaconing. Some of the network devices 105, 107, 109 and 111 may choose not to participate in beaconing depending upon their status, and the power levels of their batteries, etc.

In cooperation, the beacon signal protocol established allows each of the devices 105, 107, 109 and 111 within the wireless personal LAN 100 to enter power-saving sleep modes without compromising wireless personal LAN structure or communications. The protocol also supports beacon hand-off and backup beacon functionality to support separation of a personal wireless LAN 100 into two or more subnetworks as well as the automatic reformation thereof back into a single personal LAN.

Typically, one of the beaconing devices is considered to be the network coordinator and is responsible for rescuing lost devices and allowing other devices to join the network. For example, the printer 109 can be designated as the network coordinator and made responsible for network management, network membership changes and rescue missions.

15

20

Although the network coordinator may typically be the beaconing device, any non-beaconing device may take on such responsibilities as network coordinator.

In some embodiments, the network controller hands off the responsibility for rescuing lost devices to one or more of the other devices of the network. In this way, the network controller is able to perform other network management responsibilities while the one or more of the other devices assume the burden of search and rescue operations. This also proves advantageous when the network management responsibilities otherwise conflict with the search and rescue operations, and when the network management burden on the network controller is already significant.

The beacons are typically frames that include information about network time, dwell time and next beacon time. With such information a device may schedule its receiver to wake to receive a subsequent beacon and then enter a low power "sleep" mode until the time arises. In addition, beacons may also include a count of the number of beacons that have been sent or other time stamp indication. This allows a radio to occasionally take snapshots of its own clock and then at some larger number of beacons intervals later, sample the beacon count again and determine the radio's relative accuracy versus the underlying clock employed for beaconing. This allows for periodic adjustments of all network device ("radio") clocks to that of the beaconing device.

The personal wireless LAN 100 employs frequency hopping spread spectrum transmissions. Alternately, direct sequence or hybrid spread spectrum techniques could be employed. Like wise, other transmission technologies might be employed. With frequency hopping, the available frequency band is divided into a number of channels and the

15

20

transmission hop from channel to channel occurs in a specified sequence.

A few of the channels are designated as control channels, and are used for coordinating search and rescue operations of lost roaming devices, in addition to the selective transmission of control signals. The hop sequences will visit these channels more frequently. Several channels are also used to prevent a single point of failure based on interference on a single channel. In such environments, the beacons may also include hop information indicating how much time is remaining in the current dwell, the current channel, the hop table in use and the table entry.

The personal wireless LAN 100 is a low power network with a small range that makes it possible for some of the roaming devices to get out of the range of the network. When this happens, the personal wireless LAN 100 initiates search and rescue missions. In one embodiment of the search and rescue mechanism, one of the beaconing devices in the personal wireless LAN 100, the printer 109, for example, or any other device having the role of network coordinator, generates "identity" frames to provide an opportunity to the roaming devices to confirm their connectivity. Devices that receive the identity frames communicate with the network coordinator to confirm their continued participation in the personal LAN 100. For devices that do not respond to the identity frames and are determined to be "lost," a search and rescue mission is initiated for a specified number of beacons. After this period, the network coordinator will wait for an indication of no activity involving it, and then tune to each of a plurality of control channels in succession and transmit beacon frames. Lost devices will tune to at least one of the control channels, and when they receive a beacon, they will resync to the information in the beacon and thus be

15

20

recovered. Such search and rescue operations may also be employed to establish the wireless personal LAN 100 when proximal formation operations (as described above) are not desired.

The beacons are sent at fixed intervals of time. Alternately they may be sent at variable intervals. When the beacons are sent at variable intervals, they can be sent at predetermined intervals of time or at intervals specified dynamically in preceding beacons. A device that has not seen beacons in a given cycle will scan the designated control channels, waiting for beacons. Once it sees a beacon, it resynchronizes (resync's).

Devices join the personal wireless LAN 100 by sending requests to the network coordinator to join that network. The network coordinator can accept or reject the device that wants to join the network. A network device that finds itself isolated due to roaming can choose to join another network in its proximity.

In one exemplary embodiment, a single network device, such as the hand held device 105, transmits beacons at fixed beaconing intervals. The other devices 107, 109 and 111 using their synchronized radios, receive the beacons from the hand held device 105. In particular, the data collection device 107, the printer 109 and the PDA 111 use the occurrence of the beacon and the information contained therein to synchronize their clocks and to coordinate their communication with other devices. The hand held device 105 transmits a beacon and each personal LAN device stays awake for a period called the "awake time window" to receive communication from other of the personal LAN devices 107, 109 and 111. Communication is typically scheduled during the awake time window for the time period available thereafter. An exception might be small data packets of

15

20

5

duration not justifying scheduling overhead. If no communication involving a network device is anticipated, after the awake time window lapses, the device may choose to sleep for the rest of the current beacon cycle.

The hand held device 105, as the network coordinator, periodically requests that all the other devices in the personal LAN 100 confirm their presence. It may also periodically offer other devices in the proximity of the personal LAN 100 an opportunity to join the personal LAN 100.

If the traffic on the personal LAN 100 is low, the devices on the personal LAN 100 sleep most of the time. They need to be awake to receive beacons to synchronize their clocks and during the awake time window any need to receive or to request an opportunity to send. The devices 107, 109 and 111 can choose to sleep for multiple beacon cycles and wake up for the "nth" beacon. The network coordinator 105 is typically made aware of such multiple cycle sleep modes by the devices 107, 109 and 111. All communications with a sleeping device is coordinated by the network coordinator and scheduled for the beacon cycle for which the individual device is expected to be awake.

If the battery of a device, such as the PDA 111, is replaced, the PDA 111 re-acquires the network. The personal LAN itself does not determine that the device is missing for the duration of the PDA's 111 resync time. This period can be quite long. To facilitate the recovery of such devices, the hop sequences of the frequency hopping spread spectrum protocol incorporates the control channels in the sequence more frequently than other channels. Thus a device that is lost can wait on a control channel for beacons. If the lost device is the network coordinator (the station that normally transmits beacons), then after a

10

15

20

short number of missing beacons, another device, the data collection device 107 for example, will send backup beacons. Thus, even the lost network coordinator will be able to recover the network.

In another embodiment, the hand held device 105 acting as a network coordinator sends beacons and also forwards messages received from one device addressed to another. More specifically, if any of the devices 107, 109 and 111 need to communicate information to any other device in the wireless personal LAN 100, the originating device sends the information, along with the address of the designated recipient, to the network coordinator 105. The network coordinator 105 subsequently transfers the received information to the recipient device. Such information can be sent by the sending device to the network coordinator 105 during a designated slot in a beacon cycle or during a contention period following the beacon, when the hand held device 105 is awake to receive communication from the other devices. In this embodiment, the network coordinator 105 stores messages from the other devices and forwards them to the recipient devices subsequently. Devices that do not have to communicate can sleep immediately after a beacon. Devices that have to communicate with the network coordinator do so during the awake time window after a beacon when the network coordinator 105 listens to traffic on the personal LAN 100.

In another exemplary embodiment, the network devices 105, 107, 109 and 111 transmit their beacons employing a round-robin ordering strategy. In such a distributed beaconing environment, the hand-held device 105 first transmits its beacon, followed later by beacons from the data collection device 107, the printer 109, and the PDA 111. When one of the devices, such as the data collection device 107, decides to halt beacon

transmissions, the other network devices 105, 109, and 111 continue transmitting their beacons in round-robin order. Alternately, other round robin strategies for beaconing involving multiple inclusions of specific devices within the round robin order may be employed. In this embodiment, all the devices on the personal LAN 100 stay awake for a "awake time window" that follows a beacon, during which they communicate with the beaconing device or with each other.

In a different round robin embodiment, one of the devices, such as the hand held device 105, acts as the network coordinator and broadcasts beacons that are used as the master beacon or a primary beacon. The beacons transmitted by the other devices 107, 109 and 111 are considered to be secondary beacons. The primary beacon is used for clock synchronization by all the devices on the personal LAN 100. The secondary beacons are used to identify the presence of the associated device. The loss of a secondary beacon could indicate the loss of its associated device and trigger a rescue attempt by the network coordinator 105.

Devices that participate in beacon transmissions may suspend their own beacon transmissions for several reasons. If the battery power of the data collection device 107 participating in distributed beaconing goes below a threshold level, the data collection device 107 may selectively decide to temporarily suspend transmission of its beacons. When this occurs, the other devices 105, 109 and 111 recognize the suspension of beacon transmissions by the data collection device 107. In response, the other three network devices 105, 109 and 111 continue beaconing in round-robin order. Alternately, one of the other network devices 105, 109 or 111 transmits beacons in the place of the data collection

device 107.

Each of the network devices 105, 107, 109 and 111 includes a clock. For example the hand held device 105 includes a clock 113 that it uses for several purposes including scheduling communications and for sleeping multiple beacons. The devices 105, 107, 109 and 111 also include a radio card, such as the radio card 117, for communicating with each other. In most devices, a radio card operates in coordination with a microprocessor or an onboard computer (not shown). In some devices, such as "dumb" devices (such as a printer or the like), the radio operates independently of the microprocessor or host computer, and provides a wireless communication link for the dumb device. A dumb device is that which is typically designed for, or currently programmed for, wired link communications and that is generally unaware of a radio installation.

When the personal LAN separates into two different LANs, the beacon order of both LANs may be unaltered. If the clocks in each device are not synchronized with each other, it will be difficult for the devices to receive beacons. The beacons are therefore used to synchronize the clocks. Specifically, one of the beaconing devices, called the network coordinator, is considered to be the primary beaconer and its beacons are used by the other devices to calculate the difference between their clocks and the clock of the network coordinator. By determining this clock difference, each device is able to wake up just before the next beacon. The differences in the clocks can be more accurately calculated if they are measured over a large number of beacons. Therefore, each device on the personal LAN takes a snapshot of its clock periodically, and after some large number of beacons, determines its clock's relative accuracy versus the network clock

15

20

transmitted by the network coordinator. This enables each device to determine the difference between its clock and the network clock more accurately.

Knowing the corrections to be made to its own clock for synchronization with the network clock enables the network devices on the personal LAN to sleep through multiple beacon cycles and still be able to wakeup in time for a subsequent beacon. Again, each device can save power by minimizing the wakeup window required to receive a beacon. This is achieved by initially selecting a wakeup window wide enough to receive the first few beacons, and gradually tightening the wakeup window so that the wakeup window starts almost exactly in synchronization with a beacon.

Figure 2 is a perspective diagram showing the devices of the personal wireless LAN 203 in communication with a base station 227, that is part of an infrastructure network 200, employing a relatively higher power wireless communications 229. The hand held device 205, the data collection device 207, the printer 209 and the PDA 211 communicate with the base station 227 employing wireless links 229. Through the base station 227, the devices 205, 207, 209, and 211 communicate with a host computer 223 and with other personal LANs (not shown in the diagram). The base station 227 employ communication links 221 to communicate with the host computer 223 and another base station 225. The communication link 221 can be a wired communication link or a high powered wireless communication link. The communication link 229 between the personal LAN 203 and the base station 227 may be high powered or low powered, depending on the distance between the base station 227 and the personal LAN 203, the data rates necessary, and the protocols to be employed.

15

20

In establishing and maintaining communication with the infrastructure network 200, the personal LAN 203 may designate one or more of the devices 205, 207, 209 and 211 within the personal LAN 203 as an interface to the infrastructure network 200 depending upon data transmission requirements, power consumption and communication protocol constraints. In this fashion, communication between devices within the personal LAN 203 may be had without routing communications through the infrastructure network. Such operations proves advantageous in reducing network traffic on the infrastructure network 200 and allowing the devices within the personal LAN 203 to operate at a low transmitted power when communicating within the personal LAN 203. Further, such operation allows the devices 205, 207, 209, and 211 within the personal LAN 203 to communicate when outside the range of the infrastructure network 200.

Alternately, one or more devices that are part of the wireless personal LAN 203 acts as an access point to the infrastructure network 200. For example, the base station 227, while participating in the infrastructure network 200, may also participate in the personal LAN 203. It can communicate with another base station 225 and the host computer 223. It can also communicate with the hand held device 205, the data collection device 207, the printer 209 and the PDA 211 over the low powered personal LAN 203. Thus, while being part of the low powered wireless personal LAN 203, the base station 227 also participates in the high powered infrastructure network 200. The base stations 227 and 225 each may establish a respective personal LAN or communication cell. The base station 227 plays the role of a wireless access point. It may participate with a multi-hop wireless network that includes the other base station 225.

15

20

To initiate the personal LAN 203, the base station 227 or one of the devices assembled together for the personal LAN, such as the hand held device 205, transmits an initiate command. The initiate command would include the network id to use for the network, the data rate, the type of network, the power level to be used, the information being sent to potential joiners, and the length of the information being sent. In an exemplary initiate command, the type of the network could be specified as a personal LAN or as infrastructure network, the data rate could be specified as 250 Kbps or 1000 kbps, and the power level could be specified as one of 3 for full power, 2 for –20db, 1 for -40db, or 0 for -60db. To establish a personal LAN, the data rate would be specified as 1000 kbps, the type of the network would be a personal LAN, and the power level could be set to the lowest power level. In the case of distributed beaconing personal LANs, the initiate command includes solicitation of information on a device's ability to beacon.

The device sending the initiate command, the base station 227 or the hand held device 205, then waits for the attach requests from the other devices in its proximity. The devices that receive the initiate command may choose to reply using an attach request. The attach request would include an address of the requesting device, the type of the remote device that identifies one of several possible radio modules, the information that the remote devices needs to pass to the initiating device, and the length of that information. In the distributed beaconing situation, an attach request also includes information on the device's ability to participate in distributed beaconing. The initiating device, such as the hand held device 205, then sends a join response to indicate acceptability of a remote device in the personal LAN that is being initiated. The join response includes the address of the remote

15

20

5

device and a status field indicating acceptance or rejection. In the distributed beaconing situation, the join response also includes information on the device's role in distributed beaconing.

Subsequently, once the base station 227 or the hand held device 205 has determined that all required devices have joined the personal LAN being initiated, a start network command is sent. The start network command includes the dwell time of network in network ticks, where one tick is approximately 30.5 microseconds for an exemplary embodiment. It also includes a device resync time, which is the number of beacon intervals between attempts to recover missing devices from the network, the beacon interval in terms of frequency hops, the number of devices likely to transmit in any dwell interval, and a mode indicating the type of network – personal LAN or infrastructure. The start network command is also used to restore old networks.

The devices receiving the start network command from the base station 227 or the hand held device 205 send a start network response that includes information on the success or failure in starting the new network. For old networks being reinitiated, the start network response indicates the success or failure in reinitiating an old personal LAN or infrastructure network.

In operation, after initialization of the personal LAN's 203 operation, each of the devices 205, 207, 209, and 211 communicates with each other within the personal LAN 203 via low power communication. When communication is not required by a particular device, the radio modules enter a low power or "sleep mode" to conserve battery power. During such sleep modes, other circuitry within the device may also be powered down.

15

20

Figure 3 is a perspective diagram showing two personal LANs 303 and 333, one of which 303 is linked to a base station 313 of an infrastructure network 300 in its proximity, while the other personal LAN 333 is not linked to any base station and works independently of the infrastructure network 300. The personal LAN 333 includes a hand held device 325, a data collection device 327, a printer 329, and a PDA 331. These devices communicate with each other over the low power personal LAN 333 after they have been initially configured. The devices 305, 307, 309, and 311 not only communicate with each other over the low power personal LAN 303, but are also able to communicate with other devices, such as a host computer 302, a data collection device 317, and a hand held device 319, via a base station 313 and over the wireless communication link 335 and the infrastructure network 300. The wireless link 335 may be a low power wireless link or a high power wireless link, depending upon the individual devices, the data rate, the traffic, and the protocols.

The infrastructure network 300 may depend on a base station, such as the base stations 313, for distributing messages to and from a host computer to the personal LANs. It may also depend on a base station to distribute messages within the infrastructure network from one base station in the network to another. No physical addresses are assumed in either case and a flexible host interface is provided in each network device, such as in devices 305, 307, 311, 309, to allow connection to a variety of base stations.

The base station 313, being part of the infrastructure network 300, provides data transfer between the wired physical medium and wireless devices, and may also provide a wireless link between wired Ethernet segments. Specifically, the base station 313 acts as a

15

20

wired bridge access point that attaches to the infrastructure network through a communication link, such as an Ethernet link, and has bridging enabled. It converts wireless personal LAN frames from the personal LAN 303 to Ethernet frames, and Ethernet frames to wireless personal LAN frames. It also forwards wireless personal LAN frames to wireless personal LAN devices. Although, the base station 313 is shown wired to the infrastructure network 300, it may employ a high power wireless means to communicate with the infrastructure network 300. The base station 313 may participate with the personal LAN 303 as an infrastructure device, or may be part of the personal LAN 303 itself.

The data collection device 317, and the hand held device 319 are not part of any personal LAN. They communicate with a base station 321 that is part of the infrastructure network 300. The communication between the base station 321 and the devices 319 and 317 may employ low power wireless communications or high power communications depending upon the individual devices, the data rate, the traffic, and the protocols.

Figure 4A is a timing diagram 400 showing a window of two consecutive beacons 413 and 415 of a plurality of beacon transmissions originating from at least one device on a personal LAN. The time line 405 shows two beacons 413 and 415, each transmitted for a duration 409, the beacons occurring with a beacon cycle 407. The beaconing station may be a network coordinator or another device participating in distributed beaconing. To send a beacon for the beacon duration 409, the sending device must participate in the beaconing protocol and be assigned beaconing responsibility. In the distributed beaconing environment, the beacons 413 and beacon 415 are likely to be transmitted by different

10

15

20

beaconing devices. If only one device, e.g., the network coordinator, is responsible for beaconing, the beacons 413 and 415 originate from the network coordinator.

During the beaconing duration, beaconing information may be transmitted by a beaconing station on the personal LAN, and received by all the other devices on the personal LAN.

At a minimum, a beacon gets to coordinate communication activity. It used to synchronize operation and may contain information such as pending message lists, scheduling information or other network related indicia. Devices that are in a multiple cycle sleep mode may sleep through multiple intervening beacons. The beacon transmission cycle 407 is the duration between two consecutive beacons. The devices listening for the beacon stay awake for the beacon in a window called the wakeup window 411. Following the beaconing duration 409, an awake time window may be optionally invoked for some beaconing protocols during which the network coordinator or the beaconing device listens to network traffic and communicates with the other devices.

The beacon transmission cycle 407 may or may not be predetermined. It may also vary with the data rate, the traffic and the protocol. If it is predetermined, the devices in the personal LAN know when the next beacon is likely to occur. If it is not predetermined, then a given beacon identifies the time of occurrence of the next beacon. The beacon can be a frame that includes a network time stamp which is a timestamp of the beacon in network ticks of 30.5 microseconds, a next beacon time in terms of hops, a next beacon type, a beacon interval in units of hop dwells and a beacon count modulo 65536. The network time stamp is used to synchronize receiver's clocks. The beacon frame also includes a request

10

15

20

for poll window time in network ticks to allow devices to indicate their need to communicate with the beaconing device or network coordinator, a device resync time that indicates the number of beacons that can be missed before entering resync mode, and a next hop time. The next hop time indicates the time left in the current dwell from start of the beacon frame.

Additionally, the beacon frame includes the dwell time in network ticks, the hop sequence being used the frequency hop based communications protocol, the current hop index, and a channel number indicating the actual channel that the beacon is transmitted on. The actual channel number is helpful to the receiving device because of the possibility of hearing adjacent channels.

In an exemplary beacon frame, the type of beacon can be 0 for normal beacon from network initiator, 1 for reset beacon from a network coordinator indicating need to resynchronize, 2 for backup beacon that is generated by a station other then the network coordinator. The type 2 also indicates that the beacons from the network coordinator have recently occurred and will occur later in the beacon sequence. For distributed beaconing, the next beacon type information may be accompanied by information on the next beaconing device indicating the device that would beacon next. This would facilitate dynamic reconfiguration of the personal LAN while providing for the dynamic determination of the next beaconing device depending on the data rate, the protocols, the power levels and the status of the devices.

Figure 4B is a timing diagram 405 showing a plurality of devices responsible for transmitting consecutive beacons 421, 423, and 425 that are part of a continuous beacon

sequence. Beacons 421, 423 and 425 are transmitted by the hand held device 105, the data collection device 107 and the printer 109, respectively, in a round robin beaconing protocol. In this exemplary embodiment of the round robin beaconing protocol, the PDA 111 does not participate in beaconing. One of the beaconing devices, for example the hand held device 105, may be considered to be the network coordinator. The beacon 421 transmitted by the network coordinator may be considered to be the primary or the master beacon, and may be used by the other devices to synchronize their clocks. The other two beacons 423 and 425, transmitted by the data collection device 107 and the printer 109, respectively, are then considered to be secondary beacons, and are employed primarily to confirm the continued presence of those devices in the personal LAN 100.

Figure 5 is a timing diagram 505 showing a device sleeping through multiple beacons while still being able to wake up in time for a subsequent beacon. In this exemplary embodiment of the present invention, beacons 513, 515 and 517 are sent the hand held device 105, the data collection device 107, and the printer 109, respectively. The PDA 111 does not send beacons, and sleeps for multiple beacon cycles. Specifically, the PDA 111 wakes up for a wakeup window 511 to receive the beacon 513 from the hand held device 105, sleeps through the beacon 515 transmitted by the data collection device 107, and wakes up in time to receive the beacon 517 transmitted by the printer 109. It therefore sleeps for a multiple cycle sleep time 519, with each beacon transmission cycle being 507.

In another embodiment, the PDA 111 does not send beacons, and sleeps for multiple beacon cycles only to wake up to receive the beacon 513 sent by the hand held device 105. In such an embodiment, the hand held device 105 would be considered as the

10

15

20

network coordinator, and the other non-beaconing devices would coordinate their sleep and wakeup schedules with the network coordinator.

Figure 6 is a perspective diagram showing roaming devices on a low power personal LAN 600 disassociating and establishing separate personal LANs 613 and 615. The personal LAN 600 includes a hand held device 605, a data collection device 607, a printer 609, and a PDA 611. In an exemplary embodiment, the devices 605, 607, 609, and 611 communicate with each other employing a distributed round robin beaconing protocol. The hand-held device 605 is the network coordinator and transmits primary beacons periodically in round robin order with the other devices, while the other devices in the personal LAN 600 transmit secondary beacons.

The devices in the personal LAN 600 are typically worn using appropriate attachments by a worker working in a warehouse or by a delivery person working in and out of a truck. Most of the devices in such work environments are portable, such as the devices 605, 607, 609 and 611, and some of these devices are not carried on the person of the worker when they are not needed. The personal LAN 600 is therefore dynamically configurable, and can identify the presence or absence of the devices in the personal LAN. The operation of the personal LAN 600 is continued and not disrupted despite the lack of participation or absence of some of the devices 605, 607, 609 and 611.

The network coordinator 605 assesses all devices in the network by monitoring the request for poll activity from the other devices and its own traffic to other stations. It can therefore determine which devices on the personal LAN 600 have recently been connected. By monitoring the secondary beaconing activity it can also ascertain which devices are still

10

15

20

connected. For those stations without recent demonstration of connectivity, the network coordinator 605 generates identify frames. The lack of an appropriate response to the identify frames by devices that show no sign of activity will cause the network coordinator 605 to initiate a recovery mode or search and rescue operation.

For example, during the operation of the personal LAN 600, when the devices 609 and 611 are separated from the other two devices, the network coordinator 605 and the data collection 607 fail to receive the beacons from the printer 609 and the PDA 611. The network coordinator 605 then initiates a recovery mode or search and rescue operation for a number of beacons that was initially specified by the lost devices. After the requested number of beacons has passed, the network coordinator 605 will wait for an indication of no activity involving the lost devices 609 and 611, and then tune to each of the control channels in succession and transmit beacon frames.

The lost devices, the printer 609 and the PDA 611, are expected to wait on one of the control channels. When they receive the beacon, they proceed to resync to the information in the beacon and thus are recovered. If the printer 609 and the PDA 611 are separated and are out of the range of the personal LAN 600, they will not receive beacons from the network coordinator 605 and the data collection device 607. They progress very slowly through the control channels, waiting for beacons. However, the printer 609 and the PDA 611 continue to transmit their beacons, and continue to receive each others beacons. When they fail to see any beacons from the network coordinator 605 for a predetermined number of beacon transmission cycles, the printer 609 and the PDA 611 communicate with each other to identify a replacement for the network coordinator. For example, the printer

15

20

609 and the PDA 611 may elect the printer 609 to become the network coordinator and establish the personal LAN 613 for their continued operation.

In the meanwhile, the hand held device 605 abandons an unsuccessful search and rescue attempt for the devices that a number of beacon cycles. The hand held device then reconfigures the personal LAN 600 into the personal LAN 615 with itself as the network coordinator. When the devices 609 and 611 constituting the personal LAN 613 later come closer in proximity to the personal LAN 615, they may selectively rejoin the personal LAN 615 at the discretion of the network coordinator 605.

Devices that are separated or "lost" from the personal LAN 600 may rejoin the personal LAN 600 when they return to the proximity of the personal LAN 600. This is accomplished when these "lost" devices send a join request that includes the type of network the device wants to join, the number of beacons after missing which the device generates network beacons, the number networks and the network addresses of networks that the device is willing to join. The lost devices then await a join network response from the network coordinator of the personal LAN 600. The lost devices then send network management command to get addresses and types of other stations in the network. They then await the response and save information for use in other data messages subsequently.

Figure 7 is a timing diagram showing a missing beacon from one of the devices of the lower power network 100 with subsequent attempts by other devices to replace the missing beacon. Specifically, when the hand held device 105, the data collection device 107, and the printer 109 participate in distributed round-robin beaconing, each device transmits a beacon in succession and all the devices in the personal LAN can determine the

10

15

20

device associated with a missing beacon.

The time line 733 corresponds to the activity of the hand held device 105 while the time line 735 corresponds to the activity of the printer 109. The hand held device 105 and the printer 109 wake up periodically for a wakeup window 709 to receive beacons. They also send beacons when it is their turn to transmit beacons.

The hand held device 105, the data collection device 107, and the printer 109 are expected to transmit the beacons 711, 713 and 715 respectively, in that order. However, when the data collection device 107 fails to transmit the beacon 713, the other devices 105, 109, and 111 listening to the beacons identify the source of the missing beacon as the data collection device 107. If the data collection device 107 is the network coordinator, both the beaconing devices 105 and 109 try to replace the missing beacon 719 with their own beacons 723 and 725, respectively. The contention for replacing the missing beacon 719 from the network coordinator 107 is recognized by all the devices on the personal LAN 100, and the contending devices decide to resort to a random back-off period across multiple beacon cycles to resolve the contention. The device that recovers first from the back off period and transmits its beacon as a replacement to the missing beacon is subsequently allowed to replace beacons from the data collection device 107.

If the data collection device 107 that stops sending beacons is not a network coordinator, and the hand held device 105 is the network coordinator, then the network coordinator 105 decides to replace the missing beacon from the data collection device 107 by its own beacon. The printer 109 refrains from transmitting its beacon in contention with the network coordinator 105. If the data collection device 107 decides later on to participate

10

15

20

in distributed beaconing, it coordinates its inclusion with the network coordinator 105.

Figure 8 illustrates a specific embodiment of a personal LAN 801 according to the present invention operating to collect data and in coordination with an infrastructure network. The personal LAN 801 includes a plurality of devices each having a radio module for enabling communication between itself, other devices within the personal LAN 801 and the infrastructure network. Such a personal LAN 801 may be used by a person 810 in gathering data such as in a factory environment and may include, for example, a printer 814, a data terminal 816 and a code reader 818, such devices perhaps attachable to the person via a harness 812. In operation, after initialization of the personal LAN's operation, each of the devices within the personal LAN 801 communicates with each other device within the personal LAN 801 via low power communication.

When communication is not required by a particular device, the radio modules enter a low power or "sleep mode" to conserve battery power. During such sleep modes, other circuitry within the device may also be powered down.

The personal LAN 801 may also establish communication with the infrastructure network when required. The infrastructure network may include a wired network having a wired backbone 826 connecting computer devices 828 to a wireless access point 824. The wireless access point 824 may participate with a multi-hop wireless network 822 having a plurality of wireless access devices, each establishing a respective communication cell. The multi-hop wireless network 822 may include, for example, printers 830 and other devices communicating wirelessly.

10

15

20

In establishing and maintaining communication with the infrastructure network, the personal LAN 801 may designate one or more of the devices within the personal LAN 801 as an interface to the infrastructure network depending upon data transmission requirements, power consumption and communication protocol constraints. In this fashion, communication between devices within the personal LAN 801 may be had without routing communications through the infrastructure network. Such operation proves advantageous in reducing network traffic on the infrastructure network and allowing the devices within the personal LAN 801 to operate at a low transmitted power when communicating within the personal LAN 801. Further, such operation allows the devices within the personal LAN 801 to communicate when outside the range of the infrastructure network.

Figure 9 illustrates operation of a personal LAN 901 according to the present invention in a route delivery scenario. In such operation, the user 910 delivers packages 920 to remote locations after collecting the packages 920 at a central warehouse 932. Through interaction with the infrastructure network, the user 910 collects the packages 920 and places them into a designated delivery van 934, reading in bar-codes for each of the packages 920. Should the user 910 collect an incorrect package, one or more devices of the personal LAN 901 would notify the user 910 of his error. Upon completion of collection, the user 910 would then begin distribution of the packages 920.

The user 910 establishes the personal LAN 901 by collecting desired devices and requesting formation of the personal LAN 901 via one of the devices such at the terminal 916. The terminal 916 through wireless interaction with the collected devices delivers a

10

15

20

list of candidate devices to the user 910 for selection. Thereafter, through the terminal 916, or other initiating device, the personal LAN 901 is formed.

At each distribution site, the personal LAN 901 may then establish communication with the infrastructure network, if necessary, via a relatively higher power wireless access point 936 contained within the delivery van 934. Such information would then be transmitted back to the warehouse 932 for distribution and verification. The access point 936 in the van 934 may participate with the personal LAN 901 as an infrastructure device or may be part of the personal LAN 901 itself.

Referring to Figure 10, in a specific embodiment of the present invention, each of the devices within personal LAN may be referred to as a host unit 1030 that contains a central processing unit 1032 ("CPU"), a radio module 1034 and various other circuitry required by the particular device, e.g. printing components, scanning components, memory, etc. The CPU 1032 operates in conjunction with the radio module 1034 to allow the host unit 1030 to establish and/or join the personal LAN 901 as well as to participate within the personal LAN 901. In reducing power consumption of the host unit 1030 to prolong battery life, the CPU 1032 may place the radio module 1034 as well as other components of the host unit 1030, including itself, to sleep for various periods of time.

An Infrastructure Network (such as those managing a majority of wireless communication flow a premises) may depend on an access point for distributing messages to and from a host network as well as within the Infrastructure Network (i.e. from one station in the network to another). No physical address is assumed in either

10

15

20

case and a flexible host interface is provided to allow connection to a variety of stations. The personal LAN provides a simple modem and an intelligent host interface option, e.g., providing an RS-232 or a serial 3V CMOS physical host interface option, and provides multi-point capability with a throughput of 19200 bps in any environment. The personal LAN also allows a user to select a set of devices and automatically configures itself depending upon the selection.

Each device (or host) that may participate in personal LANs will contain a radio module. The radio and host protocol are implemented by a microprocessor in the radio module. The microprocessor will handle framing for both interfaces (simultaneously) and buffering for several messages. The implementation of the host interface (in smart mode) will provide simple support for the host computer's implementation of its radio driver.

Most devices such as portable computing devices are configured to support both NDIS device drivers and Windows 95_{TM} virtual com ports. This allows printers to have a "com" port of their own, and data may be sent to the radio for communication to other radio devices via a stream of bytes. An NDIS interface would allow standard higher level protocols to utilize the radio if this was desirable. Other devices will need to implement proprietary device drivers communicating to the radio using the 3V CMOS serial interface which may be connected to an RS-232 interface adapter. In the implementation a simple "C" language API may be used as a device driver.

In particular, the physical interface to the host device is one of the following: a 3V CMOS serial interface and with an adapter, an RS-232 interface. The type of control

information sent over the interface, framing characteristics and data rates are programmable. Table 1 describes the 3V CMOS serial interface signals.

Table 1 - Serial 3V CMOS Host Signals

Signal	Direction	Usage
TX	From Host	Serial data from host.
RX	From	Serial data from radio.
	Radio	
RTS	From Host	Request to send. This will power up the radio host interface and
		interrupt the radio to indicate that the host has a message.
CTS	From	Clear to send. The radio is powered up and the radio is ready to
	Radio	accept data on TX and send data on RX
RI	From	Interrupt to host to indicate that the radio has a message for host.
	Radio	When the radio asserts CTS, RI will be unasserted.
RESET	From Host	This signal hard resets the radio. It will have a pull up resistor so
		that it may remain unconnected.
DSR	From	The radio asserts this line when it has finished its reset process.
	Radio	It may be connected to RTS when RTS is not managed by the
		host. This allows the host interface to remain active.

For RS-232, a secondary PC board connected to the 3V CMOS interface will provide RS-232 signal levels for all the serial interface lines (except Reset). Upon reset, the data rate will be 19200. A smart interface command can change the rate to one of 19200-115200. The asynchronous framing will be 8 bit, no parity and 1 stop bit. The least significant bit of each byte of data is sent first, after the start bit.

Two types of host control interfaces are provided. A dumb interface is used by devices that are pre-programmed and cannot directly control the radio device. In this case, a very simple hardware controlled modern device is emulated. A Lock command is included in the radio protocol so that one station using a smart host interface can dedicate for its use another station (such as a printer with a dumb interface), and thus prevent

5

10

15

20

5

interleaved data or other such problems. This is a higher layer problem, but is included in the radio protocol to support devices using the dumb interface.

A smart interface is used when the host device is able to actively manage the radio. Upon reset, the radio assumes a dumb interface. The dumb interface passes just data. Control and selection of dumb devices, if required, is handled by the other end of the radio data link. RTS must be asserted by the "dumb" host. In those cases where the connected host device does not use RTS/CTS signaling, this may be accomplished by connecting the DSR signal from the radio to RTS. While RTS is asserted, the radio cannot power down its end of the host interface and thus will use more power. In cases where the host device can assert RTS and await CTS, the radio will power manage the host interface. While RTS is asserted, data can be sent to the radio. When either RTS is unasserted or a gap in character arrival occurs, the radio will send the data to one of the following destinations, in order of highest to lowest priority:

- 1. The destination device which has currently selected the radio connected to this host device.
- 2. The last device that communicated with a unicast message to this device.
 - 3. The broadcast address.

The smart interface can control operation of the radio such as establishing networks, removing networks, collecting statistics, multi-point transmission, and the management of destination devices with dumb interfaces, etc. The Host establishes this interface by first asserting RTS (this is necessary to allow the radio unit to power up the

host interface). It then await CTS from the radio. Next it unasserts RTS and immediately sends the escape sequence DLE (hex 10) followed by ENQ (hex 05). The radio will use this sequence to enter the smart interface mode. The host may then begin a sequence to communicate with the radio.

Once the smart mode has been entered, all further communication is encapsulated in frames as follows.

10

Table 2 - Smart Mode Communication Frames

Field	Size	Usage
Length	16 bits	The number of bytes in the message, including Ctl, Sequence and Check
Ctl	8 bits	The command to the radio
Sequence	8 bits	Sequence number of message
Info	0Length*8 bits	The information used by the command
Check	8 bits	Checksum of Length through Info fields, inclusive

When the radio has a message to send to the host, it will assert RI. Whenever any message exchange is to occur, the host will assert RTS and await assertion of CTS by the radio. When the radio asserts CTS, it will unassert RI. At this time bi-directional exchanges are possible until the host unasserts RTS. If this occurs in the middle of a message/frame (either from or to the radio), the message/frame is considered aborted and must be resent. The receiver of a message/frame (other than the acknowledge frame) must acknowledge the message/frame.

The Ctl field is composed of two parts. The low 4 bits are the command and the high 4 bits are used as follows.

Table 3 - CTL Field

Bit	Name	Usage
7	Retry	This command is a re-transmission of a previous command.
6	reserved	
5	More Data	The sending device has more data to send to receiver
4 .	reserved	

Table 4 below defines the commands from the host device to the radio.

Table 4 - Commands from the Host Device to the Radio

Command	Value(hex)	Usage
Data	0	Data to send on the radio
Initiate	1	Initiate network
Status	2	Status request to radio
Ack	3	Positive acknowledgment of frame from radio
Join Response	4	Allow/disallow device to join network
Start Network	5	Start network with all accepted devices
Join Network	6	Join one of specified networks
Device	7	Manage remote destination for use by this host
Management		
Diagnostics	8	Perform various radio diagnostic and service
		functions
Set Parms	D	Set host interface parms
Version Request	Е	Request the radio version information
Network	F	Network Management request or response
Management	<u> </u>	

Table 5 defines the commands and status messages from the radio to the host.

Table 5 - Commands from the Radio to the Host Device

Command/Response	Value(hex)	Usage
Data	0	Data received from the radio
Initiate Response	1	Response to Initiate network command
Status Response	2	Status response to host
Ack	3	Positive acknowledgment of frame from host
Join Request	4	Device request to join network
Start Network	5	Network has been started
Response		
Join Network	6	One of requested networks has been joined
Response		
Device Management	7	Result of attempt to manage remote destination
Response		
Diagnostic Response	8	Result of diagnostic request
Data Transmit Status	D	The status of last data request from host
Version Response	E	The version information of the radio.
Network	F	Network Management request or response
Management		

Each frame transmitted across the interface has a sequence number. A retransmission of a frame will have the Retry bit set in the Ctl field and the same sequence number as the previous attempt. Ack frames will use the sequence number of the received frame that is being acknowledged. The sequence number is incremented for each unique frame (other than Ack frames) sent across the interface.

The Chk Field is a modulo 8 sum of all bytes in each command or response message including the Length field through the Info field. The receiver of the message will also calculate the checksum and if the calculated field equals the received field, immediately send an Ack frame response.

Both the radio and host will use the following command to pass data messages across the interface. The maximum number of data bytes is indicated in the version and

status responses from the radio. The format of the command is as follows.

Table 6 - Host Command to Pass Data Messages Across the Interface

Field	Length (octets)	Usage
Address	2	The destination of the message. All ones indicates broadcast
Awake Window	2	The time in 0.1 seconds that the host radio should remain awake after sending the data packet.
Data	Length bytes	The data to send. This must not exceed the maximum number indicated by the radio

The Initiate Command is used by the host to Initiate a new Microlink network.

Upon receipt of this command, the radio will send Initiate commands on the radio control channels and pass all attach requests (that do not have duplicate source addresses) to the host. The format of the command is as follows:

Table 7 - The Initiate Command

Field	Length	Usage
	(octets)	
Network Id	2	The network id to use for the network. NOTE that a Network Id
		with all bits set to one is a broadcast Network Id that should not be
		used in this command.
Dwell Time	2	Dwell time of network in network ticks(one tick is approximately
		30.5 microseconds
Device	2	Number of beacon intervals between attempts to recover missing
Resync Time		devices from network.
AgeFactor	2	Time in 0.1 seconds to age out inactive Node table entries.
Beacon	1	Time between beacons in hops. For example, a value of 1 is equal
Interval		to Dwell Time
Transmit	1	Number of devices likely to transmit in any dwell interval. The
Devices		radio will use this to calculate the RFP Window. This window
		affects the link maintenance power.
Type Flags	1	This field defines the type of network and controls its
		initialization. The field is composed of the following bit fields:
		Bit(s) Usage
		7 Rejoin. Rejoin previous network.
		6 Wakeup Defer. If one, the network requires additional
		hidden node protection.
		5 Network Type. If one, the network is Infrastructured,
		otherwise it is a PAN.
		4 Temporary Network. Don't save parms in eeprom.
		2-3 Data Rate. Values are as follows:
		0 250kbps.
		1 1Mkbps.
		0-1 Power. If Network Type is PAN, then this field indicates the
		power to use during initialization. Its values are as follows:
		0 Transmit Initiate at lowest level (-60dbm).
		1 Transmit Initiate at level 1(-40dbm).
		2 Transmit Initiate at level 2(-20dbm)
		3 Transmit Initiate at full power(0dbm)
SAR	1	Rate at which to perform search and rescues for stations that are
		"lost". This is in Beacon times.
Ninfo	1	Length of Info field
Info	Ninfo	Any arbitrary information that the host would like distributed to
		potential network joiners.

To establish a PAN, the Data Rate would be 1, the Network Type would be 0 and the Power would be set to 0. An infrastructured network could set the Data Rate to 0 (if

greater range is useful. This would be approximately 6db additional link margin) or to 1, and the Type to 1. For PAN, if Rejoin is set, then the radio will attempt to "discover" the previous instance of the network before it sends the Initiate frame. If the previous network is "discovered", then after the Initiate response, a Start command must not be sent because the network has already been rejoined. For Infrastructured networks, a Start is not needed as the network will start upon valid receipt of this command.

In response to an initiate network command the Initiate Response is generated.

Table 8 - The Initiate Response

Field	Length (octets)	Usage
Status	2	Status of Initiate. Values are as follows:
		0 Initiate Command in progress.
		1 Infrastructured network started
		2 Network rejoined
		3 Invalid Parameter
		4 Network already Initialized/Started

The Status Request/Response pair is used to get status information from the radio.

This includes counters and network information. The format of the Status Request is as follows:

Table 9 - The Status Request

Field	Length (octets)	Usage
Туре	1	Type of request. Values are as follows: 0 Request Statistics 1 Request and Clear Statistics

The format of the response is as follows:

Table 10 - The Status Response

Field	Size(bits)	Usage
MaxLength	16	Maximum length of data field in data command
Nmessage	16	Maximum number of outstanding messages allowed
TxFrames	32	Number of frames successfully sent
TxError	32	Number of frames that retried out
Sync Lost	32	Number of times synchronization has been lost
Device Lost	32	Number of times devices have been detected as out of communication
RxFrames	32	Number of received frames with good FCS
RxTooLong	32	Number of received frames that where too long
RxFCSErr	32	Number of received frames that had FCS errors
RxDuplicate	32	Number of frames detected as duplicates
Status	16	General status of adapter. Bit definition is as follows: Bit Usage 0 In a network 1 This station initiated the network 2 This station transferred the network 4 This station is current network coordinator 5 Station currently out of sync 6 Low data rate (250kbps)
Address	16	Station address.
Network Id	16	Network id
Beacon Interval	16	Time between beacons in network ticks(approximately 30.5 microseconds)
Dwell Time	16	Dwell Time of network in network ticks
Hop Sequence	16	Hopping Sequence of network

5

The Ack frame is sent by both the radio and host to acknowledge correct reception of a frame across the interface. The sequence number in the frame is copied from the frame being acknowledged. If an Ack is not received within 100 milliseconds, the sender will re-transmit the unacknowledged frame.

After a Initiate Command has been issued, Attach Request messages received by the radio will be sent to the host. This request indicates a remote device that has detected the host's attempt to Initiate a network and has requested to join that network. The host can accept or reject the device with the Join Response Command. The format of this request is as follows:

Table 11 - The Join Request

Field	Length (octets)	Usage
Address	2	The address of the requesting device.
Туре	2	Remote device type. The radio module has a type selector on the PC board which is indicated by this field.
Ninfo	1	Length of Info field
Info	Ninfo	Information that the remote device can pass. Smart devices can pass information to their adapter in the Join Network Command. For devices using a "dumb" interface, a four byte radio serial number will be sent in this field. The maximum length of this field is 16 bytes.

The Join Response is used to indicate acceptability of a remote device in the network that the host is Initiating. It is formatted as follows:

Table 12 - The Join Response

Field	Length (octets)	Usage
Address	2	Address of remote device
Status	1	Accept status. Values are as follows: 0 Remote device is accepted. 1-15 Reserved for use by radio 16-255 Join Request is rejected. This code is passed to the device that requested joining.

The Start Network Command is used to start a PAN once the host has determined that all required devices have joined. The Start Network Response is generated by the radio when the network has been successfully initialized (that is all expected devices are now in sync). This may be as a response to the Start Network command or when the Type field had the high bit set in an Initiate command and the previous instance of the network was re-discovered. It has the following format:

Table 13 - The Start Network Response

Field	Length (octets)	Usage
Status	2	This field has the following values: 0 New network started. 1 Network already Started. 2 Network not initialized.

The Join Network Command is used to allow the host to join a network. It could be used to join a PAN or an infrastructured network. It is formatted as follows:

Table 14 - The Join Network Command

Field	Length	Usage
	(octets)	
Туре	1	If the high bit of Type is set, the host requests that an attempt be made to rejoin the previous network. The low bits are encoded with the data rate at which to search for a network. The values are as follows: 0 250kbps 1 1Mbps 2 Either 250kbps or 1Mbps
Backup	1	This device will generate network beacons after this number of
Priority		beacons have been missed in a PAN. In an infrastructured
		network, this device will search for a new coordinator (roam)
i -		after this number of missed beacons.
Nnet	2	The number of network ids in the Netlist field.
Netlist	Nnet*4	Each entry in this vector is a valid network id, type (2 byte) pair
		that is acceptable to the host. NOTE that all ones is a broadcast
		Network Id and indicates that any network of the associated type
		is acceptable to this host.
Scan Time	1	Time in 0.1 seconds that device will scan control channels for
		network after connectivity is lost. See below.
Scan Duty	1	After Scan Time of scanning, the radio will be power cycled
Cycle		during scan based on this value. Valid values are as follows:
		0 Radio remains powered on and scanning
		1 Radio is on for one pass through control channels and off a
		cycle
		2 Radio is on for one pass and off for two
		3 Radio is on for one pass and off for three
		4 Radio is on for one pass and off for four
Ninfo	1	Length of information field that is to be sent in Attach request
Info	Ninfo	Attach response info field.

If the rejoin bit is set in the Type field, then the radio will attempt to rejoin the previous network. If it is not set or a rejoin attempt fails, the Netlist is used to find an appropriate network to join. If the Type field indicates either data rate is valid, the radio will alternate between the two rates while awaiting either Init or Beacon frames.

The radio uses the Scan Time and Scan Duty Cycle fields to determine how to recover when network connectivity is lost. Scan Time indicates how long to

continuously scan when connectivity is first lost. Scan Duty Cycle indicates how to scan after Scan Time elapses. Essentially this allows the radio to power cycle its transceiver to aid in managing battery life.

The Join Network Response indicates to the host that one of the acceptable networks has been joined. It is formatted as follows:

Table 15 - The Join Network Response

Field	Length (octets)	Usage
Status	2	Values for this field: 0 Network coordinator accepted request. Other fields in response are valid only in this case 1 Network coordinator node table is full (10 devices) 16-255 Network coordinator rejected with this reason 256 Invalid parameter in Join Network Command
Network Id	2	The network id of joined network.
Туре	2	The type of network joined (same encoding as Initiate Command).
Ninfo	1	Length of Info field.
Info	Ninfo	Any arbitrary information from network initiator.

The Device Management Command provides various device management functions. It is valid to send only to "dumb" devices. It is formatted as follows:

Table 16 - The Device Management Command

Field	Length (octets)	Usage
Address	2	Address of remote device to manage
Function	2	Function to request of remote device. It should be one of the

		following: 0 Request Control of device. 1 Release Control of device.
		2 Force Release of device.3 Set Awake Window Duration.
Duration	2	This is a duration in 0.1 second increments. For command 0, the time the requesting device will hold the station. For command 3, the time this station should remain awake after every Data frame it sends on the radio.

The Device Management Response is generated by the radio after an exchange with the remote device. It is formatted as follows:

Table 17 - The Device Management Response

Field	Length (octets)	Usage
Address	2	Address of remote device.
Function	2	Function requested of remote device.
Status	2	Result of request. It is one of the following: O Successful command. If the command was to request control, then the remote device will not accept data messages from any other device except this host until this host sends a release command. If the command was release, then the remote device is now released. Device already controlled by device whose address is in the next field. Device unknown or not responding. Device is locally managed. Invalid Parameter. No Network
Control Address	2	If the status field is 1, then this is the address of device that currently has control of remote device.

The Diagnostics command is used to perform diagnostic and service functions on the radio. Its format is defined, but its content are implementation specific.

Table 18 - The Diagnostics Command

Field	Length (octets)	Usage
Command	2	The diagnostic command or service request.
Data Length	2	Length of Data field.
Data	Data Length	The information the radio uses to perform the function

The Diagnostics Response is generated by the radio as the result of a Diagnostics request. Only some requests may generate a response.

Table 19 - The Diagnostics Response

Field	Length (octets)	Usage
Command	2	The diagnostic response code.
Data	2	Length of Data field.
Length		
Data	Data Length	The information the radio uses to perform the function

The Set Parms Command is used to set the host interface parameters. It is formatted as follows:

Table 20 - Set Parms Command

Field	Length (octets)	Usage
Interface bps	2	The bit rate to use for host interface. This must be one of 19200, 38400, 57600 or 115200

Upon receipt of this command, the radio will change its host interface parameters and then assert RI.

The Data Transmit Status command from the radio is used to indicate result of last data command from the host. A Data Transmit Status will be generated by the radio for every Data request from the host. It is formatted as follows.

Table 21 - Data Transmit Status

Field	Length (octets)	Usage
Status	1	The result of the Data request. It is one of: 0 Successful transmission 1 Could not send, no network 2 Could not send, device unreachable (retries used up) 3 Could not send, device unknown 4 Could not send, no buffer 5 Could not send, length error
Sequence	1	Sequence number of Data request from host. This can be used to match up responses with requests.
Address	2	Destination address of Data Request

The Version Request command is used to request version information from the radio module. There is no data associated with this request.

The Version response is generated by the radio upon receipt of a version request.

It is formatted as follows.

Table 22 - Version Response

Field	Length (octets)	Usage
MaxLength	2	Maximum length of Data field in data command.
Nmessage	2	Maximum number of outstanding messages allowed.
Version	4	Version of radio code. The high two bytes are the version and the low 2 bytes are the revision.
Ninfo	1	Length of Info field.
Info	Ninfo	Text string indicated information about the radio such as date of revision, etc.

The Network Management command is used by the host to manage network operations and by the radio to indicate network management requests from the network.

Table 23 - Network Management Command

Field	Length	Usage
	(octets)	
Command or Response	2	Responses have the high bit set. Each command requires a response across the interface. Valid values are as follows: 0 Remove host from network. The radio is removed from the Microlink. If the radio was the network coordinator, the network is terminated. 1 Request device take over the network. This is used to transfer network control from this station to another device. If the destination devices accepts, it becomes the network coordinator. If the other device is "dumb" it will always accept this request. A smart device can reject the request. 2 Request network termination. This is a request from this station to the network coordinator to terminate the network. A "dumb" network coordinator will always accept the request to terminate. 3 Request device list from network coordinator. 4 Request from network coordinator to this station to take over coordination. 5 Temporarily remove host from network. Host may rejoin later. 8000 Device removed from network. 8001 Device will begin beaconing on next hop. 8002 Device cannot take over network. 8003 Request to Terminate accepted. 8004 Request to Terminate rejected. 8005 Device List. 8006 This device is not network coordinator. 8007 Request time-out. FFFF No network
Reason or	2	For commands, this is a reason for the command. For a
Status		response, it is the status. The status must be one of
		those listed above.
Device	4*number	For Device List Response, a list of address:type pairs of
List	of devices	devices in network.

To initiate a Smart Radio interface, the following steps are performed:

- 1. Assert RTS.
- 2. Wait for CTS
- 3. Immediately unassert RTS and send DLE ENQ
- 4. Wait for RI
- 5. Send Version Command
- 6. Wait for Version response to verify correct radio operation and protocol. Save the MaxLength field and Nmessage field from response for use in sending data commands.
- 7. Send Set Parm command to change bit rate to that desired
- 8. Wait for RI
- 9. Radio interface is initialized

To initiate a PAN network:

- Generate Network Id. This could be a random number or a
 calculation on some known different value that the host has
 available (such as a serial number). Make sure it is not all ones.
- 2. Send Initiate Command to the radio. The Power field should normally be set low for PAN and high for infrastructure. In a PAN this will allow only devices very close to this host to receive the Initiate frames. The hop information should be different for any overlapping networks.

5

15

10

15

20

- The radio will respond with an Initiate response indicating the command was accepted.
- 4. For each Join Request that is received by the host, determine the acceptability of the remote device. This could be done simply by looking at the type field, or it could be more complicated based on host knowledge of higher layer protocol. Send a Join Response message to the radio with the correct status.
- Once all required devices have been detected, Send a Start
 Network Command to the radio.

To join a network:

- 1. Generate a list of acceptable Network Ids and types. For joining a PAN, it is likely that the Network Id is all ones (broadcast) and the type is PAN. This will allow the host to join any PAN that physically selects it by proximity. Set the data rate bits in the Type field of the Join Network request. Send the request to the radio.
- Await the Join Network Response. Process Info field if meaningful. Data can now be sent.
- Send Network Management command to get addresses and types
 of other stations in network.
- Await the response and save information for use in generated data messages.

To send data:

- Generate the Data command including awake window information
 (which may be zero). If the host requires that the radio remain
 awake to "immediately" receive a data frame, then the Awake
 Window field of the Data command should be set accordingly.
- Send the message to the radio and increment outstanding Data count.
- If outstanding Data count is less then Nmessage field in version or status response, another data command can be sent.
- For each Data Transmit Status from radio, check status of outstanding message with same sequence number. Process status accordingly. Decrement outstanding Data count.

To transfer network control:

- Generate a Network Management request to transfer control to a specific destination.
- Await the Network Management response of acceptance from that device.
- 3. If device rejects, a request to another device can be tried.

To network initiator rejoining a network:

 Generate an Initiate Command with same network id as that of network to rejoin. Set the high bit of the Type field and send to radio.

5

10

15

If the Initiate Response indicates the device has rejoined (and
possibly resumed network coordination) then process is finished. If
the Response is 0, then continue process as in step 4 of initiating a
network.

Temporary Network:

- 1. If in a network already, issue Network Management command to temporarily be removed from that network. If not, go to step 3.
- 2. Wait for the response indicating removal.
- 3. Generate new network id for temporary network. Set Resync Time to a small number (so the network will quickly dissolve when network initiator exits. The network should be a PAN, power suitable to the application and the Initiate command must indicate that the network is temporary.
- 4. Initiate the network as in steps 3 through 5 of Initiating a PAN.
- 5. Exchange required Data.
- Issue Network Management command to terminate network (i.e. remove network coordinator).
- 7. Wait for response that device is removed.
- 8. If in a previous network, and wishing to rejoin, that network can now be rejoined.

The frequency of the radio is in the 2.4GHz range, selectable on 1.5MHz increments from 2401 to 2483 MHz. This will allow for 50 channels. The radio data

5

15

rates are software controlled and either 1Mbps or 250Kbps. The later can be used if greater range is desirable (as in an Infrastructured Network). The bit framing for the radio is Synchronous HDLC using NRZI encoding. An 80 bit preamble of alternating ones and zeros will be sent for each frame.

The radio supports relatively fast switching times between channels to allow FH Spread Spectrum solutions for noise immunity. Suggested worst case switch times are on the order of 500 microseconds. The transmit power should be no more than 0dbm, and at 5 meters the BER should be no worse than 10⁻⁵.

The following elements of the radio protocol are common to personal LAN and to Infrastructured Networks.

General Frame Format

The framing is HDLC so starting and ending flags delimit the frame.

15

5

10

Table 24 - General Frame Format

Field	Size	Description
DA	16 bits	Destination address
SA	16 bits	Source Address
Network Id	16 bits	Network Id from join response. All ones is broadcast ID.
Sequence	16 bits	Fragment number and sequence number
Reservation	8 bits	Reservation indication. This is the duration in (byte times+7)/8 that the current frame sequence requires to complete. It includes preamble times, frame times and rx/tx switching times.
Ctl	8 bits	Control field. Frame type
Info	0 to 512 bytes	Information, if any
FCS	16 bits	FCS protecting DA through Info inclusive

Ctl Field

The low 4 bits is the frame type which is defined below. The high 4 bits have the following usage:

Table 25 - Ctl Field

Bit	Name	Usage
7	Retry	This frame is a retry. A previous attempt to transmit this frame did not receive a CLR. The sequence field has the same sequence number as the previous attempt.
6	Fragment	This frame is a fragment. The Sequence field contains the fragment number
5	More Data	This station has more data to send to the receiver of this frame
4	Last Fragment	This frame contains the last fragment.

Frame Types are defined below:

Table 26 - Frame Types

Туре	Value(hex)	Usage
Data	0	Data frame.
CLR	1	Acknowledge unicast frames of all types except RFP.
RFP	2	Request For Poll.
Poll	3	Poll Device.
Beacon	4	Network Synchronization Message
Initiate	5	Initiate new PAN
Attach Request	6	Sending device indicates desire to join a network
Attach Response	7	Response from network initiator to device that has sent an Attach Request.
Identify	8	Message sent by network coordinator to determine if destination device is still in sync.
Test	9	Test message.
Device Management	Е	Command or response frame to manage remote device.
Network Management	F	Special network management functions

Address Fields

10

15

20

The DA and SA fields are each 16 bits. Station Addresses are randomly generated by each station. Any randomization algorithm may be used, but it should be sure to generate different values on subsequent generation attempts. All ones is a broadcast address and should not be generated for use as the station address.

Network Id Field

The Network Id field is passed to the radio from the network initiator. All ones is a broadcast id and is not a valid id for a network but can be used to join any network sending a Initiate.

Sequence Field

This field is composed of two sub-fields. The high 4 bits are the fragment number (when the fragment bit is on in the Ctl field) and the low 12 bits are the sequence number of the frame. This number is changed on every frame sent, unless the frame is a retry (the retry bit is set in the Ctl field). For CLR frames, it is copied from the frame to be acknowledged. In all other frames, the number is incremented for each new frame sent.

Frame Check Sequence (FCS)

The FCS algorithm is CCITT CRC-16 as used by HDLC.

Certain channels, control channels, are set aside to be used specifically for synchronization and re-synchronization. The hop sequences will visit these channels more frequently. Several channels are used to prevent a single point of failure based on interference on a single channel.

The medium access rule used is CSMA/CA, that is carrier sense, multiple access

10

15

20

with collision avoidance. All directed frames (except CLRs) require a CLR from the receiver to be transmitted to the sender of the directed frame.

CSMA alone would allow access to the medium as soon as it is sensed to be idle. If multiple devices simultaneously sensed idle and transmitted, there is a "collision" which cannot be detected. To detect these collisions a CLR is expected on all directed frames. This does not "avoid" collision in the first place. To avoid collisions, devices will first sense the medium for a random length of time, and only if the medium is idle for that random time will the device send. Beacon frames sent by the network coordinator will use a random time in the range of 0 to backoff_table[0]/2. All other frames use a range of 0 to backoff_table[0]. This allows beacons a higher priority. Occasionally a collision will still occur. The absence of a CLR will indicate this. It will also sometimes cause delay on sending the frame when there would have been no contention anyway. In any case it will prevent most collisions. Any collision results in a great delay of wasted bandwidth.

Since it is possible (especially in Infrastructured networks) to have hidden stations, a station may receive frames sent only by the recipient of a frame sequence (i.e. POLL and CLR frames) and it may not detect the carrier on the RFP and DATA frames. Frames therefore contain reservation information that indicate to all receiving stations the necessary time duration required for a frame sequence. This allows hidden stations to recognize that the medium is actually busy. Thus such stations will not inadvertently sense the carrier as idle and transmit a frame which interferes with a hidden station's

15

20

frame. Stations are thus required to process reservation information in all frames having the correct Network Id.

A station that has just awakened from power down mode (i.e., the radio receiver has been off), does not have such an assessment of the medium. If such a device desires to send, and if the network is so configured (indicated by a field in Beacon frames), such devices will set their medium reservation information to protect against the longest possible frame. A valid frame received by such a station will set the reservation time to a known value, potentially shortening this duration.

Except when transmitting a CLR or POLL, the medium is first sensed for a carrier signal as defined above before transmitting a frame. If the medium is busy, then the backoff procedure is initiated.

A backoff value is randomly chosen in the range of 0 to backoff_table[retry]. The retry will initially be zero for a frame. The table, backoff_table, is composed of the following values: {65, 130, 260, 520}. Each entry is in system ticks, where each tick is approximately 30.5 microseconds. The backoff timer runs regardless of the state of the medium. However, when a frame is received, the timer is augmented by the reservation indicated in that frame (based on transmit data rate). The value in the frame is designed to protect that frame and any subsequent frame in the sequence. This results in fairer access to the medium because other stations that attempt to transmit later will not have better access probability due to a station continually timing out its backoff count and picking ever larger times to wait. Once the backoff timer goes to zero, the device will transmit its frame.

10

15

20

When frames are unsuccessfully sent, that is a POLL is not received for an RFP or a CLR is not received for a directed frame, the retry value is incremented and if the maximum number of retries has not been exceeded, the backoff procedure is again executed. The station must only transmit 4 successive times on a channel before awaiting another channel (that is why the table only has four entries). If retries must occur on a subsequent channel, the algorithm is reset. Note that if a CLR was sent but not successfully received, a duplicate frame will be sent, with the retry bit set in the control field and the sequence number the same. This will allow duplicate frames to be ignored by the receiver. Though they may be ignored, the CLR must still be sent.

Once the frame has been successfully sent, the backoff procedure is again initiated with a value randomly chosen in the range of 0 to backoff_table[retry]. The value of retry is then set to 0. This will prevent the station from having a higher access probability than other "backed off" stations.

Because the radio is an inherently poor medium, sending very long frames of data is inappropriate. Thus fragmentation may be required. Host data messages larger than the maximum radio frame size will be split into the appropriate number of fragments (from 1 to 15) and then each fragment will be sent with a separate medium access. A receiver will receive each fragment and assemble them into a single Host data message. The receiver may not have available buffers for fragments and can thus use the POLL frame status field to inform the RFP sender to re-transmit from the first fragment. The receiver of successive fragments will remain awake to receive all the fragments. Thus the

15

5

transmitter of the fragments need not indicate them in the RFP window. Only unicast data frames can be fragmented.

The following describes the radio frame formats used. The Data frame is used to exchange host data between radios. Its format is as follows.

Table 27 - Data Frame

Field	Length (octets)	Usage
Awake Window	2	The time in 0.1 seconds that the transmitter will remain awake after completion of frame exchange(unicast data exchanges require a CLR, broadcast do not)
Data	0-512	Data to send

The CLR frame is used to confirm error free reception of Data, Attach Request,
Attach Response and Device Management frames. It has no data field.

The Request For Poll (RFP) frame is used to indicate one of the following:

- 1. The sender has a message for another station and is requesting permission to send that message.
- 2. The sender has a message for every station (broadcast DA).

This frame is usually sent in the RFP window (because the destination station is usually asleep in most cases). If the destination has indicated in a previous data frame that it will remain awake, and a subsequent frame is ready to be sent to that station, the RFP may be sent outside of the RFP window.

If sent in the RFP window, the duration field should only protect the POLL. If sent outside the RFP window, the duration should protect.

69

The POLL frame is sent in response to a unicast RFP. It indicates that the sender

allows the receiver to send a subsequent message. Its format is as follows:

Table 28 - POLL Frame

Field	Length (octets)	Usage
Status	8	Status in response to RFP. It is one of the following: 0 RFP transmitter may send message. 1 RFP transmitter can not send message. 2 RFP fragment/sequence error. Sender should resend from first fragment.

The Beacon frame is used by network coordinator to keep stations in synchronization. Beacon frames are always broadcast on the network. The Beacon format is as follows.

Table 29 - Beacon Frame

Field	Length	Usage
	(octets)	
Network Time Stamp	2	This is the timestamp of the beacon and is used to synchronize receivers clocks. It is in network ticks(approximately 30.5 microseconds).
Next Beacon Time and Type field		The high four bits are used as follows: Bit(s) Usage 7
Beacon Interval	1	Beacon interval. Time is in units of hop dwells.
Beacon Count RFP Window	2	Count of beacons, modulo 65536. This can aid in synchronizing clocks that are fairly imprecise. RFP Window time in network ticks.
Device Resync Time	2	Number of beacons that can be missed before entering Resync mode. From Start Network Command.
Dwell Time	2	Time in each dwell in network ticks.
Hop Sequence	1	Hop sequence being used by radio. (table in use)
Hop Channel	1	Current hop. (entry in table) Actual channel that beacon is transmitted on. Used because of possibility of hearing adjacent channel.

It is most likely that dwell time and beacon interval are the same. There is little value in having beacon intervals longer than the dwell time unless a great deal of interference is suspected. This will allow for better frequency diversity recovery in bad channels.

The Initiate frame is used to establish a network. Devices receiving this will determine if the network parameters are acceptable and request to join by sending a Attach Request Frame. This frame is always broadcast. Its format is as follows.

Table 30 - Initiate Frame

Field	Length (octets)	Usage
Туре	1	The type of network. Valid types are as follows: 0 PAN 1 Infrastructure Network
Info	0-16	Information from the Initiate Network Host Interface command

10

5

The Attach Request frame is generated by a station when it receives an Initiate frame from a network that it wishes to join. It is broadcast in response to an Initiate frame (to the network id indicated by that frame). It may be sent as a directed frame to keep network connectivity. Its format is as follows.

Table 31 - Attach Request Frame

Field	Length (octets)	Usage			
Address	2	The address of sending device.			
Type	2	The type field from the radio adapter selection device.			
Info	0-16	Information from Host Join Request command, if any. If device uses a dumb host interface, the radio serial number (4 bytes) is sent in this field.			

The Attach Response frame is used to indicate acceptability of device to network initiator. Its format is as follows.

Table 32 - Attach Response Frame

Field	Length (octets)	Usage
Status	1	The status of Attach Request. Valid values are as follows: O Accepted. Address Conflict, choose another address and try again Host rejected. The next byte has the reason Network coordinator rejected because its node table is full
Reason	1	If status is 2, then this is the host reason code for rejecting join.

The Identify frame is used to determine if the destination is still in sync. It has no data field and a CLR is all that is required for confirmation. This frame must be sent in the RFP window as it will take the same amount of time in that window to send the Identify Frame and receive a CLR as to send an RFP and receive a POLL. In the later case, the Identify frame would then need to be sent after the RFP window anyway using

5

even more bandwidth. This frame must be unicast.

The Test Frame is used to test network connectivity. The receiver of such a frame will simply send it back to the sender. A special case exists, where a TEST is received with an all ones Network ID. This is the only case where such a frame is valid. The receiver will send back the frame. The Info field can contain any data.

The Device Management frame is used to acquire/release control of a remote device, usually one having a "dumb" host interface. This is usually best left to a higher layer protocol, but for dumb devices, that is not possible. The format of a request is as follows.

Table 33 - Device Management Request Frame

Field	Length (octets)	Usage
Туре	1	This must be zero to indicate a request to manage.
Command	1	Valid values are as follows: 0 Request sole control of device 1 Release control of device 2 Force release of device 3 Set Awake Duration
Duration	2	This is a duration in 0.1 second increments. For command 0 it is the max. time the device will remain locked. For command 3 it is the duration this station will remain awake after sending a Data frame.

10

The format of a response is as follows:

Table 34 - Device Management Response Frame

Field	Length (octets)	Usage	
Туре	1	This must be a one to indicate response to a management request.	
Command	1	Command for which this is response. See table above for values.	
Status	1	Valid values are as follows: 0 request accepted 1 request rejected because another device already has control. That device's address is in the next field. 2 device is locally managed	
Address	2	Address of device that already controls remote device	

The Network Management frame is used to perform special network management operations such as transferring network coordination and network termination. There are request and response frames. The request frame is as follows.

Table 35 - Network Management Request Frame

Field	Length (octets)	Usage
Туре	1	This must be zero to indicate a request to manage.
Command	1	Valid values are as follows: 0 Transfer network coordination request. 1 Network termination request. Only a station acting as network coordinator can accept this request. 2 Device exiting network. 3 Device list request.
Reason	2	Reason for request copied from Network Management Host interface command.
Device Addresses	2	Used with Transfer network coordination request to transfer list of know devices in network (including self).

10

15

The format of a response is as follows:.

Table 36 - Network Management Response Frame

Field	Length (octets)	Usage
Туре	1	This must be a one to indicate response to a management request.
Command	1	Command for which this is response. See table above for values.
Status	1	Valid values are as follows: 0 request accepted. 1 request rejected.
Device List	2*number of network devices	If the command is Device list request, this is a list of address:type pairs of all stations in network and their type value as coded in the attach request.

Upon successful transfer of the network, the receiving device will begin beaconing and will send a reset beacon. That station also will need to set its identify procedure up to start from its initial state to confirm that all devices remain in synchronization based on the stations clock.

Network Synchronization

The network coordinator will keep the network synchronized by periodically transmitting Beacon frames. These frames include information about network time, dwell time and next beacon time to allow a receiver to set its clock to that in the beacon and then sleep until the next beacon with the receiver off to save power. Since a system clock with an accuracy of greater than 50 parts per million is unreasonable to assume, the beacon also includes a count of beacons that have been sent to allow the receiver to occasionally take snapshots of its own clock and then some large number of beacons

10

15

20

intervals later, sample the beacon count again and determine the station clock's relative accuracy versus the network clock. Periodic corrections can then be applied.

The network clock is in 1/32768 seconds or approximately 30.5 microsecond ticks. This allows for a low power requirement to maintain the clock.

The Beacon frame contains hop information, the current physical channel, the hop table in use, the table entry and the dwell interval. The time remaining in the current dwell period is calculated as follows:

(dwell interval) - (current system tick) MOD (dwell interval)

Initial synchronization in Infrastructured networks is accomplished by setting the unsynchronized station's receiver to a control channel and awaiting a beacon with the Infrastructured bit set and a matching Network Id in the beacon frame.

Detection of Loss of Synchronization

A PAN has two levels of synchronization support. When the number of beacons specified in a stations backup priority (from Join Network Command) are missed, the station will generate backup beacons. It will continue to adjust its clock to what the network coordinator would have as its clock. This allows for PANs to be temporarily split. If the station does not receive a beacon from the network coordinator after the number of beacon intervals specified in the Device Resync Time (from a beacon) have elapsed, then the station is lost, and must enter the recovery procedure.

An infrastructured network does not support splitting. The backup priority field is thus used for detection of sync loss. If backup priority beacon intervals pass without a beacon from the network coordinator, then the station is out of sync and must enter the

10

15

20

recovery procedure.

Power Management

In order to reduce power consumption, a station must turn off its radio receiver (and perhaps other hardware). This is known as sleep mode. It may do so under the following conditions:

- 1. It has not indicated to any other station via a Data frame that it will remain awake.
- 2. It is not backing off after transmitting.
- 3. It does not have a frame to transmit to a known awake station.
- 4. It did not receive an RFP in the most recent RFP Window.
- 5. It is not "lost". If it is lost it must remain awake on some control channel.

Following beacons all stations are obliged to be awake for a period of time called an RFP window. During this window, stations that have messages to send will generate Request For Poll (RFP) messages. Any station receiving an RFP must remain awake until it has correctly received the message from the station sending the RFP. The length of the RFP window is indicated in the beacon. The window size is based on the expected number of devices that may transmit (a parameter in the Start Network Command). Because it is likely that more than one device will need to send an RFP in the RFP window, each station will initiate the backoff procedure before sending an RFP. It is assumed that twice this expected number is a good value to use for the upper range in the randomization for the backoff algorithm. It is further assumed that twice this number is a good choice for the maximum allowed RFPs in the window. Once the window time has

10

15

passed, no further RFPs are allowed to be transmitted.

If the frame sent cannot be successfully delivered in the current hop, another RFP must be sent in the next RFP window.

The window time is based on the Start Network command Transmit Devices field and is calculated as follows:

RFP Window Time = 2 * Transmit Devices *

(Avg Backoff + RX/TX time + RFP message duration time + RX/TX time + POLL message duration time)

RFP message duration = 14 bytes * 8 + 80 = 192 microseconds (approximately)

POLL message duration time = 15 * 8 + 80 = 200 microseconds

Avg RFP Backoff time = 65 * 30.5 microseconds / 2 = 990 microseconds

Since some clock jitter is to be expected, a station will actually turn on its receiver about 1msec early on the expected channel and await the beacon. Since it must then receive a beacon and then wait the RFP window time, the current required to maintain the link can be calculated as follows:

Net Maintenance Current =

Receiver Current * (Channel Select time + 1msec + Avg Backoff/2 + RX/TX time + Beacon Frame Time + RFP window) / Beacon Interval + sleep current

20

Beacon Frame Time = 31 * 8 + 80 = 328 microseconds (approximately)

10

15

20

As an example of this, assume Receiver Current of 100mA, a channel select time of .5msec, a beacon interval of one dwell period, a dwell period of 250msec, a Transmit Devices value of 2 and a sleep current of 2mA. The Net maintenance current is as follows:

RFP window

When sending to a station that is assessed as in Awake Mode, an RFP-POLL-DATA-CLR sequence can be sent anytime except in the RFP Window. If during the first dwell time that this is attempted, the message can not be successfully transmitted, then the RFP Window method described above must be used to deliver the message.

Network Re-Synchronization

Since it is possible for a PAN to be divided when the user carries some equipment but not all, it is necessary to provide a mechanism to re-synchronize those devices which have lost synchronization because they no longer see beacons. The network coordinator will assess all devices in the network by using one of two mechanisms.

By monitoring RFP activity and its own traffic to other stations, it can determine

10

15

20

which stations have recently been connected.

For those stations without recent demonstration of connectivity (case 1), the network coordinator will generate Identify frames.

For devices determined to be "lost", a search and rescue mission will be attempted at the rate requested in the Host Interface Start Network command. After the requested number of beacons has passed, the network coordinator will wait for an indication of no activity involving it (again based on RFP frames and its own transmission status), and then tune to each of the control channels in succession and transmit beacon frames.

Lost devices will wait on one of the control channels and when they receive the beacon, they will re-sync to the information in the beacon and thus be recovered. With the periodic adjustment of a station's clock as defined above, a reasonable period will be provided over which synchronization can be maintained. Each beacon advertises the Device Resync Time. Thus a station that has not seen beacons for this period will start progressing very slowly through the control channels, waiting for beacons (as discussed above). Once it sees a beacon it will be back in sync. This progression requires the receiver to be on thus causing a large demand on power. The Join Network Command specifies an initial on time and a subsequent power duty cycle to allow for extended battery life. Once the initial on time passes (during which the station is scanning channels at slow rate), the radio will perform a single scan of the control channels followed by a period during which the receiver is off. This period is a multiple of the time required for a single scan and can be a 50%, 33%, 25% or 20% duty cycle. This will increase the re-acquisition time.

15

20

At this same time the station will become receptive to new Initiate frames that match the correct criteria as designated in the Host Interface Join Network Request. If it receives either a Initiate frame or a Beacon Frame, it will proceed accordingly. This will allow devices in a recharge rack overnight to automatically be ready for a new network the following morning. The search and rescue operations may also be employed to establish a PAN. A network may employ either or both search and rescue and proximal formation operations to establish a plurality of PANs.

Infrastructured Network Re-Synchronization

When an station in an infrastructured network looses synchronization (is lost), it will immediately search for a new network matching the parms from the Join Network Command. The station will start progressing very slowly through the control channels, attempting to detect a network matching the specified parameters. This progression requires the receiver to be on thus causing a large demand on power. The Join Network Command specifies an initial on time and a subsequent power duty cycle to allow for extended battery life. Once the initial on time passes (during which the station is scanning channels at a slow rate), the radio will perform a single scan of the control channels followed by a period during which the receiver is off. This period is a multiple of the time required for a single scan and can be a 50%, 33%, 25% or 20% duty cycle. This will increase the time required to find a network.

Reset Network Recovery

If a station is reset (i.e. the battery is replaced), it must re-acquire the network.

The network itself cannot determine that the device is missing for the duration of the Device Resync Time. This can be quite long. This is resolved by the hop sequences incorporating the control channels in the sequence more frequently than other channels. Thus a device that is "lost" can tune its receiver to a control channel and await beacons.

If the lost device is the network coordinator (the station normally transmitting beacons), then after a short number of missing beacons, another device will send backup beacons.

Thus even the "lost" network coordinator will be able to recover the network and resume coordination.

The time to recover is on average as follows:

number of control channels * interval between using control channels/2

Thus if there are four control channels visited every fifth hop and the hop duration is 250ms, then on average the recovery time is 2.5s.

Radio Finite State Machines (FSM)

This section defines the radio finite state machines and their operation. These FSMs are as follows:

- 1. Initial FSM
- 2. Initiate FSM
- 3. Network Management
- 4. Network Coordination FSM
- 5. Station FSM
- 6. Transmit FSM
- 7. Receive FSM

20

The inputs possible for the FSMs are the host interface commands and radio frames discussed in previous sections and various time-outs. The timers are as follows.

Table 37 - FSM Timers

Timer	Usage
NextBeacon	Time until next Beacon Frame
NextHop	Time until hop to next channel
RFPWindow	Time until RFP Window expires
Backoff	Current value of backoff counter. Stops running if Reservation Timers is running.
Reservation	Current reservation time for any outstanding receive sequence.
InSync	Maximum time station can maintain synchronization without Beacons. This will improve as more beacons are received.
NMTimer	Timer used to terminate states in network management FSM.
CLRTimer	Timer used to detect failed frame sequences such as RFP-POLL. (i.e. no POLL)

Table 37 - FSM Variables

Other variables kept on a station basis are as follows:

Variable	Non Volatile	Usage
network id	yes	the network id of Microlink that station is attached to.
Station address	yes	the address used by the station in the Microlink.
Station table	yes	addresses and types of every station in network.
Dwell time	no	hop dwell time.
Beacon interval	no	number of hop periods in a beacon interval.
Hop table	yes	table of hop sequences.
Current channel	no	current channel radio is tuned to.
Hop entry	no	current entry in hop table.
Hop sequence	no	current hop sequence.
Initiator	yes	did station initiate network.
Transferred	yes	did station transfer network.

10

Coordinator	yes	is station network coordinator.	
Station	no	queue of messages from host. Each entry has a retry	
queue		count which is zeroed upon first entry into queue.	
		Messages will be enqueued again when a chan retry	
		limit is exceeded. Message requires use of RFP	
		Window.	
Retry	no	retry count of current transmit message.	
Chan retry	no	retry count of current transmit message on current	
		channel.	
Ready queue	no	queue of messages to hold until after RFP Window.	
Transmit	no	queue of messages that transmit state machine will	
queue		send.	
Receive	no	queue of messages received by receive state machine.	
queue			
SAR flag	, no	when flag is set:	
		if network coordinator, some stations are out of	
		sync. if not, this station is out of sync.	
test alive	no	vector of counter to track Device Resync Time. One	
		per station in network	
awake time	no	value set in Data Command from host. Radio must	
		stay in receive mode if non-zero	

In the following description, unspecified Inputs are assumed to be ignored. Only the first matched Input in a State is executed. A '*' in the State field means this Input results in the same transition for all States. In the Next State column, a number implies a State in the current FSM and a number:name implies a State in the named FSM. A blank Next State field implies that there is no transition. When a transfer to a named FSM occurs, the current FSM is terminated. When frames are specified as Input, they are assumed to be removed from the receive queue.

The Initial FSM is entered upon module reset. The Join Request parms are set to the broadcast network id and a type of PAN and a Data Rate of any rate. The network management FSM, receive FSM and transmit FSM run asynchronously to other FSMs.

A queue from receive and to transmit are assumed. There is also a station queue which

holds frames from the host to transmit that may have arrived before an RFP window.

It is assumed that Host Data frames, Network Management frames or Device Management frames are preprocessed as follows:

- 1. If the station is not in the Station FSM or the Network Coordinator FSM,
- 5 then an error is sent to the host, No Network.
 - 2. If the destination is asleep, the frame is put on the station queue
 - 3. If the destination is awake and network is not in an RFP Window, the frame is put on the transmit queue.
 - 4. If the destination is awake and network is in an RFP Window, the frame is put on the ready queue.

Table 38 - Initial FSM

State	Input	Action	Next State
0	Initiate Network (PAN) and not re-establish	Build Initiate Frame from command and enqueue to transmit. Set NextBeacon to .33 seconds. Send Initiate Network Response	0:Initiate PAN
0	Initiate Network (infrastructured) and not re- establish	Build Beacon with required parms and enqueue to transmit. Set Test Alive count in all stations 1. NextHop=dwell time.	0:Network Coordination
0	Initiate Network and re-establish	Tune to random control chan. InSync=time on control channel.	1
0	Initiate Frame with matching Network Id	Build Attach Request (from default or Join Network Request) and enqueue to transmit	3
0	Join Network Request and not re-establish	Save parms for Attach Request	0
0	Join Network Request and re-establish	Save parms for Attach Request. Tune to random control chan. Set InSync timer for time on control	2

		T	
		chan.	
1	Beacon for old	Save parms for next hop and beacon	0:Network
	network id	time.	Coordinator
		Test Alive=1 for all stations. Send	
		Initiate Network Response	
1	InSync=0 and	Tune to next control chan.	1
	total time to re-	InSync=time on control chan.	
	establish not 0	. •	
1	InSync=0	Build Initiate Frame from command	0:Initiate
	'	and enqueue to transmit.	PAN
2	Beacon for old	Save synchronization and hop	0:Station
	network id	information.	
		NextBeacon=Beacon time.	
		NextHop=dwell time.	ł
		InSync=5s.	
		Send Join Network Response to host.	
2	InSync=0 and	Tune to next control chan.	2
	total time to re-	InSync=time on control chan.	
_	establish not 0		
2	InSync=0		0
3	Attach		4
	Response	·	
	Frame, status		
	accepted		
4	Beacon	Save synchronization and hop	0:Station
		information.	
		NextBeacon=Beacon time.	
		NextHop=dwell time.	
		InSync=5s.	
		Send Join Network Response to host.	

Table 39 - Initiate PAN FSM

State	Input	Action	Next State
0	NextBeacon=0	Build Initiate Frame from command and enqueue to transmit. Set NextBeacon to .33 seconds	0
0	Attach Request, not a duplicate address	Send Join Request to Host	0

0	Attach Request, duplicate address	Build Join Response with status of failure, duplicate address. Transmit Frame	0
0	Join Response	Build Attach Response with status indicated by Host. If status is acceptable, save device in network table.	0
0	Start Request	Build Beacon with required parms and enqueue to transmit. Set Test Alive count in all stations 1. NextHop=dwell time.	0:Network Coordinati on
0	Initiate Request	Build Initiate frame and enqueue to transmit	0


Network Management FSM

In this FSM, the following abbreviations are used.

- NC means network coordinator
- NMF means a network management frame.
 - NMC means a network management request/response from host.

Table 40 - Network Management FSM

State	Input	Action	Next State
*	Nmtimer=0	Send NMC response to host, type request time-out.	0
*	NMC Remove Device from network and not NC	evice from network(broadcast) to transmit queue. Set NMtimer. Send Device removed from	
*	(NMC Remove Host or NMC Terminate Network) and NC	Enqueue NMF of type terminate network to transmit queue. Set NMtimer. Send NMC response to host. Terminate network coordination FSM and reset to initial FSM	0
*	NMC Request	Send NMC Response 8006 to host	

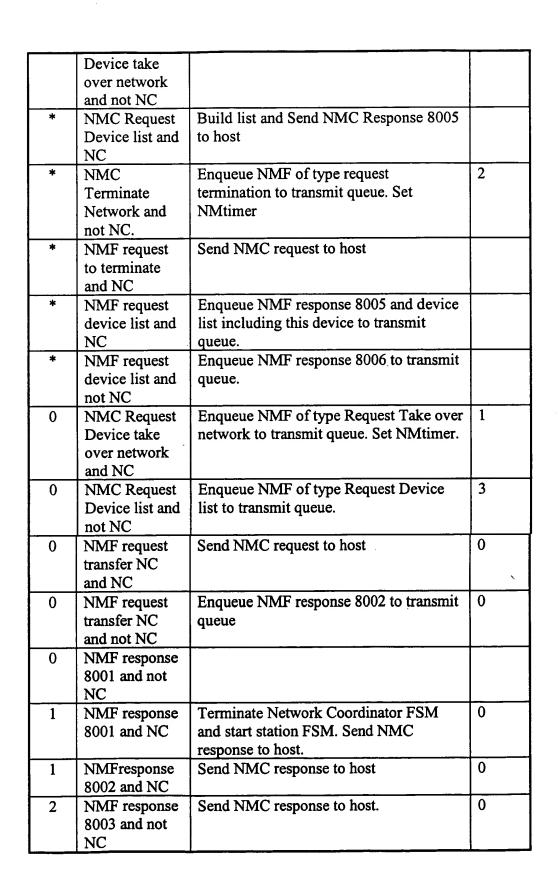

10

2	NMF response 8004 and not NC	Send NMC response to host	0
3	NMF response 8005 and not NC	copy device list and send NMC response to host	0
4	NMC response to transfer request status 8001	Enqueue NMF frame to transmit queue. Terminate station FSM. Init Network Coordinator FSM to state 0.	0
4	NMC response to transfer request status 8002	Enqueue NMF frame to transmit queue.	0

Network Coordination FSM

The Identify Procedure will check for all stations that this station has not detected traffic from within the Test Alive Count (number of beacons). It will build a list of stations to send Identify messages to and put them on the station queue. If several attempts to Identify a station fail, the SAR (search and rescue) flag is set. Receiving CLR or RFPs from a station will count as detected traffic. Note that after Start Request is received, the Test Alive variable is set to the 1. This will cause the network coordinator to immediately test for stations in the net on the first hop. This will guarantee that all stations in the network are together. Once it is first determined that all devices have synchronized, a Start Network Response is sent to the host.

Table 41 - Network Coordination FSM

State	Input	Action	Next State
0		Hop to next channel. Reset NextHop and	1
	NextBeacon=0	NextBeacon to correct values. Build	

		Beacon and transmit. Execute	
		IdentifyProcedure.	
	1	If station queue not empty, transfer to	
		transmit queue, indicating RFP in RFP	
		Window required. Set RFPWindow	
		timer.	
0	NextHop=0	Hop to next channel. Reset NextHop	
1	RFP Frame	Save source address and mark related	0
		station entry as having a message for this	
		station.	
1	RFPWindow=	copy ready queue to transmit queue.	2
	0 and (ready		
	queue not		
	empty or RFPs		
ļ	received)		:
1	RFPWindow=	-	0
	0 and awake		
	window not 0		
1	RFPWindow=	Tune to first control channel and send	3
	0 and SAR	Beacon	
1	RFPWindow=	Enter Sleep mode	0
,	0	_	
2	Attach	Send Join Request to Host	2
	Request, not a	•	
	duplicate]
	address.		
	This station is		
	coordinator.		
	Network is		
	infrastructured		
2	Attach	Build Join Response with status of	2
	Request,	failure, duplicate address. Transmit	
	duplicate	Frame	
	address		
2	Join Response	Build Attach Response with status	2
		indicated by Host. If status is acceptable,	_
		save device in network table. Transmit	
		Frame	
2	Data Frame	Send Data Command to Host	2
_	and more		
	expected		
	frames		
2	Data Frame, no	Send Data Command to Host	2
_	more expected	Till Daim Collingia to 1100t	_
	more empered	<u> </u>	

10

	frames, and not all transmitted		
2	All received, All transmitted and awake window not 0	·	0
2	All received, All transmitted and SAR	Tune to first control channel and send SAR beacon	3
2	All received, All transmitted	Enter Sleep mode	0
3	Beacon Transmit Done and more control channels	Tune to next control channel and send Beacon	3
3	Beacon Transmit done and no more control channels	Enter Sleep mode	0

Station FSM

The AdjustClock procedure will sample beacons over a long time period (on the order of 10s of seconds) and determine the delta between the network coordinators clock (which is the network clock) and this stations clock. It will adjust the station clock in the absence of beacons.

The ModifyClock procedure will determine if the network clock in this station should be modified based on the calculations of AdjustClock. It also will set SAR if it is determined that sync can no longer be maintained by checking the InSync timer.

Table 42 - Station FSM

State	Input	Action	Next State
0	NextBeacon=0	Hop to next channel, Set NextBeacon and	1
		NextHop to correct values. If station	

		queue not empty, transfer to transmit queue, indicating RFP in RFP Window required. Execute ModifyClock	
0	NextHop=0	Hop to next channel. Set NextHop to correct value.	1
1	Beacon Frame (not backup beacon)	Set Network Clock and other parameters. Execute AdjustClock.	0
1	RFP Frame	Save source address and mark related station entry as having a message for this station.	0
1	RFPWindow= 0 and (ready queue not empty or RFPs received)	copy ready queue to transmit queue.	2
1	RFPWindow= 0 and awake window not 0		0
1	RFPWindow= 0 and SAR	Tune to first control channel and send Beacon	3
1	RFPWindow=	Enter Sleep mode	0
2	Data Frame and more expected frames	Send Data Command to Host	2
2	Data Frame, no more expected frames, and not all transmitted	Send Data Command to Host	2
2	All received, All transmitted and awake window not 0		0
2	All received, All transmitted and SAR	Tune to first control channel.	3
2	All received, All transmitted	Enter Sleep mode	0
3	Beacon	Set Network Clock and other parameters. Execute AdjustClock.	1

Transmit Frame FSM

This FSM does not illustrate fragmentation. The inputs are either a frame at the head of the transmit queue, the backoff timer or the CLRTimer. For simplification, frames remain at the head of the queue until acted upon by an Action.

Table 43 - Station FSM

State	Input	Action	Next State
0	Frame in	if Beacon then backoff =	1
	transmit queue	backoff_table[0]/2	
		else backoff = backoff_table[0]	
1	backoff=0.	Transmit frame. remove from queue.	0
	medium is idle.	·	
	head of queue		
	is Beacon.		
1	backoff=0.	Transmit frame. remove from queue.	5
	medium is idle.	Backoff=backoff_table[chan retry]	
	head of queue		
	is broadcast.		
1	backoff=0.	transmit RFP on radio. Set CLRTimer.	2
	medium is idle.		
	In RFP		
	window.		1
1	backoff=0.	Transmit RFP on radio. Set CLRTimer.	3
	medium is idle		
	. RFP required.		ľ
1	backoff=0.	Transmit frame on radio. Set CLRTimer	4
	medium is idle.		
1	backoff=0.	Delete head of transmit queue. send Data	0
	retries used up.	Transmit status to Host.	
1	backoff=0.	Retry = $retry + 1$.	5
	chan retries not	, ,	
	used up.	backoff = backoff_table[chan retry]	
1	backoff=0.	put frame back on station queue and save	0
	chan retries	retry count	
	used up.		
2	POLL	put frame on ready queue	0
	received.		
2	CLRTimer=0.	Delete head of queue and send Data	5
	retries used up	Transmit status to Host.	
	•	Backoff = backoff_table[chan retry]	
2	CLRTimer=0.	Retry=retry+1. put frame back on station	0
		queue and save retry count	
3	POLL	Transmit frame at head of transmit	4
-	received.	queue. set CLRTimer.	
3	CLRTimer=0.	Delete head of queue and send Data	5
	retries used up.	Transmit status to Host.	
	Tanton andra ab.	Backoff = backoff table[chan retry]	1

3	CLRTimer=0. chan retries used up	retry=retry+1 put frame back on station queue and save retry count	0
3	CLRTimer=0.	Retry=retry+1 chan retry=chan retry+1 backoff=backoff table[chan retry]	1
4	CLR received.	Delete head of queue. send Data Transmit status to Host. Backoff=backoff table[chan retry]	5
4	CLRTimer=0. retries used up.	Delete frame and send Data Transmit status to Host. Backoff=backoff table[chan retry]	0
4	CLRTimer=0.	Retry=retry+1 chan retry=chan retry+1 backoff=backoff_table[chan retry]	1
5	backoff=0.	-	0

Receive Frame FSM

Every received frame will set the Reservation Timer by the reservation within it. The reservation is assumed to be from the beginning of the frame. It is possible that this value may be used and then the frame has an invalid FCS. In that case it is optional to honor the reservation value. Only frames with good FCS checks and a Network Id matching the station's network id are processed.

This FSM does not illustrate the usage of fragmentation.

10



State	Input	Action	Next State
0	CLR to this	Pass to transmit FSM.	0
	station		
0	POLL to	Pass to transmit FSM	0
	this station		
0	RFP to this	Enqueue frame. Transmit POLL on	0
·	station	radio.	
0	Broadcast	Enqueue frame.	0
	RFP		
0	Unicast	Enqueue frame. Transmit CLR on	0
	Frame to	radio.	
	this station		
0	Broadcast	Enqueue frame.	0
	Frame		
0	Frame to	if this station is network	0
	other	coordinator, indicate that frame's	
	station	source station has had activity	

The enclosed Appendix A entitled "Hardware Specification" provides details regarding the functionality and construction of a radio module built in accordance with the present invention. Appendix A is hereby incorporated herein in its entirety and made part of this specification.

Moreover, the scope of the present invention is intended to cover all variations and substitutions which are and which may become apparent from the illustrative embodiments of the present invention that is provided above, and the scope of the invention should be extended to the claimed invention and its equivalents. Finally, it is to be understood that many variations and modifications may be effected without departing from the scope of the present disclosure.

APPENDIX A

Intermed

A UNOVA Company

Relcase Date: 04/28/1998	Documentation Type and Subject:	Documentation No.: 565-002-050
Authors: Tom Schuster	HARDWARE PERFORMANCE SPECIFICATION	Page: 1 of 24
Authorization: Pat Kinney	Wireless Personal Arca Network	Revision Level: B 6/12/98

CETEZO.BZETEO

Revision	Change	Date	Author
A	Initial Release	4/28/98	Tom Schuster
В	Hop tables, country codes	6/12/98	Tom Schuster

The WPAN module will function as an RF modem. The implementation of this module will consist of an RF transceiver, a digital controller ASIC and the antenna. The architecture of the RF transceiver is a single conversion receiver and a direct launch transmitter. The architecture was chosen for its simplicity and ease of implementation which both translate to lower cost. The WPAN module includes all radio control, protocol implementation and host interface. The WPAN protocol is described in document 565-002-051.

The final phase of the program will yield an overall module package of approximately 1.0 X 1.5 X 0.3 inches. The WPAN will be integrated into portable computers, printers and other related devices.

Since the WPAN radio is to be installed in several devices, placement of the device can drastically affect antenna efficiency. The hope is that the antenna will be the same on all the hosts, although mounting of the radio module may require different designs.

The design of the WPAN and this specification are intended to address the requirements imposed by the United States Federal Communications Commission (FCC) Code of Federal Regulations (CFR) Title 47 Part 15.249 and the European Telecommunications Standards Institute ETSI 300-328. Operation in other countries, governed by different regulations may require specification changes and shall be agreed upon at a later date.

2.0 ELECTRICAL REQUIREMENTS

2.1 Power Supply

2.1.1 Supply Voltage:

The Phase 1, release 1 and release 2 WPAN radio modules shall be supplied with a voltage between 4.0V and 6V. The supplied voltage is linearly regulated down to -13.3V and +3.6V on board to power the radio components and the digital components.

The Phase 1-release 1 module has 128K bytes of flash memory. The memory can be reprogrammed on board and in system. For reflashing of the memory the radio module must be supplied 12V +0.3V, -0.6V. It is assumed that the reflashing takes place in a service center. The ambient temperature should be 30° C or less for reflashing.

2.1.2 Maximum Supply Current

The WPAN module has several operational states: transmit, receive, standby, sleep, and off. Current consumption specifications for the five states is shown below. Transmit and receive states are used for communication between radios. Standby state is the ASIC and processor operational, the radio is turn off. Standby state is used in dumb mode when the host does not control RTS. The WPAN module enters sleep mode between beacons. The beacon timer and oscillator are the only operating circuit during sleep mode.

It should be noted that the host does not directly control any of the power states of the module. The host will indirectly control the module by notifying the radio of a pending message, which will wake up the radio. All sequencing of the states of the radio is handled in the protocol.

State	Current @ 3.3/3.6 V
Transmit	≤ 100 mA
Receive	≤ 100 mA
Standby	< 40 mA
Sleep	≤ 2 mA
Off	< 100 μA

2.2 Interface

2.2.1 RF I/O Connector

The Phase 1 release 1 and release 2 radio modules intended for the SaherTwo'th application do not have an RF connector. For the scanner the antenna is connected with a spring finger and for the base the RG 178 cable is directly soldered to the board.

2.2,2 Host Interface

The radio to host interface shall be through a flexible circuit board from the host to the WPAN module. The connector is a 1mm spacing flexible circuit connector. The pinout is below. The signals are 3.3 V CMOS levels. If required by the host, RS-232 conversion must be done external to the WPAN. The signals listed in the table below will be available on the host

Confidential

565-002-050 Rev A

connector. It should be noted that all hosts may not, and do not have to, make use of all the available signals. Use of the signals is outlined in the host protocol document. The RESETL pin is to be used for intelligent hosts only and will have a pull up resistor on the WPAN module to prevent a noise induced reset.

Pia	Pin	Description	Comments	
i	TXD	Data to transmit out radio - input	Idle high, when active "1" is high "0" is low	
2	RXD	Data received by radio - output	Idle high, when active "1" is high "0" is low	
3,4	GND	Ground		
5,6	Vin	+3.6 V to 6 V		
7	RTS	Request to Send-input	Asserted = HIGH	
8	CTS	Clear to Send-output	Asserted = HIGH	
9	RID	Ring Indicator-output	Asserted = HIGH	
10	DSK	Data Set Ready-output	Asserted = HIGH	
11	RESETL	Input	Asserted = LOW	
12	+3.3V	Regulated 3.3V to Host output	can be used for 5V to 3.3V logic level converters - 10 mA max	

NOTE: There is no current limit protection of the 3.3V supply on pin 12. It is left to the host design to insure a load of less than 10 mA.

Host interface signals are directly connected to the ASIC. The logic levels specified by the Hitachi design guide are below:

Parameter	Minimum	Maximum	Conditions
V _{IL} , Low level input voltage	VSS - 0.3 V	0.2 X VDD	Guaranteed Input Low Voltage
V _{IH} , High-level input voltage	0.7 X VDD	VDD + 0.3V	Guaranteed Input High Voltage
V _{OL} , Low-level output voltage		0.4 V	T _{OL} =<12 mA
V _{OH} , High-level output voltage	VDD-0.5V 2.4 V		I _{OH} , <=100 цА I _{OH} , < -12 mA

EVE LOVETOR

3.0 OPERATIONAL CHARACTERISTICS

3.1 General

The RF transceiver architecture is a single down conversion receiver and a direct launch transmitter. The block diagram of the RF transceiver is shown in Figure 1. In the receive mode the PLL is programmed to 110.592 MHz below the desired channel. The input to the antenna is filtered by a bandpass filter, routed through a T/R switch, amplified and down converted to an IF frequency of 110.592 MHz. The IF signal is hard limited and baseband data is recovered with a quadrature detector. The output of the detector is sliced with a comparator and connects to the digital ASIC. In transmit mode the PLL is programmed to the desired channel and the data from the digital ASIC is filtered, attenuated and used to modulate the VCO control voltage.

3.1.1 Frequency of Operation

The WPAN shall operate in the 2400 to 2483.5 MHz Industrial, Scientific and Medical (ISM) frequency band. Sub-bands of this range may be required for countries other than the United States and will be addressed at a later date. The sub-bands will need to be identified prior to the production phase in order to be part of the ROMed software. The 2.4 GHz band was chosen for numerous reasons which are outlined below.

- 2.4 GHz RF fields do not propagate as well as signals in the 400 900 MHz bands, which helps in keeping the range and thus interference low.
- The 2.4 GHz band will permit a smaller antenna and could allow integration on the PCB.
- Host devices do not generate as much noise in the 2.4 GHz band compared to UHF and 900 MHz and the WPAN will not be desensitized by the host device.
- The 2.4 GHz band allows wider channel bandwidths thus higher data rates and wider deviations. The wider bandwidths tolerate frequency error and drift due to part tolerances and temperature changes and mismatches.
- The 2.4 GHz band allows more wide bandwidth channels because of the larger frequency allocation.
- The 2.4 GHz band has greater international acceptance.
- Higher carrier frequency simplifies compliance with CE Mark (as required by the European Community) and FCC receiver requirements for EMI susceptibility. Susceptibility requirements are specified up to 1 GHz, which will not have an effect on a radio operating with a 2.4 GHz carrier.

3.1.2 Link Data Rate:

The WPAN module supports a data rate of 1005 kbps. Release 2 is expected to include forward error correction (FEC) to provide more range and reduce retries. Effective data rate with FEC enabled will be 524 kbps:

Confidential

565-002-050 Rev A

see page 20 of this appendix

3.1.3 Spreading

The WPAN radio will utilize a frequency hopping carrier to increase immunity to interference. Multiple hop sequences will be also be used for WPAN isolation. The transmit channel frequencies and the hop sequences are shown in Appendix A. The default dwell time is 250 mS, which is also the same as the default beacon interval. The dwell time and beacon interval can be increased or decreased with a corresponding effect on link maintenance power consumption. Beacon interval must be an integer multiple of the dwell time. Dwell time is selectable between 62.5 mS, 125 mS, 250 mS and 500 mS. The 500 mS dwell time is locked out for ETSI countries.

3.1.4 Channel Spacing

The channel bandwidth is 1.536 MHz and the channel and PLL programming table is shown in Appendix A. A total of 50 channels are available. The channel width and IF frequency were chosen primarily due to IF SAW filter availability. The lowest frequency SAW filter available in a small enough package, is at a frequency of 110.592 MHz, has a bandwidth of 1.5 MHz, and is typically used for DECT cordless phones.

3.1.5 State Transitions

The allowable state transitions and the maximum times allowed for the transition to take place are:

From	l To	Transition time
Off	Receive	150 mS *
Sleen		10 mS *
Sleep Standby Receive	Receive Receive	1.5 mS
Receive	Transmit	500 μS
Transmit	Receive	500 μS

^{*} Includes 8 mS for crystal oscillator stabilization time.

3.1.6 Host Data Rate

The data rate between the host and the WPAN module will default to 19.2 kbps. Data rates up to 115.2 kbps will be supported for intelligent hosts. The host protocol includes provisions to negotiate the higher data rates. It is desirable for the host interface to operate as fast as possible to conserve power and to shorten response time.

3.1.7 Response Time

In general, the average response time of the WPAN, operating in a power managed state, is one half the beacon time. The design default currently uses a 250 mS beacon time. The average response time will be 125 mS. The amount of interference will lengthen the response time. In the event of interference, the radio will utilize retries and frequency hopping to get the message through. The radio will retry four times during each dwell time for three dwell times. With these parameters, the maximum response time would be about one second. After which, if still unsuccessful the WPAN would notify the host of the unsent message.

Confidentia

For the special case when the destination device is known to be awake then the message does not have to wait for an RFP window, but must honor the window if present. The RFP and message can be sent immediately.

Several examples of the transaction timing are illustrated in a diagram in Appendix B.

3.2 Transmitter

3.2.1 Output Power

FCC Part 15.249 regulations limit field strength to 50 mV/m measured at 3 meters. If we assume perfect dipoles for conversion to dBm. The field strength converts to -51.69 dBm at 2400 MHz. The calculated path loss for 3 meters at 2400 MHz is 49.59 dB. Thus the maximum transmitter power allowable under Part 15.249 is -2.1 dBm. The transmitter output power specification is -2 dBm +/- 2 dB. This number includes losses of the antenna, the actual transmitter power delivered to a 50 ohm load will be greater. The modulation will be two level GFSK with a frequency deviation on the order of 450 kHz. A "1" data bit will encoded with a frequency deviation higher than carrier center frequency. A "0" data bit will be encoded with a frequency deviation lower than the carrier center frequency.

For FCC regulations, power level of harmonics and other spurs above 960 MHz is limited to 500 uV/m at 3 meters or 50 dBc from the fundamental, whichever is the lesser attenuation. The 500 uV/m at 3 meters is 40 dBc from the fundamental. The biggest concerns for the WPAN radio is receive mode local oscillator (LO) radiation and second and third harmonics. All frequencies below 960 MHz must be attenuated by 50 dBc which should not be a problem given the filters, the high level of integration and shielding (if required).

ESTI 300-328 requirements are -47 dBm above 1 GHz and -57 dBm below 1 GHz.

3.2.2 Transmitter Spectral Characteristics

The modulated transmitter output spectrum shall be less than 1.536 MHz channel bandwidth at 20 dB below peak power, with a random data pattern. The transmitter shall employ circuitry to contain the spectrum within the allotted bandwidth during activation and deactivation of the transmitter.

3.3 Receiver

3.3.1 Receiver Sensitivity

Receiver sensitivity shall be nominally -81 dBm at the antenna for a 1 x 10-5 Bit Error Rate (BER) at 1005 kbps. Included in the sensitivity specification is a noise figure estimate of ~6 dB, a 20 dB SNR for 10-5 BER, and a receiver noise bandwidth of 1.5 MHz. The range of the WPAN module is estimated to be greater than 50 feet for the 1005 kbps mode in an open air environment. The Release 2 module with FEC is expected to improve sensitivity by 6 dB.

3.3.2 Dynamic Range

Receiver dynamic range shall be approximately 71 dB for 1005 kbps. Nominally, the operational input power range shall be -10 dBm to -81 dBm for 1005 kbps.

Contidential

565-002-050 Rev A

3.3.3 Interference Immunity

The WPAN radio must be able to support operation of up to 20 WPAN networks in an area of less than 300 square feet. Even with the designed in short range of the radio there is a great deal of potential interference. Interference management will be split between the physical and protocol design techniques.

WPAN isolation at the physical layer will be achieved by frequency hopping with multiple hop sequences and adequate IF filtering

WPAN isolation at the protocol layer will be achieved with CSMA/CA techniques and by utilizing dynamic address assignment that includes the hardwired host designation. Network address assignment will also be made during initialization. By combining the network address and the source/destination addresses in each communication, the messages will be isolated at the protocol layer. The WPAN protocol is outlined in greater detail in the Architecture and Protocol document.

3.4 Controller

T

The WPAN radio controller is 3.3 V custom digital ASIC. The block diagram of the release 1 ASIC is shown in Figure 2. The release 2 ASIC block diagram is shown in Figure 3. The main ASIC blocks are the processor core, memory and user gates. The ASIC vendor is Hitachi and the processor core is an H8/300H. Memory requirements are 32K bytes ROM for program memory, 4K bytes SRAM for message buffers and execution memory and 128 bytes of EEPROM. Release 1 modules use an H8/3048 processor with 4K SRAM and 128K Flash in conjunction with a gate array. After completion of system test and the gate array and H8 will be combined into a standard cell ASIC and the program code would be put in ROM. For the least expensive WPANs, the program memory needs to be masked ROM. The EEPROM is used to store network configuration information after a network has been initiated. Storing the network configuration information will permit the network to resynchronize after a battery swap in any device.

The number of user gates is approximately 6000. The user gates perform such functions as the HDLC protocol, PLL programming, and power and TX/RX control of the radio. Other blocks of the radio include a serial port for the host interface, timer for beacon control, crystal oscillator amplifiers, an ADC for RSSI monitoring, and a DAC for synthesizer crystal warping.

4.0 MECHANICAL

4.1 Dimensions

In the final phase of the WPAN development the size of the module will be less than 1.0" X 1.5" X 0.3". For the first phase the radio board outline approximately 1.3" X 3.9" and is intended to fit into the handle of the SaberTwo'th scanner. Exact board dimensions for Phase 1 are called out in the fabrication drawing, document 144-781-xxx, where the xxx represents the latest revision of the board.

4.2 Mounting Provisions

For the first phase incorporated in the handheld scanners the radio board will slide into the handle of the scanner similar to the decoder board. In the base station application the same module will be mounted on standoffs from the base station main board.

see page 21 of this appendix

565-002-050 Rev A

Confidential

see page 22 of this appendix

4.3 Shielding

The WPAN module is to provide the necessary shielding, if required, to meet the governmental regulations.

5.0 Antenna

The antenna for the radio must present a 2:1 VSWR (9.5 dB return loss) from the preselector filter out to the antenna to the radio. An antenna with a poor return loss will affect load pulling of the VCO.

The antenna for the handheld scanner is a screw that is also use to fasten the battery extender to the handle. Connection to the screw antenna is with a spring finger soldered to the radio hoard. The antenna for the base is a simple coaxial cable dipole soldered directly to the radio board.

6.0 ENVIRONMENTAL

6.1 Operational Temperature Range

-20 to +60° C.

6.2 Storage Temperature Range

-30 w +70° C.

6.3 Humidity:

N N

5% to 95%, non-condensing at 45° C.

6.5 Mechanical Shock

With appropriate mechanical enclosures based on Intermec's design criteria (which will be individual device dependent) the WPAN radio will survive a four foot drop to concrete.

6.6 Vibration

20gRMS, 3 axis random for 1 Hour.

6.7 Electrostatic Discharge (ESD)

The WPAN module shall survive 15 kV air discharge and 8 kV conducted while mounted in the host device, per standard test procedure, NPN 568-004-010.

7.0 REGULATORY:

The WPAN module, shall meet minimum requirements of FCC 15.249 and ETSI 300-328.

8.0 MANUFACTURABILITY/TESTABILITY

The WPAN module will require tuning of the reference crystal oscillator used for the PLL. The tuning will occur at final manufacturing test and consists of setting the output of a DAC to tune

Confidential

13

the crystal oscillation frequency. This should be the only adjustment made on the WPAN. Final test will verify a minimum sensitivity of the radio and transmitted power out.

9.0 MEAN TIME BETWEEN FAILURES

For the WPAN MTBF, a failure will be defined as an electrical hardware failure under normal operating conditions which causes the WPAN to be non-operational. The production version of the WPAN will be a highly integrated module with a minimum number of parts and interconnect. In general, the MTBF and the parts count and associated interconnect and solder joints are directly related. The WPAN MTBF should be very long since it will be highly integrated. A MTBF will be calculated based on the final design and will be greater than 30,000 hours.

Confidential

565-002-050 Rev A

Appendix A - Transmit Channel Frequency Table and Hop Sequences

Channel	Frequency (MHz)		Frequency (MHz)
1	2403840000	26	2442240000
2	2405376000	27	2443770000
3	2406912000	28	2445312000
4	2408448000	29	2446848000
5	2409984000	30	2448384000
6	2411520000	31	2449920000
7	2413056000	32	2451456000
8	2414592000	33	2452992000
9	2416128000	34	2454528000
10	2417664000	35	2456064000
11	2419200000	36	2457600000
12	2420736000	37	2459136000
13	2422272000	38	2460672000
14	2423808000	39	2462208000
15	2425344000	40	2463744000
16	2426880000	41	2465280000
17	2428416000	42	2466816000
18	2429952000	43	
19	2431488000	44	2469888000
20	2433024000	45	2471424000
21	2434560000	46	2472960000
22	2436096000	47	2474498000
23	2437632000	48	2476032000
24	. 2439168000	49	2477568000
25	2440704000	50	2479104000

The version 1.02 software has 40 different hop sequences defined. Each hop sequence has 24 hops. There are seven selection sets used for the 40 sequences. The Sequence Set Code 0 can select any of the 40 hop sequences. All other set codes are limited to the corresponding set of four or eight.

Sequence Set Code	Frequency range (MHz)	Channel Range	Number of Channels	Number of Sequences	Control Channels	Applicable countries
0	2400 - 2483.5	I - 50	50	40	6, 21, 36	US, Canada, Any full band ETSI
1	2400 - 2445	1 - 26	26	8	6,14,21	Australia, New Zealand, China
2.	2446 - 2483.5	31 - 50	20	8	36,40,47_	France
3	2450 - 2483.5	33 - 50	18	4	36,40,44	Argentina, Mexico
4	2445 - 2475	30 - 45	16	4	36,40,44	Spain
5	2418 - 2457	13 - 33	21	4	16,21,26	Israel
6	2435 - 2465	24 38	15	4	26,31,36	Hong Kong

15

the tall at the tall the tall the tall the tall the tall the

	13 14 15
	14
	45
	13
	17.0
đ	
	17
r Mi	17 18 19 20 21 22 23
Ų	19
. T	20
ΠĮ	21
	22
m	25
2	24
	ı
	25
۱Ĵ	25 26 27 28
<u>L</u>	27
	28
o	
Œ	100
	4
	29

Sequence numb <u>er</u>	Country Code	Hop Channel
1	0	36 35 1 20 6 25 29 9 21 13 15 46 36 32 28 12 6 42 43 37 21 5 3 4
2	0	21 22 17 19 6 46 48 27 36 39 20 13 21 18 50 45 6 4 12 23 36 34 24 15
3	O	21 4 19 48 36 45 13 8 6 38 10 24 21 42 30 29 36 17 41 43 6 39 7 15
4	0	36 41 30 1 21 7 2 44 6 49 24 35 36 5 17 27 21 32 9 45 6 40 38 39
5	0	6 30 42 34 36 16 40 9 21 5 31 28 6 7 24 37 36 22 46 25 21 23 48 13
6	0	6 12 37 18 36 25 32 3 21 1 42 17 6 31 8 38 36 4 34 46 21 10 9 22
7	0	36 47 7 31 21 14 19 1 6 42 13 11 36 10 25 38 21 49 34 46 6 3 37 22
8	0	6 19 35 32 36 4 50 39 21 1 28 18 6 29 44 49 36 34 8 22 21 11 14 15
9	0 or 1	21 8 9 24 6 10 19 23 14 11 26 18 21 2 13 7 6 17 15 5 14 20 12 25
10	0 or 1	14 11 15 1 21 7 26 17 6 18 3 4 14 9 20 5 21 10 23 25 6 16 22 19
11	0 or 1	6 16 19 1 21 10 12 22 14 7 2 15 6 26 25 20 21 18 11 4 14 3 23 5
12	0 or 1	21 23 8 4 14 9 26 3 6 15 2 12 21 17 10 20 14 22 24 18 6 7 25 19
13	0 or 1	21 2 15 18 6 24 20 12 14 8 3 19 21 13 16 7 6 11 5 4 14 25 1 26
14	0 or 1	21 11 12 10 14 7 5 4 6 17 26 16 21 22 24 9 14 19 18 1 6 3 8 2
15	0 or 1	21 13 11 9 6 23 26 15 14 2 25 24 21 4 19 18 6 20 5 17 14 3 10 8
16	0 or 1	14 18 17 3 6 15 26 9 21 10 16 5 14 4 19 1 6 22 25 13 21 20 2 24
2-	0 0	47 45 31 35 36 49 33 32 40 38 42 46 47 44 43 37 36 50 34 39 40 48 41 39
17	0 or 2	7, 43 31 33 33 43 43 43 43 43 43 43 43 43 43 43
18	0 or 2	40 00 00 03 00 07 41 02 41 45 00 00 47 24 40 FO 00 45 42 40
19	0 or 2	70 71 44 40 05 00 24 20 24 20 20
20	0 or 2	77 00 71 70 70 72 70 70 70 70 70 70 70 70 70 70 70 70 70
21	0 or 2	36 44 46 48 40 37 39 33 47 45 32 42 36 34 43 49 40 35 41 50 47 38 31 38 40 38 34 35 36 43 32 44 47 42 33 37 40 31 45 41 36 46 50 49 47 48 39 31
22	0 or 2	40 36 34 35 36 46 35 31 47 33 41 37 40 42 38 44 36 39 49 50 47 43 45 43
23 24	0 or 2	47 43 34 38 36 42 46 39 40 49 33 45 47 32 50 41 36 37 44 48 40 31 35 43
24	U QI Z	47 43 04 30 00 42 40 03 40 40 00 (0)) 02 00 11 00 0
25	0 or 3	44 49 37 50 36 43 45 33 40 35 48 38 44 41 42 39 36 47 34 46 40 39 45 42
26	0 or 3	44 45 50 47 40 43 39 40 36 37 41 49 44 38 46 35 40 33 34 12 36 17 46 35
27	0 or 3	40 39 42 48 36 45 37 34 44 33 50 35 40 41 38 43 36 46 47 49 44 41 38 43
28	0 or 3	44 50 48 43 36 37 42 35 40 39 41 33 44 45 46 38 36 49 34 47 40 43 33 38
29	0 or 4	44 34 31 42 36 32 30 39 40 41 33 37 44 43 38 45 36 35 43 34 40 41 42 36
30	0 or 4	36 41 33 43 40 39 42 32 44 30 38 45 36 34 37 31 40 35 37 39 44 30 32 39
31	U or 4	36 33 45 37 40 34 43 42 44 39 31 32 36 30 38 41 40 35 45 34 44 39 43 35 36 32 34 42 40 45 33 30 44 43 38 35 36 39 37 41 40 31 34 43 44 45 30 31
32	0 or 4	36 32 34 42 40 45 33 30 44 43 38 35 36 39 37 41 40 31 34 43 44 45 30 31
22	0.45	26 32 30 29 16 25 13 33 21 27 18 19 26 20 31 22 16 17 24 15 21 14 23 28
33	0 or 5	26 32 30 29 16 25 13 33 21 27 18 19 26 20 31 22 10 17 24 16 21 14 26 20 21 23 30 20 16 33 25 27 26 22 13 28 21 15 31 17 16 18 29 24 26 32 19 14
34	0 or 5 0 or 5	16 27 23 31 26 14 15 25 21 22 18 29 16 30 32 33 26 28 24 19 21 20 17 13
35 36	0 or 5	16 17 18 24 26 28 33 19 21 22 15 20 16 14 2/ 13 26 30 29 23 21 25 32 31
-		
37	0 or 6	36 28 34 38 26 27 29 25 31 35 30 33 36 32 37 24 26 33 34 29 31 30 27 32
38	0 or 6	36 33 28 30 26 29 25 35 31 37 32 27 36 24 38 34 26 28 25 34 31 37 35 30
39	0 or 6	31 27 29 38 36 28 32 35 26 25 34 24 31 33 30 37 36 37 27 30 26 24 28 38
40	0 or 6	36 30 29 38 31 28 35 37 26 27 33 24 38 34 32 25 31 25 33 24 26 27 35 32

Cam I . One posebbe transmitter, une transmitte on

			-
T.P. Cl.R message 10 bytes 0 + 14 bytes his		0.5 J.M : 192uS .mS	
15	L,	3.5	
Packoff then counts Trik Data biresuge - 10 byrs: 100 orb Wmedia is ide, + 12 byrs: hearesCRC const between 1 & 64		Ma: 184uS Ma: 22%-S	
¥ .		2 1	
Buckoff elmer counts orly if mecha la léle, cernel between 1 A 64		Min : 30,2245 Mux : 1,95mS	
RIP Wiedow = 2 " number of trusmikers "(Avg back off time + RFP + DR + Poli)		IM-4.BmS	Mb: 0.5arS Max: 12.45arS
Bescon mesege 14 bytes (d) 4 3: bytes (ed)		Sn 42E-Rt Su:	
Wermen and tucks series			:

: Il . Two possible treasmitter, two transace room

			_
GLK MESSAGE to be	14 byles 146	(M 2 13 2 24.5	
1/4	7	158	1
Bustard foness scuar (DR Devina 3.: 1949 Message - 10 bytes 10 17/4 CLL PASS-5C and yill meets is all in 12 bytes the source between 1 & 6 + 1.256 bytes day		37uS 0.5 INOM 5re6 mS Min: 14uS Max: 2.2mS	
Backoff fro only if med court betwo		Min : 3232uS Men : 1.85mS	
TR CLA messign 10 bytes fit + 14 bytes fitto		0.5 1M: 190aS mS	
e - 10 bytes I/O			100
Backoff threen count TTR Dereks I Data Message 10 bytes 10 TTR CLR message obly if media is felter 11 bytes benden CRC 10 bytes 1		S Mh: 1845 Mix: 222eS	
1 2 2	H	23	
Backeoff thmers count caty if modil is felle count between 1 & 64		अंक: 1937aS Max: 1.93mS	
RP Window = 2 * marker of trumminers *!Avg back off imas + RFP + TR + Pelly		Sm2.9~%]	•
Beroon menage (Diyina NO+ 1 31 bytes lait		\$= 825-NI	
Accrany lend softs array		2 mcs	

Man : 14.6mS Max : 24.65mS

Ģ
Æ
Ç
7
يقر
~
8
-35
₽-
×
ĸ
ø
•
c
F
2
À
72
3
. 25
- 4
- 14
'Έ
- 14
_ ਵ
- 5
- 5
٠.
- 15
P
- ₽
2
7
4
2
18
- 5
- 6
6
٠,٠

· · · · ·	7		
CLA Mersys to bytes also + to bytes also		[म:ग्रास्	
1/4		7. 2	
0 bytes .1/6			
THE Notineering TER Device 2 Day of the 1/0 To the 1/0		Albe A	
RE D + +	•	3.8	
Noll mesuses Is bytes VA + Is bytes fatb		3700E1 HC	
Ĕ		3.5	
RFF nestage 10 bytes 1/0 + 14 bytes tale		NS 184 15945 AS 136045	
E - E	Ļ	138	
Retrofftmens en only ifmedia is idi pout between I & I		20. 25. 20. 20. 20. 20. 20. 20. 20. 20. 20. 20	
CLR		าล	
S T'R	F	1 28	
in - 10 bytes 14			- No
TR Device 1: Das Morago - 10 bytes 10 TTR CLR Retent from count 17R RFP message 11 bytes backer(CRC from 10 bytes backer(CRC from 10 bytes day 10 bytes day 12 bytes day 12 bytes day 14 bytes day		(4.5) Min : 184uS Mon: 2,12ms	
F	1		
Bahaif timers count only if medials life count between 1 & 6.0		Hts: 30.5545 Kar: 1.9575	
Warrang and Beacog amessage BEP Vinctor -: 2 number of Beabalf theres count 7.R Davies 1: Davies		IN-95mS	
Beacig message 10 byes 1/0 + 31 byes (n/b		Sn 92;-K1 Sn 5	
1	ا	<u>, i</u>	

Min: 17.2mS Mix: 29.25mS

-18


:

Case IV = One transmission if destination is known to be on. (No RFP wincow)

					İ			The street of the street of the street of the	TR	CLR messag
Warnup	Hidden node detect	Hidden node detect Backoff timers count Trong if media is idla count between 1 & 64	2	I'R RFP message 10 bytes 1/0 + 14 bytes info	TÆ	Poll message 10 bytes 1/0+ .5 bytes info	* + +	T/R Poll message 1/R Device 1: Data racesage 1/0 + 12 bytes header/CRC 10 bytes 1/0 + 1 - 256 bytes data 14 bytes info		10 bytes 1/0 + 14 bytes info
• .			<u> </u>			ı	7		**	
		A	ţ		\ \ \ \					A C 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
10 mS	IM: 4.8nS	Min: 30.52uS	20.5	0.5 1M: 192uS mS	10.5 Ins	A: 200uS	0.5 l mS	Min: 1840S	Sm	. W. 175.
· · · ·		Man : 1:5	}					Max: 2.22ms		
	.									
				1 Mohres	2					

Min: 17.6mS Max: 21.55mS

Figure 1:Radio Block Diagram

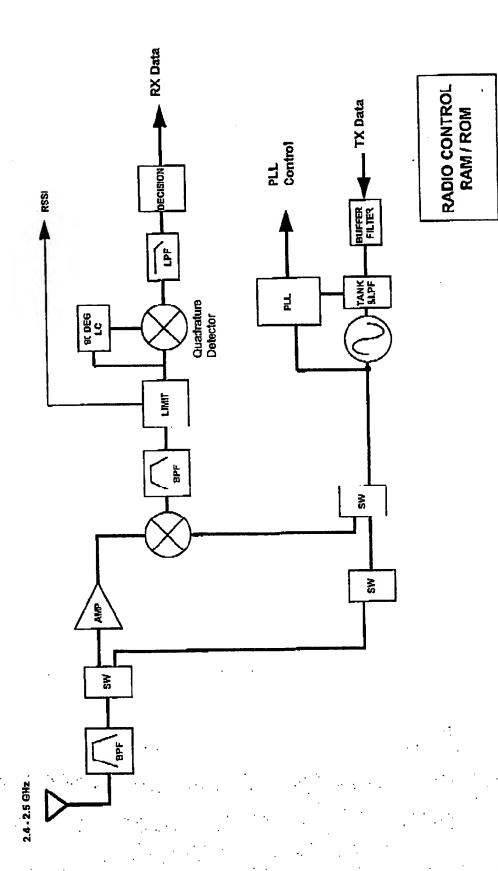

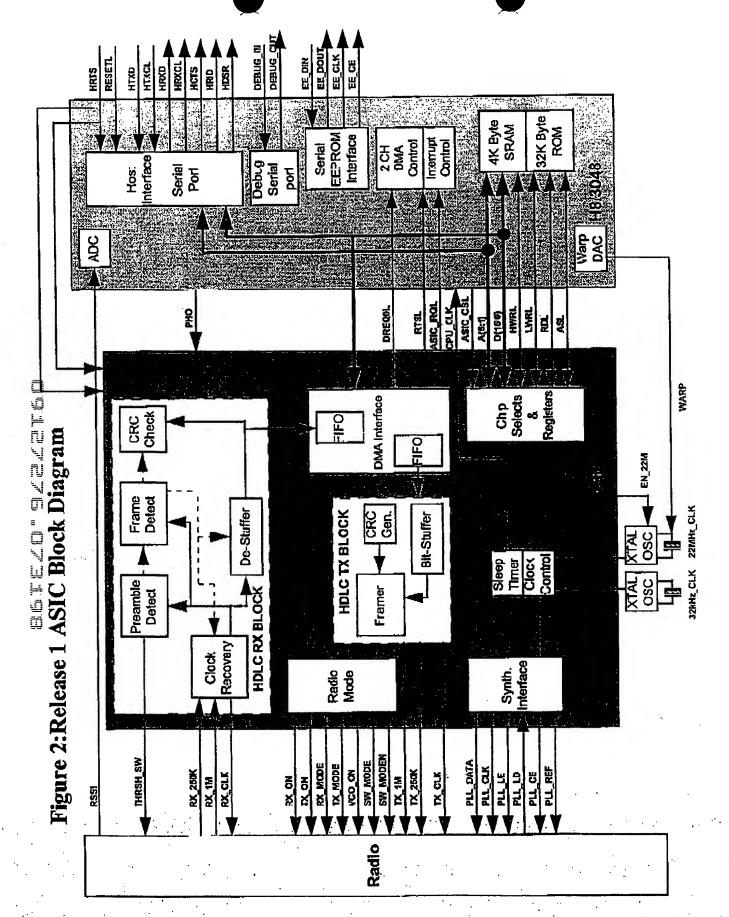


Figure 3:Release 2 ASIC Block Diagram



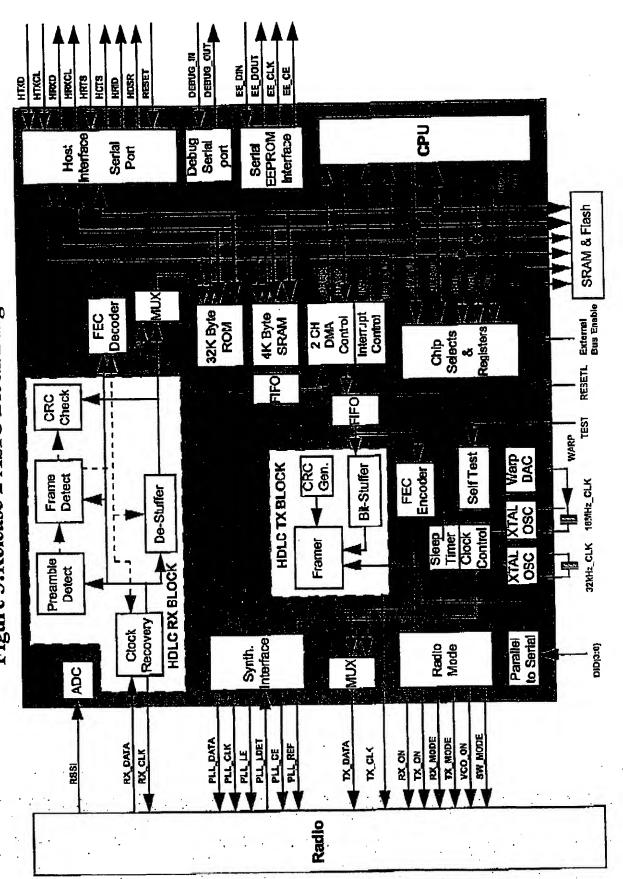


Figure 1:Radio Block Diagram

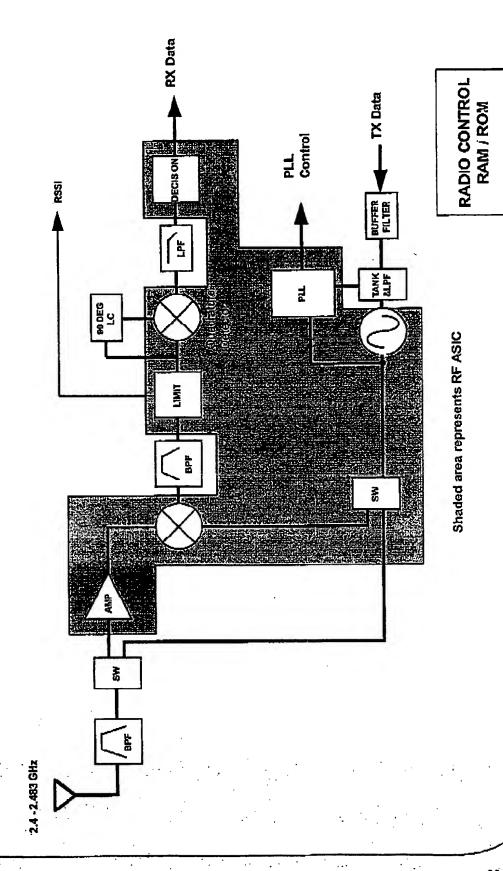

CONFIDENTIAL

Figure 2:Digital ASIC Block Diagram

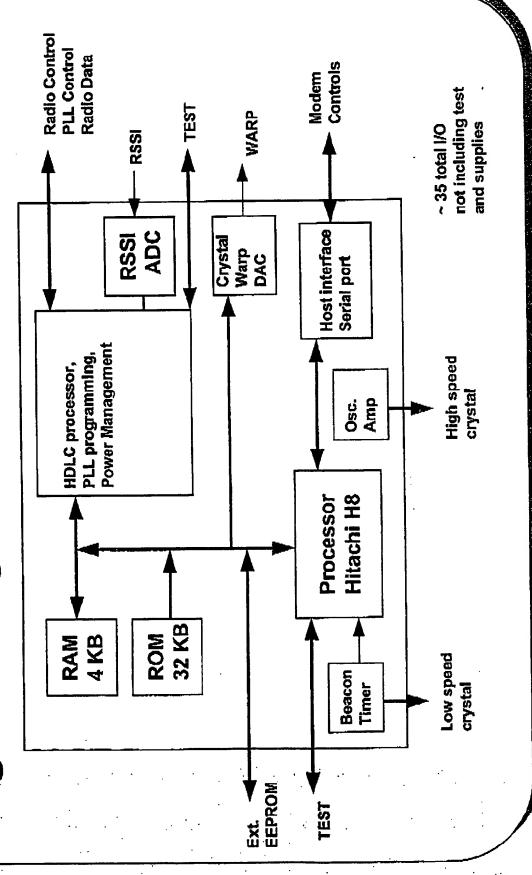

24

CONFIDENTIAL

APPENDIX B



A UNOVA Company

Microlink Radio

Architecture and Protocol

Release Date: 04/28/1998	Documentation Type and Subject:	Documentation No.: 565-002-051
Authors: Joe Kubler	Architecture and Protocol	Page: 1 of 38
Authorization: Pat Kinney	Wireless Personal Area Network	Revision Level: E 4/28/98

Revision History

Revision	Change	Date	Author
E	Initial Release	4/28/98	Joe Kubler

1. Overview

This document defines the Architecture of the Norand Microlink radio intended for use in both Personal Area Networks (PAN) and Infrastructured Networks. Personal Area Networks consist only of low power devices using distributed power management. Infrastructured Networks depend on an access point to distribute messages to and from a host network as well as within the Infrastructure Network (i.e., from one station in the network to another). Permanently assigned physical addresses are not required in either case and a flexible host interface is provided to allow connection to a variety of stations.

2. General Requirements

This section defines some general requirements that must be met by the Architecture.

- Support a small number (up to 10) devices in a network
- Support a high density of overlapping networks (15 to 20 networks in a 300 foot area)
- · Provide a simple serial and an intelligent host interface option
- Provide an RS-232 or a serial 3V CMOS physical host interface option
- Provide multipoint capability
- Provide a minimum throughput of 19200 bps in any environment
- Allow the user to select a set of devices and automatically configure the network

Unless noted otherwise, all bytes are sent least significant bit first and all multibyte fields are sent most significant byte first, that is high endian ordering.

3. Software Architecture

A microprocessor in the radio module implements the radio and host protocols. The processor will handle framing for both interfaces (simultaneously) and buffering for several messages. The implementation of the host interface (in smart mode) will provide simple support for the host computer's implementation of its radio driver.

3.1 External Interfaces

3.1.1 Norand Hand Held Computers (HHC)

Notand will provide both NDIS device drivers and WIN95 virtual comports. An NDIS interface supports standard higher level protocols over the radio. A virtual comport supports streams of bytes to standard serial devices such as printers.

3.1.2 Other Devices

The Host Interface section defines procedures for communicating to the radio using the 3V CMOS scrial interface (optionally connected to an RS-232 interface adapter). Norand will provide a simple "C" language API as a sample device driver



4.1 Physical Interface

The physical interface to the host device is a 3V CMOS serial interface or with an adapter, an RS-232 interface.

4.1.1 Serial 3V CMOS Host.

The interface has the following signals:

Signal	Direction	Usage
TX	From Host	Serial data from host.
RX	From Radio	Serial data from radio.
RTS	From Host	Request to send. This will power up the radio host interface and interrupt the radio to indicate that the host has a message.
CTS	From Radio	Clear to send. The radio is powered up and the radio is ready to accept data on TX and send data on RX
ĸI	From Radio	Interrupt to host to indicate that the radio has a message for host. When the radio asserts CTS, RI will be unasserted.
RESET	From Host	This signal hard resets the radio. It will have a pull up resistor so that it may remain unconnected.
DSR	From Radio	The radio asserts this line when it has finished its reset process. It may be connected to RTS when RTS is not managed by the host. This allows the host interface to remain active.

4.1.2 RS-232 Host

A secondary PC board connected to the 3V CMOS interface will provide RS-232 signal levels for all the serial interface lines (except Reset).

4.1.3 Data Rate

Upon reset, the data rate will be 19200. A smart interface command can change the rate to one of 38400, 57600, or 115200.

4.1.4 Asynchronous Framing

The framing will be 8 bit, no parity, 1 stop bit. The least significant bit of each byte of data is sent first, after the start bit.

4.2 Host Protocol

The radio provides two types of control interfaces. Pre-programmed devices that cannot directly control the radio use a dumb interface. In this case, a very simple hardware controlled modem device is emulated. The host and radio protocols include a lock command so that a station using a smart host interface can dedicate for its use another station (such as a printer with a dumb interface) and thus prevent interleaved data or other such problems. Normally this is a higher layer problem, protocols solve the problem to manage devices using the dumb interface.

A programmable host uses the smart interface to actively manage the radio.

Upon reset, the radio assumes a dumb interface,

4.2.1 Dumb Interface

The dumb interface passes just data. Control and selection of dumb devices, if required, must be handled by the other end of the radio data link. In those cases where the host device does not use RTS/CTS signaling, RTS can be asserted by connecting the DSR signal from the radio to RTS. While RTS is asserted, the radio cannot power down its end of the host interface and thus may use more power. In cases where the host device can assert RTS and await CTS, the radio will power manage the host interface. While RTS is asserted, the host can send data to the radio. When either RTS is unasserted or a gap in character arrival occurs, the radio will send the data to one of the following destinations, in order of highest to lowest priority:

- The destination device which has currently selected the radio connected to this host device.
- The last device that communicated with a unicast message to this device.
- The broadcast address.

4.2.2 Smart Interface

The smart interface can control operation of the radio, establishing networks, removing networks, collecting statistics, transmitting multicasts, managing destination devices with dumb interfaces, etc.

The Host establishes this interface by first asserting RTS (this is necessary to allow the radio unit to power up the host interface). It then awaits CTS from the radio. Next RTS is unasserted and the host immediately sends the escape sequence DLE(hex 10) ENQ(hex 05). The radio will use this sequence to enter the smart interface mode. The host may then begin a sequence to communicate with the radio.

Once the smart mode has been entered, all further communication is encapsulated in frames as follows:

Field	Size	Usage
Length	16 bits	The number of bytes in the message, including Ctl, Sequence and Check
Cd	8 bits	The command to the radio
Sequence	8 bits	Sequence number of message
Info	0Length*8 bits	The information used by the command
Check	8 bits	Checksum of Length through Info fields, inclusive

When the radio has a frame to send to the host, it will assert RI.

When the host is ready to exchange frames, it will assert RTS and wait for the radio to assert CTS. After the radio asserts CTS, it unasserts RI. At this time bi-directional exchanges are possible until the host unasserts RTS. If this occurs in the middle of a frame (either from or to the radio), the frame is aborted. The receiver of a frame (other than the acknowledge frame) must acknowledge the frame.

4.2.2.1 Ctl Field

The Ctl field is composed of two parts. The low 4 bits are the command and the high 4 bits are used as follows:

Bit	Name	Usage
7	Retry	This command is a re-transmission of a previous command.
· 6.	reserved ·	
5	More Data	The sending device has more data to send to receiver
4	reserved	

565-002-051

4.2.2.2 Frames From Host to Radio

The following table defines the commands from the host device.

Command	Value(hex)	Usage
Data	0	Data to send on the radio
Initiate	i	Initiate network
Status	2	Status request to radio
Ack	3	Positive acknowledgment of frame from radio
Join Response	4	Allow/disallow device to join network
Start Network	5	Start network with all accepted devices
Join Network	6	Join one of specified networks
Device Management	7	Manage remote destination for use by this host
Diagnostics	8	Perform various radio diagnostic and service functions
Set Parms	D	Set host interface parms
Version Request	E	Request the radio version information
Network Management	F	Network Management request or response

4.2.2.3 Frames From Radio to Host

The following table defines the commands and status messages from the radio.

Command/Response	Value(hex)	Usage
Data	0	Data received from the radio
Initiate Response	1	Response to Initiate network command
Status Response	2	Status response to host
Ack	3	Positive acknowledgment of frame from host
Join Request	4	Device request to join network
Start Network	5	Network has been started
Response		
Join Network	6	One of requested networks has been joined
Response		
Device Management	7	Result of attempt to manage remote destination
Response	İ	
Diagnostic Response	8	Result of diagnostic request
Data Transmit Status	D	The status of last data request from host
Version Response	E	The version information of the radio.
Network	F	Network Management request or response
Management		

4.2.2.4 Sequence Field

Each frame transmitted across the interface has a sequence number. A re-transmission of a frame will have the Retry bit set in the Ctl field and the same sequence number as the previous attempt. Ack frames will use the sequence number of the received frame that is being acknowledged. The sequence number is incremented for each unique frame (other than Ack frames) sent across the interface.

4.2.2.5 Chk Field

This is a modulo 8 sum of all bytes in each command or response message including the Length field through the Info field. The receiver of the message will also calculate the checksum and if the calculated field equals the received field, immediately send an Ack frame response.

565-002-051

4.2.3 Host Command and Response Formats

4.2.3.1 Data

Both the radio and host will use this command to pass data messages across the interface. The maximum number of data bytes is indicated in the version and status responses from the radio. The format of the command is as follows:

field	Length (octets)	Usage
Address	2	The destination of the message. All ones indicates broadcast
Awake	2	The time in 0.1 seconds that the host radio should remain awake after
Window		sending the data packet.
Data	Length bytes	The data to send. This must not exceed the maximum number indicated by the radio

4.2.3.2 Initiate Command

This command is used by the host to Initiate a new Microlink network. Upon receipt of this command, the radio will send Initiate commands on the radio control channels and pass all attach requests (that do not have duplicate source addresses) to the host. The format of the command is as follows:

Field	Length (octets)	. Usage
Network Id	2	The network id to use for the network. NOTE that a Network Id with all bits set to one is a broadcast Network Id that should not be used in this command.
Dwell Time	2	Dwell time of network in network ticks(one tick is approximately 30.5 microseconds(This should be one of the following: 2048 (62.5 milliseconds), 4096 (150 milliseconds), 8192 (250 milliseconds) and 16384 (500 milliseconds)
Device Resync Time	2	Number of beacon intervals between attempts to recover missing devices from network.
AgeFactor	2	Time in 0.1seconds to age out inactive Node table entries.
HopSequence	1	Hop sequence to use. If this value is 255, then the radio will randomly assign the sequence to use.
Beacon Interval	1	Time between beacons in hops. For example, a value of 1 is equal to
Transmit Devices	1	Number of devices likely to transmit in any dwell interval. The radio will use this to calculate the RFP Window. This window affects the link maintenance power.
Typė Flags	1	This field defines the type of network and controls its initialization. The field is composed of the following bit fields: Bit(s) Usage 7 Rejoin. Rejoin previous network. 6 Wakeup Defer. If one, the network requires additional hidden node protection. 5 Network Type. If one, the network is Infrastructured, otherwise it is a PAN. 4 Temporary Network. Don't save parms in exprom. 2-3 Data Rate. Values are as follows: 0 250kbps. 1 1Mbps. 0-1 Power. If Network Type is PAN, then this field indicates the power to use during initialization. Its values are as follows: 0 Transmit Initiate at lowest level. 1 Transmit Initiate at level 1. 2 Transmit Initiate at level 2. 3 Transmit Initiate at full power.
SAR	1	Rate at which to perform search and rescues for stations that are "lost". This is in Beacon times.
Ninfo	 	Length of Info field
Info	Ninfo	Any arbitrary information that the host would like distributed to potential network joiners.

To establish a PAN, the Data Rate would be 1, the Network Type would be 0 and the Power would be set to 0. An infrastructured network could set the Data Rate to 0 (if greater range is useful. This would be approximately 6db additional link margin) or to 1, and the Type to 1. For PAN, if Rejoin is set, then the radio will attempt to "discover" the previous instance of the network before it sends the Initiate frame. If the previous network is "discovered", then after the Initiate response, a Start command must not be sent because the network has already been rejoined. For Infrastructured networks, a Start is not needed as the network will start upon valid receipt of this command.

4.2.3.3 Initiate Response

This response is generated as the result of an Initiate Network command

Field	Length (octets)	Usage	
Status	2	Status of Initiate. Values are as follows:	
	İ	0 Initiate Command in progress.	
	Ì	1 Infrastructured network started	
		2 Network rejoined	
		3 Invalid Parameter	
		4 Network already Initialized/Started	

4.2.3.4 Status Request/Response

This request/response pair is used to get status information from the radio. This includes counters and network information. The format of the Status Request is as follows:

Field	Length (octets)	Úsage
Туре	1	Type of request. Values are as follows:
'		0 Request Statistics
		1 Request and Clear Statistics

The format of the response is as follows:

Field	Size(bits)	Usage
MaxLength	16	Maximum length of data field in data command
Nmessage	16	Maximum number of outstanding messages allowed
TxFrames	32	Number of frames successfully sent
TxError	32	Number of frames that retried out
Sync Lost	32	Number of times synchronization has been lost
Device Lost	32	Number of times devices have been detected as out of communication
RxFrames	32	Number of received frames with good FCS
RxTooLong	32	Number of received frames that where too long
RxFCSErr	32	Number of received frames that had FCS errors
RxDuplicate	32	Number of frames detected as duplicates
RxNoBuffer	32	Number of times frame ignored because of buffer unavailability
Status	16	General status of adapter. Bit definition is as follows:
		Bit Usage
		0 In a network
		1 This station initiated the network
		2 This station transferred the network
		4 This station is current network coordinator
		5 Station currently out of sync
		6 Low data rate (250kbps)
Address	16	Station address.
Network Id	16	Network id
Beacon Interval	16	Time between beacons in network ticks(approximately 30.5
		microseconds)
Dwell Time	16	Dwell Time of network in network ticks
Hop Sequence	16	Hopping Sequence of network

4.2.3.5 Ack

This frame is sent by both the radio and host to acknowledge correct reception of a frame across the interface. The sequence number in the frame is copied from the frame being acknowledged. If an Ack is not received within 100 milliseconds, the sender will re-transmit the unacknowledged frame.

565-002-051

4.2.3.6 Join Request

After a Initiate Command has been issued, Attach Request messages received by the radio will be sent to the host. This request indicates a remote device that has detected the host's attempt to Initiate a network and has requested to join that network. The host can accept or reject the device with the Join Response Command. The format of this request is as follows:

Field	Length (octets)	Usage
Address	2	The address of the requesting device.
Туре	2	Remote device type. The radio module has a type selector on the PC board which is indicated by this field.
Ninfo	1	Length of Info field
Info	Ninfo	Information that the remote device can pass. Smart devices can pass information to their adapter in the Join Network Command. For devices using a "dumb" interface, a four byte radio serial number will be sent in this field. The maximum length of this field is 16 bytes.

4.2.3.7 Join Response

This host response is used to indicate acceptability of a remote device in the network that the host is initiating. It is formatted as follows:

Field	Length (octets)	Usage
Address	2	Address of remote device
Status	1	Accept status. Values are as follows: 0 Remote device is accepted. 1-15 Reserved for use by radio 16-255 Join Request is rejected. This code is passed to the device that requested joining.

4.2.3.8 Start Network Command

This command is used to start a PAN once the host has determined that all required devices have joined.

4.2.3.9 Start Network Response

This response is generated by the radio when the network has been successfully initialized (that is all expected devices are now in sync). This may be as a response to the Start Network command or when the Type field had the high bit set in an Initiate command and the previous instance of the network was rediscovered. It has the following format:

Field	Length (octets)	Usage
Status	2	This field has the following values: 0 New network started. 1 Network already Started. 2 Network not initialized.

4.2.3.10 Join Network Command

This command is used to allow the host to join a network. It could be used to join a PAN or an infrastructured network. It is formatted as follows:

Field	Length (octets)	Usage
Туре	1	If the high bit of Type is set, the host requests that an attempt be made to rejoin the previous network. The low bits are encoded with the data rate at which to search for a network. The values are as follows: 0 250kbps 1 1Mbps 2 Either 250kbps or 1Mbps
Backup Priority	1	This device will generate network beacons after this number of beacons have been missed in a PAN. In an infrastructured network, this device will search for a new coordinator (roam) after this number of missed beacons.
Nnet	2	The number of network ids in the Netlist field.
Netlist	Nnet*4	Each entry in this vector is a valid network id, type (2 byte) pair that is acceptable to the host. NOTE that all ones is a broadcast Network Id and indicates that any network of the associated type is acceptable to this host.
Scan Time	1	Time in 0.1 seconds that device will scan control channels for network after connectivity is lost. See below.
Scan Duty Cycle	1	After Scan Time of scanning, the radio will be power cycled during scan based on this value. Valid values are as follows: 0 Radio remains powered on and scanning 1 Radio is on for one pass through control channels and off a cycle 2 Radio is on for one pass and off for two 3 Radio is on for one pass and off for three 4 Radio is on for one pass and off for four
Ninfo	1	Length of information field that is to be sent in Attach request
Info	Ninfo	Attach response into field.

If the rejoin bit is set in the Type field, then the radio will attempt to rejoin the previous network. If it is not set or a rejoin attempt fails, the Netlist is used to find an appropriate network to join. If the Type field indicates either data rate is valid, the radio will alternate between the two rates while awaiting either Init or Beacon frames.

The radio uses the Scan Time and Scan Duty Cycle fields to determine how to recover when network connectivity is lost. Scan Time indicates how long to continuously scan when connectivity is first lost. Scan Duty Cycle indicates how to scan after Scan Time elapses. Essentially this allows the radio to power cycle its transceiver to aid in managing battery life.

4.2.3.11 Join Network Response

This response indicates to the host that one of the acceptable networks has been joined. It is formatted as follows:

Field	Length (octets)	Usage
Status	2	Values for this field: 0 Network coordinator accepted request. Other fields in response are valid only in this case 1 Network coordinator node table is full (10 devices) 16-255 Network coordinator rejected with this reason 256 Invalid parameter in Join Network Command
Network Id	2	The network id of joined network.
Турс	2	The type of network joined (same encoding as Initiate Command).
Ninfo	1	Length of Info field.
Info	Ninfo	Any arbitrary information from network initiator.

4.2.3.12 Device Management Command

This command provides various device management functions. It is valid to send only to "dumb" devices. It is formatted as follows:

Field	Length (octets)	Usage
Address	2	Address of remote device to manage
Function	2	Function to request of remote device. It should be one of the following: O Request Control of device. Release Control of device. Force Release of device. Set Awake Window Duration.
Duration	2	This is a duration in 0.1 second increments. For command 0, the time the requesting device will hold the station. For command 3, the time this station should remain awake after every Data frame it sends on the radio.

4.2.3.13 Device Management Response

This response is generated by the radio after an exchange with the remote device. It is formatted as follows:

Field	Length (octets)	Usage
Address	2	Address of remote device.
Function	2	Function requested of remote device.
Status	2	Result of request. It is one of the following: 0 Successful command. If the command was to request control, then the remote device will not accept data messages from any other device except this host until this host sends a release command. If the command was release, then the remote device is now released. 1 Device already controlled by device whose address is in the next field. 2 Device unknown or not responding. 3 Device is locally managed. 4 Invalid Parameter. 5 No Network
Control Address	2	If the status field is 1, then this is the address of device that currently has control of remote device.

4.2.3.14 Diagnostics

This command is used to perform diagnostic and service functions on the radio. Its format is defined, but its content are implementation specific.

Field	Length (octets)	Usage
Command	2	The diagnostic command or service request.
Data Length	2	Length of Data field.
Data	Data Length	The information the radio uses to perform the function

4.2.3.15 Diagnostics Response

This response is generated by the radio as the result of a Diagnostics request. Only some requests may generate a response.

Field	Length (octets)	Usage
Command	2	The diagnostic response code.
Data Length	2	Length of Data field.
Data	Data Length	The information the radio uses to perform the function

4.2.3.16 Set Parms Command

This command is used to set the host interface parameters. It is formatted as follows:

Field	Length (octets)	Usage
Interface bps	2	The bit rate to use for host interface. This is a coded value as follows:
-		0-19200, 1-38400, 2-57600 3-115200

Upon receipt of this command, the radio will change its host interface parameters and then assert RI.

4.2.3.17 Data Transmit Status

This status from the radio is used to indicate result of last data command from the host. A Data Transmit Status will be generated by the radio for every Data request from the host. It is formatted as follows:

Field	Length (octets)	Usage
Status	1	The result of the Data request. It is one of:
		0 Successful transmission
		1 Could not send, no network
		2 Could not send, device unreachable (retries used up)
		3 Could not send, device unknown
		4 Could not send, no buffer
		5 Could not send, length error
Sequence	1	Sequence number of Data request from host. This can be used to
4		match up responses with requests.
Address	2	Destination address of Data Request

4.2.3.18 Version Request

This command is used to request version information from the radio module. There is no data associated with this request.

4.2.3.19 Version Response

This response is generated by the radio upon receipt of a version request. It is formatted as follows:

Field	Length (octets)	Usage
MaxLength	2	Maximum length of Data field in data command.
Nmessage	2	Maximum number of outstanding messages allowed.
Version	4	Version of radio code. The high two bytes are the version and the low 2 bytes are the revision.
Ninfo	1	Length of Info field.
Info	Ninfo	Text string indicated information about the radio such as date of revision, etc.

4.2.3.20 Network Management Command

This command is used by the host to manage network operations and by the radio to indicate network management requests from the network.

565-002-051

Field	Length (octets)	Usage
Command or	2	Responses have the high bit set. Each command requires a response
Response		across the interface. Valid values are as follows:
		0 Remove host from network. The radio is removed from the
		Microlink. If the radio was the network coordinator, the network is terminated.
	i	1 Request device take over the network. This is used to transfer
		network control from this station to another device. If the destination
	1	devices accepts, it becomes the network coordinator. If the other
	·	device is "dumb" it will always accept this request. A smart device
		can reject the request.
		2 Request network termination. This is a request from this station to
		the network coordinator to terminate the network. A "dumb" network
		coordinator will always accept the request to terminate.
		3 Request device list from network coordinator.
		4 Request from network coordinator to this station to take over
		coordination.
		5 Temporarily remove host from network. Host may rejoin later.
		8000 Device removed from network.
		8001 Device will begin beaconing on next hop.
	ł	8002 Device cannot take over network.
		8003 Request to Terminate accepted.
		8004 Request to Terminate rejected.
		8005 Device List.
	}	8006 This device is not network coordinator.
		8007 Request time-out
		FFFF No network
Reason or	2	For commands, this is a reason for the command. For a response, it
Status		is the status. The status must be one of those listed above.
Device List	4*number of	For Device List Response, a list of address: type pairs of devices in
	devices	network. The first address field is used in Transfer Network requests
		to indicate the station address to request transfer to. In a Terminate
l		request (to the coordinating host), it indicates the requesting host. In
		Terminate responses, the current coordinators address is in this field.

4.2.4 Host Command/Response Sequences for Controlling Radio

This section will illustrate the sequences of commands and responses across the host interface for controlling typical radio activities. In these examples, whenever a frame is sent, it is assumed that an associated Ack frame is received, and whenever a frame is received, an Ack frame is sent.

4.2.4.1 Initiating Smart Radio Interface

- 1, Assert RTS.
- 2. Wait for CTS
- 3. Immediately unassert RTS and send DLE ENQ
- 4. Wait for RI
- 5. Assert RTS
- 6. Send Version Command
- Wait for Version response to verify correct radio operation and protocol. Save the MaxLength field and Nmessage field from response for use in sending data commands.
- 8. Send Set Parm command to change bit rate to that desired
- 9. Wait for RI
- 10. Radio interface is initialized

565-002-051

4.2.4.2 Initiating a PAN

 Generate Network Id. This could be a random number or a calculation on some known different value that the host has available (such as a serial number). Make sure it is not all ones.

Send Initiate Command to the radio. The Power field should normally be set low for PAN and high
for infrastructure. In a PAN this will allow only devices very close to this host to receive the Initiate
frames. The hop information should be different for any overlapping networks.

3. The radio will respond with an Initiate response indicating the command was accepted.

4. For each Join Request that is received by the host, determine the acceptability of the remote device.

This could be done simply by looking at the type field, or it could be more complicated based on host knowledge of higher layer protocol. Send a Join Response message to the radio with the correct status.

5. Once all required devices have been detected, Send a Start Network Command to the radio.

4.2.4.3 Joining a Network

- 1. Generate a list of acceptable Network Ids and types. For joining a PAN, it is likely that the Network Id is all ones (broadcast) and the type is PAN. This will allow the host to join any PAN that physically selects it by proximity. Set the data rate bits in the Type field of the Join Network request, Send the request to the radio.
- 2. Await the Join Network Response. Process Info field if meaningful. Data can now be sent.
- 3. Send Network Management command to get addresses and types of other stations in network.
- 4. Await the response and save information for use in generated data messages.

4.2.4.4 Sending Data

- Generate the Data command including awake window information (which may be zero). If the host requires that the radio remain awake to "immediately" receive a data frame, then the Awake Window field of the Data command should be set accordingly.
- Send the message to the radio and increment outstanding Data count.
- 3. If outstanding Data count is less then Nmessage field in version or status response, another data command can be sent.
- 4. For each Data Transmit Status from radio, check status of outstanding message with same sequence number. Process status accordingly. Decrement outstanding Data count.

4.2.4.5 Transferring Network Control

- 1. Generate a Network Management request to transfer control to a specific destination.
- 2. Await the Network Management response of acceptance from that device.
- 3. If device rejects, a request to another device can be tried.

4.2.4.6 Network Initiator Rejoining a Network

- 1. Generate an Initiate Command with same network id as that of network to rejoin. Set the high bit of the Type field and send to radio.
- If the Initiate Response indicates the device has rejoined (and possibly resumed network coordination)
 then process is finished. If the Response is 0, then continue process as in step 4 of initiating a network.

4.2.4.7 Temporary Network

- 1. If in a network already, issue Network Management command to temporarily be removed from that network. If not, go to step 3.
- 2. Wait for the response indicating removal.
- 3. Generate new network id for temporary network. Set Resync Time to a small number (so the network will quickly dissolve when network initiator exits. The network should be a PAN, power suitable to the application and the Initiate command must indicate that the network is temporary.
- 4. Initiate the network as in steps 3 through 5 of Initiating a PAN.
- 5. Exchange required Data.
- 6. Issue Network Management command to terminate network (i.e. remove network coordinator).
- 7. Wait for response that device is removed.

8. If in a previous network, and wishing to rejoin, that network can now be rejoined.

5. Radio

5.1 Physical Interface

5.1.1 Frequency Range

The frequency of the radio will be in the 2.4GHz range, selectable on 1.5MHz increments from 2401 to 2483 MHz. This will allow for 50 channels

5.1.2 Data Rate

The radio data rates are software controlled and either 1Mbps or 250Kbps. The later can be used if greater range is desirable (as in an Infrastructured Network).

5.1.3 Framing.

The bit framing for the radio is Synchronous HDLC using NRZI encoding. An 80 bit preamble of alternating ones and zeros will be sent for each frame.

5.1.4 Mode

The radio should support relatively fast switching times between channels to allow FH Spread Spectrum solutions for noise immunity. Suggested worst case switch times are on the order of 500 microseconds.

5.1.5 Power

The transmit power should be no more than 0dbm.

5.1.6 Sensitivity

At 5 meters the BER should be no worse than 10-5.

5.2 Radio Protocol

5.2.1 Common Protocol Elements

The following elements of the radio protocol are common to Personal Area Networks (PAN) and to Infrastructured Networks.

5.2.1.1 General Frame Format

The framing is HDLC so starting and ending flags delimit the frame. NRZI encoding is used to ensure clocking for the receiver.

565-002-051

Field	Size	Description
DA	16 bits	Destination address
SA	16 bits	Source Address
Network Id	16 bits	Network Id from join response. All ones is broadcast ID.
Sequence	16 bits	Fragment number and sequence number
Reservation	8 bits	Reservation indication. The low 7 bits indicate the duration in (byte times+7)/8 that the current frame sequence requires to complete. It includes preamble times, frame times and rx/tx switching times. The high bit is used to indicate the presence of a pad byte before the FCS in the frame.
Çtİ	8 bits	Control field. Frame type
Info	0 to 512 bytes	Information, if any
FCS	16 bits	FCS protecting DA through Info inclusive

5.2.1.2 Ctl Field

The low 4 bits is the frame type which is defined below. The high 4 bits have the following usage:

Bit	Name	Usage
7	Retry	This frame is a retry. A previous attempt to transmit this frame did not receive a CLR. The sequence field has the same sequence number as the previous attempt.
6	Fragment	This frame is a fragment. The Sequence field contains the fragment number
5	More Data	This station has more data to send to the receiver of this frame
4	Last Fragment	This frame contains the last fragment.

5.2.1.3 Frame Types

Туре	Value(hex)	Usage
Data	0	Data frame.
CLR	1	Acknowledge unicast frames of all types except RFP.
RFP	2	Request For Poll.
Poll	3	Poll Device.
Beacon	4	Network Synchronization Message
Initiate	5	Initiate new PAN
Attach Request	6	Sending device indicates desire to join a network
Attach Response	7	Response from network initiator to device that has sent an Attach Request.
Identify	8	Message sent by network coordinator to determine if destination device is still in sync.
Test	9	Test message.
Device Management	E	Command or response frame to manage remote device.
Network Management	F	Special network management functions

5.2.1.4 Address Fields

The DA and SA fields are each 16 bits. Station Addresses are randomly generated by each station. Any randomization algorithm may be used, but it should be sure to generate different values on subsequent generation attempts. All ones is a broadcast address and should not be generated for use as the station address. All zeros is the address of the network initiator.

565-002-051

5.2.1.5 Network Id Field

The Network Id field is passed to the radio from the network initiator. All ones is a broadcast id and is not a valid id for a network but can be used to in Test frames for basic functionality testing. It also can be used in a Join Network request to allow the host to join any network.

5.2.1.6 Sequence Field

This field is composed of two sub-fields. The high 4 bits are the fragment number (when the fragment bit is on in the Ctl field) and the low 12 bits are the sequence number of the frame. This number is changed on every frame sent, unless the frame is a retry (the retry bit is set in the Ctl field). For CLR frames, it is copied from the frame to be acknowledged. In all other frames, the number is incremented for each new frame sent. The fragment number is incremented for each fragment and the Ctl field last fragment bit is set for the final fragment.

5.2.1.7 Frame Check Sequence (FCS)

The FCS algorithm is CCITT CRC-16 as used by HDLC.

5.2.2 Control Channels

Certain channels are set aside to be used specifically for synchronization and re-synchronization. The hop sequences will visit these channels more frequently. Several channels are used to prevent a single point of failure based on interference on a single channel.

5.2.3 Medium Access Rules

The access rule is CSMA/CA, that is carrier sense, multiple access with collision avoidance. All unicast frames (except CLRs) require a CLR from the receiver to be transmitted to the sender of the unicast frame.

5.2.3.1 CSMA/CA

The basic medium access mechanism is carrier sense multiple access with collision avoidance (CSMA/CA). CSMA alone would allow access to the medium as soon as it is sensed to be idle. If multiple devices simultaneously sensed idle and transmitted, there is a "collision" which cannot be detected. To detect these collisions a CLR is expected on all unicast frames. This does not "avoid" collisions in the first place. To avoid collisions, devices will first sense the medium for a random length of time, and only if the medium is idle after that random time will the device send. Beacon frames sent by the network coordinator will use a random time in the range of 0 to backoff_table[0]/2. All other frames use a range of 0 to backoff_table[0]. This allows beacons a higher priority. Occasionally a collision will still occur. The absence of a CLR will indicate this. It will also sometimes cause delay on sending the frame when there would have been no contention anyway. In any case it will prevent most collisions. Any collision results in a great delay of wasted bandwidth.

5.2.3.2 Hidden Stations

Since it is possible (especially in Infrastructured networks) to have hidden stations, a station may receive frames sent only by the recipient of a frame sequence (i.e. POLL and CLR frames) and it may not detect the carrier on the RFP and DATA frames. Frames therefore contain reservation information that indicate to all receiving stations the necessary time duration required for a frame sequence. This allows hidden stations to recognize that the medium is actually busy. Thus such stations will not inadvertently sense the carrier as idle and transmit a frame which interferes with a hidden station's frame. Stations are thus required to process reservation information in all frames having the correct Network Id.

A station that has just awakened from power down mode (i.e., the radio receiver has been off), does not have such an assessment of the medium. If such a device desires to send, and if the network is so configured (indicated by a field in Beacon frames), such devices will set their medium reservation

information to protect against the longest possible frame. A valid frame received by such a station will set the reservation time to a known value, potentially shortening this duration.

5.2.3.3 Backoff Procedure

Except when transmitting a CLR or POLL, the following backoff procedure is performed.

A backoff value is randomly chosen in the range of 0 to backoff_table[retry]. The retry will initially be zero for a frame. The table, backoff_table, is composed of the following values at 1 Mbps: {63, 127, 255, 511}. Each entry is in system ticks, where each tick is approximately 30.5 microseconds. The backoff timer runs regardless of the state of the medium. Whenever a frame is received, the backoff timer is stopped for the time specified by the reservation field in the frame(based on transmit data rate). The value in the frame is designed to protect that frame and any subsequent frame in the sequence. This results in fairer access to the medium because other stations that attempt to transmit later will not have better access probability due to a station's backoff count expiring during a frame reception and that station picking ever larger times to backoff. Once the backoff timer goes to zero, the device will sense the medium and if it is idle will transmit its frame.

When the medium is sensed busy immediately after backoff or when frames are unsuccessfully sent, that is a POLL is not received for an RFP or a CLR is not received for a unicast frame, the retry value is incremented and if the maximum number of retries has not been exceeded, the backoff procedure is again executed. The station must only transmit 4 successive times on a channel before awaiting another channel (that is why the table only has four entries). If retries must occur on a subsequent channel, the algorithm is reset. Note that if a CLR was sent but not successfully received, a duplicate frame will be sent, with the retry bit set in the control field and the sequence number the same. This will allow duplicate frames to be ignored by the receiver. Though they may be ignored, the CLR must still be sent.

Once the frame has been successfully sent, the backoff procedure is again initiated with a value randomly chosen in the range of 0 to backoff_table[retry]. The value of retry is then set to 0. This will prevent the station from having a higher access probability than other "backed off" stations.

5.2.4 Fragmentation

Because the radio is an inherently poor medium, sending very long frames of data is inappropriate. Thus fragmentation may be required. Host data messages larger than the maximum radio frame size will be split into the appropriate number of fragments (from 1 to 15) and then each fragment will be sent with a separate medium access. A receiver will receive each fragment and assemble them into a single Host data message. The receiver may not have available buffers for fragments and can thus use the POLL frame status field to inform the RFP sender to re-transmit from the first fragment. The receiver of successive fragments will remain awake to receive all the fragments. Thus the transmitter of the fragments need not indicate them in the RFP window.

Only unicast data frames can be fragmented.

5.2.5 Radio Frame Formats

5.2.5.1 Data Frame

This frame is used to exchange host data between radios. Its format is as follows:

565-002-051

Field	Length (octets)	Usage
Awake Window	2	The time in 0.1 seconds that the transmitter will remain awake after completion of frame exchange(unicast data exchanges require a CLR, broadcast do not)
Data	0-512	Data to send

5.2.5.2 CLR Frame

This frame is used to confirm error free reception of Data, Attach Request, Attach Response and Device Management frames. It has no data field.

5.2.5.3 Request For Poll (RFP) Frame

This frame is used to indicate one of the following:

- 1. The sender has a message for another station and is requesting permission to send that message.
- 2. The sender has a message for every station (broadcast DA).

This frame is usually sent in the RFP window (because the destination station is usually asleep in most cases). If the destination has indicated in a previous data frame that it will remain awake, and a subsequent frame is ready to be sent to that station, the RFP may be sent outside of the RFP window.

If sent in the RFP window, the duration field should only protect the POLL. If sent outside the RFP window, the duration should protect

5.2.5.4 POLL Frame

This frame is sent in response to a unicast RFP. It indicates that the sender allows the receiver to send a subsequent message. Its format is as follows:

Field	Length (octets)	Usage
Status	8	Status in response to RFP. It is one of the following: 0 RFP transmitter may send message.
		1 RFP transmitter can not send message. 2 RFP fragment/sequence error. Sender should re-send from first
		fragment.

5.2.5.5 Beacon Frame

This frame is used by network coordinator to keep stations in synchronization. Beacon frames are always broadcast on the network. The Beacon format is as follows:

Field	Length (octets)	Usage
Network Time Stamp	2	This is the timestamp of the beacon and is used to synchronize receivers clocks. It is in network ticks(approximately 30.5 microseconds).
Next Beacon Time and Type field	1	The high four bits are used as follows: Bit(s) Usage 7 Infrastructured Network 6 Use hidden station wakeup rules 4-5 Beacon Type. Values are as follows: 0 Normal beacon from network coordinator. 1 Reset Beacon from network coordinator. Reset synchronization. 2 Backup beacon. A backup beacon is generated by a station other than the network coordinator because no beacons from the coordinator have recently occurred. The low four bits is the number of hops before the next beacon.
Beacon Interval	1	Beacon interval. Time is in units of hop dwells.
Beacon Count	2	Count of beacons, modulo 65536. This can aid in synchronizing clocks that are fairly imprecise.
RFP Window	2	RFP Window time in network ticks.
Device Resync Time	2	Number of beacons that can be missed before entering Resync mode. From Start Network Command.
Dwell Time	2	Time in each dwell in network ticks.
Hop Sequence	1	Hop sequence being used by radio. (table in use)
Нор	1	Current hop. (entry in table)
Channel	1	Actual channel that beacon is transmitted on. Used because of possibility of hearing adjacent channel.

It is most likely that dwell time and beacon interval are the same. There is little value in having beacon intervals longer than the dwell time unless a great deal of interference is suspected. This will allow for better frequency diversity recovery in bad channels.

5.2.5.6 Initiate Frame

This frame is used to catablish a personal network (PAN). Devices receiving this will determine if the network parameters are acceptable and request to join by sending a Attach Request Frame. This frame is always broadcast. Its format is as follows:

Field	Length (octets)	Usage
Турс	1	The type of network. Valid types are as follows: 0 PAN
		1 Infrastructure Network
Info	0-16	Information from the Initiate Network Host Interface command

5.2.5.7 Attach Request Frame

This frame is generated by a station when it receives an Initiate frame from a PAN that it wishes to join or when it receives a beacon frame from an infrastructured network that it wishes to join. It is broadcast in response to an Initiate frame (to the network id indicated by that frame). It may be sent as a unicast frame to keep network connectivity. Its format is as follows:

Field	Length (octets)	Usage
Address	2	The address of sending device.
Туре	2	The type field from the radio adapter selection device.
Info	0-16	Information from Host Join Request command, if any. If device uses a dumb host interface, the radio serial number (4 bytes) is sent in this field.

5.2.5.8 Attach Response Frame

This frame is used to indicate acceptability of device to network initiator. Its format is as follows:

Field	Length (octets)	Usage
Status	1	The status of Attach Request. Valid values are as follows: 0 Accepted. 1 Address Conflict, choose another address and try again 2 Host rejected. The next byte has the reason 3 Network coordinator rejected because its node table is full
Reason	1	If status is 2, then this is the host reason code for rejecting join.

5.2.5.9 Identify Frame

This frame is used to determine if the destination is still in sync. It has no data field and a CLR is all that is required for confirmation. This frame must be sent in the RFP window as it will take the same amount of time in that window to send the Identify Frame and receive a CLR as to send an RFP and receive a POLL. In the later case, the Identify frame would then need to be sent after the RFP window anyway using even more bandwidth. This frame must be unicast.

5.2.5.10 Test Frame

This frame is used to test network connectivity. The receiver of such a frame will simply send it back to the sender. A special case exists, where a TEST is received with an all ones Network ID. This is the only case where such a frame is valid. The receiver will send back the frame. The Info field can contain any data.

5.2.5.11 Device Management Frame

This frame is used to acquire/release control of a remote device, usually one having a "dumb" host interface. This is usually best left to a higher layer protocol, but for dumb devices, that is not possible. The format of a request is as follows:

Field	Length (octets)	Usage
Турс	1	This must be zero to indicate a request to manage.
Command	1	Valid values are as follows:
		0 Request sole control of device
		1 Release control of device
		2 Force release of device
		3 Set Awake Duration
Duration	2	This is a duration in 0.1 second increments.
		For command 0 it is the max, time the device will remain locked.
		For command 3 it is the duration this station will remain awake after
		sending a Data frame.

The format of a response is as follows:

Field	Length (octets)	Usage
Туре	1	This must be a one to indicate response to a management request.
Command	i	Command for which this is response. See table above for values.
Status	1	Valid values are as follows: 0 request accepted 1 request rejected because another device already has control. That device's address is in the next field. 2 device is locally managed
Address	2	Address of device that already controls remote device

5.2.5.12 Network Management Frame

This frame is used to perform special network management operations such as transferring network coordination and network termination. There are request and response frames. The request frame is as follows:

Field	Length (octets)	Usage
Туре	1	This must be zero to indicate a request to manage.
Command	1	Valid values are as follows: () Transfer network coordination request. 1 Network termination request. Only a station acting as network coordinator can accept this request. 2 Device exiting network. 3 Device list request.
Reason	2	Reason for request copied from Network Management Host interface command.
Device Addresses	2	Used with Transfer network coordination request to transfer list of know devices in network (including self).

The format of a response is as follows:

Field	Length (octets)	Usage
Туре	1	This must be a one to indicate response to a management request.
Command	1	Command for which this is response. See table above for values.
Status	1	Valid values are as follows: 0 request accepted. 1 request rejected.
Device List	2*number of network devices	If the command is Device list request, this is a list of address:type pairs of all stations in network and their type value as coded in the attach request.

Upon successful transfer of the network, the receiving device will begin beaconing and will send a reset beacon. That station also will need to set its identify procedure up to start from its initial state to confirm that all devices remain in synchronization based on the stations clock.

5.2.6 Network Synchronization

The network coordinator will keep the network synchronized by periodically transmitting Beacon frames. These frames include information about network time, dwell time and next beacon time to allow a receiver to set its clock to that in the beacon and then sleep until the next beacon with the receiver off to save power. Since a system clock with an accuracy of greater than 50 parts per million is unreasonable to assume, the beacon also includes a count of beacons that have been sent to allow the receiver to occasionally take snapshots of its own clock and then some large number of beacons intervals later, sample the beacon count again and determine the station clock's relative accuracy versus the network clock. Periodic corrections can then be applied.

Revision E

The network clock is in 1/32768 seconds or approximately 30.5 microsecond ticks. This allows for a low power requirement to maintain the clock.

The Beacon frame contains hop information, the current physical channel, the hop table in use, the table entry and the dwell interval. The time remaining in the current dwell period is calculated as follows:

(dwcll interval) - (current system tick) MOD (dwell interval)

Initial synchronization in Infrastructured networks is accomplished by setting the unsynchronized station's receiver to a control channel and awaiting a beacon with the Infrastructured bit set and a matching Network Id in the beacon frame.

5.2.6.1 Detection of Loss of Synchronization

A PAN has two levels of synchronization support. When the number of beacons specified in a stations backup priority (from Join Network Command) are missed, the station will generate backup beacons. It will continue to adjust its clock to what the network coordinator would have as its clock. This allows for PANs to be temporarily split. If the station does not receive a beacon from the network coordinator after the number of beacon intervals specified in the Device Resync Time (from a beacon) have elapsed, then the station is lost, and must enter the recovery procedure.

An infrastructured network does not support splitting. The backup priority field is thus used for detection of sync loss. If backup priority beacon intervals pass without a beacon from the network coordinator, then the station is out of sync and must enter the recovery procedure.

5.2.7 Power Management

In order to reduce power consumption, a station must turn off its radio receiver (and perhaps other hardware). This is known as sleep mode. It may do so under the following conditions:

- 1. It has not indicated to any other station via a Data frame that it will remain awake.
- 2. It is not backing off after transmitting.
- 3. It does not have a frame to transmit to a known awake station.
- 4. It did not receive an RFP in the most recent RFP Window.
- 5. It is not "lost". If it is lost it must remain awake on some control channel.

5.2.7.1 Transmitting to a Station in Sleep Mode

Following beacons all stations must remain awake for a period of time called an RFP window. During this window, stations that have messages to send to any other station that it has assessed as asleep, will generate Request For Poll (RFP) messages. Any station receiving an RFP must remain awake until it has correctly received the message from the station sending the RFP. Because more than one device may need to send an RFP in the RFP window, each station will initiate the backoff procedure before sending an RFP. The duration of the RFP window is indicated in the beacon. The duration is based on the expected number of devices that may transmit (a parameter in the Initiate Network Command). It is assumed that twice this expected number is a good value to use for the upper range in the randomization for the backoff algorithm. It is further assumed that twice this number is a good choice for the maximum allowed RFPs in the window. Once the window time has passed, no further RFPs are allowed to be transmitted.

If the frame sent cannot be successfully delivered in the current hop, another RFP must be sent in the next RFP window.

The window time is based on the Start Network command Transmit Devices field and is calculated as follows:

RFP Window. Time = 2 * Transmit Devices *

(Avg Backoff + RX/TX time + RFP message duration time + RX/TX time + POLL message duration time)

RFP message duration = 14 bytes * 8 + 80 = 192 microseconds (approximately)

POLL message duration time = 15 * 8 + 80 = 200 microseconds

565-002-051 Revision E

Microlink Radio Architecture and Protocol

Avg RFP Backoff time = 65 * 30.5 microseconds / 2 = 990 microseconds

Since some clock jitter is to be expected, a station will actually turn on its receiver about 1msec early on the expected channel and await the beacon. Since it must then receive a beacon and then wait the RFP window time, the current required to maintain the link can be calculated as follows:

Net Maintenance Current =

Receiver Current * (Channel Select time + 1msec + Avg Backoff/2 + RX/TX time + Beacon Frame Time + RFP window) / Beacon Interval + sleep current

Beacon Frame Time - 31 * 8 + 80 = 328 microseconds (approximately)

As an example of this, assume Receiver Current of 100mA, a channel select time of .5msec, a beacon interval of one dwell period, a dwell period of 250msec, a Transmit Devices value of 2 and a sleep current of 2mA. The Net maintenance current is as follows:

RFP window = (2 * 2 * (.99 ms + .5 ms + .192 ms + .5 ms + .2 ms))

= 9.52ms

Current = 100mA * (.5ms + 1ms + .5ms + .5ms + .328ms + RFP window) / 250mscc + 2mA

- = 100mA * 12.35ms / 250ms + 2mA
- = 6.94 mA

5.2.7.2 Transmitting to a Station in Awake Mode

When sending to a station that is assessed as in Awake Mode, an RFP-POLL-DATA-CLR sequence can be sent anytime except in the RFP Window. If during the first dwell time that this is attempted, the message can not be successfully transmitted, then the RFP Window method described above must be used to deliver the message.

5.2.8 PAN Re-Synchronization

Since it is possible for a PAN to be divided when the user carries some equipment but not all, it is necessary to provide a mechanism to re-synchronize those devices which have lost synchronization because they no longer see beacons. The network coordinator will assess all devices in the network by using one of two mechanisms.

By monitoring RFP activity and its own traffic to other stations, it can determine which stations have recently been connected.

For those stations without recent demonstration of connectivity (case I), the network coordinator will generate Identify frames.

For devices determined to be "lost", a search and rescue mission will be attempted at the rate requested in the Host Interface Start Network command. After the requested number of beacons has passed, the network coordinator will wait for an indication of no activity involving it (again based on RFP frames and its own transmission status), and then tune to each of the control channels in succession and transmit beacon frames.

Lost devices will wait on one of the control channels and when they receive the beacon, they will re-sync to the information in the beacon and thus be recovered. With the periodic adjustment of a station's clock as defined above, a reasonable period will be provided over which synchronization can be maintained. Each beacon advertises the Device Resync Time. Thus a station that has not seen beacons for this period will start progressing very slowly through the control channels, waiting for beacons (as discussed above). Once it sees a beacon it will be back in sync. This progression requires the receiver to be on thus causing a large demand on power. The Join Network Command specifies an initial on time and a subsequent power duty cycle to allow for extended battery life. Once the initial on time passes (during which the station is scanning channels at slow rate), the radio will perform a single scan of the control channels followed by a period during which the receiver is off. This period is a multiple of the time required for a single scan and can be a 50%, 33%, 25% or 20% duty cycle. This will increase the re-acquisition time.

Revision E

At this same time the station will become receptive to new Initiate frames that match the correct criteria as designated in the Host Interface Join Network Request. If it receives either a Initiate frame or a Beacon Frame, it will proceed accordingly. This will allow devices in a recharge rack overnight to automatically be ready for a new network the following morning.

5.2.9 Infrastructured Network Re-Synchronization

When an station in an infrastructured network looses synchronization (is lost), it will immediately search for a new network matching the parms from the Join Network Command. The station will start progressing very slowly through the control channels, attempting to detect a network matching the specified parameters. This progression requires the receiver to be on thus causing a large demand on power. The Join Network Command specifies an initial on time and a subsequent power duty cycle to allow for extended battery life. Once the initial on time passes (during which the station is scanning channels at a slow rate), the radio will perform a single scan of the control channels followed by a period during which the receiver is off. This period is a multiple of the time required for a single scan and can be a 50%, 33%, 25% or 20% duty cycle. This will increase the time required to find a network.

5.2.10 Reset Network Recovery

If a station is reset (i.e. the battery is replaced), it must re-acquire the network. The network itself cannot determine that the device is missing for the duration of the Device Resync Time. This can be quite long. This is resolved by the hop sequences incorporating the control channels in the sequence more frequently than other channels. Thus a device that is "lost" can tune its receiver to a control channel and await beacons. If the lost device is the network coordinator (the station normally transmitting beacons), then after a short number of missing beacons, another device will send backup beacons. Thus even the "lost" network coordinator will be able to recover the network and resume coordination.

The time to recover is on average as follows:

number of control channels * interval between using control channels/2

Thus if there are four control channels visited every fifth hop and the hop duration is 250ms, then on average the recovery time is 2.5s.

5.2.11 Radio Finite State Machines (FSM)

This section defines the radio state machines and their operation. These FSMs are as follows:

- 1. Initial FSM
- 2. Initiate FSM
- 3. Network Management
- 4. Network Coordination FSM
- 5. Station FSM
- 6. 'I'ransmit FSM
- 7. Receive FSM

The inputs possible for the FSMs are the host interface commands and radio frames discussed in previous sections and various time-outs. The timers are as follows:

5.2.11.1 FSM Timers

Timer	Usage	
NextBeacon	Time until next Beacon Frame. In dwell times.	
NextHop	Time until hop to next channel. In System ticks.	
RFPWindow	Time until RFP Window expires. In System ticks,	
Reservation	Current reservation time for any outstanding receive sequence. In System ticks.	
Backoff	Current value of backoff counter. Stops running if Reservation Timer is running. In System ticks.	
InSync	Maximum time station can maintain synchronization without Beacons. This will improve as more beacons are received. In Beacon times.	
NMTimer	Timer used to terminate states in network management PSM. In System ticks.	
CLRTimer	Timer used to detect failed frame sequences such as RFP-POLL (i.e. no POLL). In System Ticks.	

565-002-051

Revision E

5.2.11.2 FSM Variables

Other variables kept on a station basis are as follows:

Variable	Non Volatile	Usage
network id	ycs	the network id of Microlink that station is attached to.
station address	yes	the address used by the station in the Microlink.
station table	yes	addresses and types of every station in network.
dwell time	no	hop dwell time.
beacon interval	no	number of hop periods in a beacon interval.
rfp time	no	duration of rfp window in system ticks
hop table	yes	table of hop sequences.
current channel	po	current channel radio is tuned to.
hop entry	no	current entry in hop table.
hop sequence	no	current hop sequence.
initialor	yes	did station initiate network.
transferred	yes	did station transfer network.
coordinator	yes	is station network coordinator.
station queue	no	queue of messages from host. Each entry has a retry count which is zeroed upon first entry into queue. Messages will be enqueued again when a chan retry limit is exceeded. Message
		requires use of RFP Window.
retry	no	retry count of current transmit message.
chan retry	no	retry count of current transmit message on current channel.
ready queue	по	queue of messages to hold until after RFP Window.
transmit queue	no	queue of messages that transmit state machine will send.
receive queue	по	queue of messages received by receive state machine.
SAR flag	no	when flag is set: if network coordinator, some stations are out of sync. if not, this station is out of sync.
test alive	no	vector of counter to track Device Resync Time. One per station in network
awake time	no	value set in Data Command from host. Radio must stay in receive mode if non-zero

In the following description, unspecified Inputs are assumed to be ignored. Only the first matched Input in a State is executed. A '*' in the State field means this Input results in the same transition for all States. In the Next State column, a number implies a State in the current FSM and a number:name implies a State in the named FSM. A blank Next State field implies that there is no transition. When a transfer to a named FSM occurs, the current FSM is terminated. When frames are specified as Input, they are assumed to be removed from the receive queue.

The Initial FSM is entered upon module reset. The Join Request parms are set to the broadcast network id and a type of PAN and a Data Rate of any rate. The network management FSM, receive FSM and transmit FSM run asynchronously to other FSMs. A queue from receive and to transmit are assumed. There is also a station queue which holds frames from the host to transmit that may have arrived before an RFP window.

It is assumed that Host Data frames, Network Management frames or Device Management frames are preprocessed as follows:

- 1. If the station is not in the Station FSM or the Network Coordinator FSM, then an error is sent to the host, No Network.
- 2. If the destination is asleep, the frame is put on the station queue
- 3. If the destination is awake and network is not in an RFP Window, the frame is put on the transmit queue.
- 4. If the destination is awake and network is in an RFP Window, the frame is put on the ready queue.

-051 Revision E

ge 29 565-002-051

Microlink Radio Architecture and Protocol

5.2.11.3 Initial FSM

State	Input	Action	Next State
0	Initiate Network	Build Initiate Frame from command and	0:Initiate PAN
	(PAN) and not re-	enqueue to transmit. Set NextBeacon to .33	
	establish	seconds. Send Initiate Network Response	
0	Initiate Network	Build Beacon with required parms and enqueue	1:Network
_	(infrastructured)	to transmit. Set SAR. NextHop=dwell time.	Coordination
	and not re-		
	cstablish		
0	Initiate Network	Tune to random control chan.	1
•	and re-establish	InSync=time on control channel.	
0	Initiate Frame	Build Attach Request (from default or Join	3
-	with matching	Network Request) and enqueue to transmit	
	Network Parms		
0	Beacon Frame	Build Attach Request and enqueue to transmit.	3
U	with matching	Save synchronization and hop information. Set	
	Network Parms	Insync to 1	_
	Join Network	Save parms for Attach Request	O
0		Dave partition for Trimon Scodeson	
	Request and not		
	re-establish	Save parms for Attach Request.	2
0	Join Network	Tune to random control chan.	1
	Request and re-	Set InSync timer for time on control chan.	
	establish	Set inSync timer for time on control chair.	0:Network
1	Beacon for old	Save parms for next hop and beacon time.	Coordinator
	network id and	Test Alive=1 for all stations. Send Initiate	Coordinator
	type	Network Response	1
1	InSync=0 and	Tune to next control chan.	1 1
	total time to re-	InSync=time on control chan.	
	establish not 0		0:Initiate PAN
1	InSync=0	Build Initiate Frame from command and	U;minate PAIN
		enqueue to transmit.	0.05-4
2	Beacon for old	Save synchronization and hop information.	0:Station
	network id and	NextBeacon=Beacon time.	
	type	NextHop=dwell time.	1
		InSync=Max sync time.	
		Send Join Network Response to host.	
2	InSync=0 and	Tune to next control chan.	2
	total time to re-	InSync=time on control chan.	
	establish not 0		
2	InSync=0		0
3	Attach Response	Send Join Network Response to host.	0:Station
-	Frame, accepted,	-	
	Type INET	·	1
3	Attach Response		4
-	Frame, accepted.		
	Type PAN		
3	Attach Response	Send Join Network Response to host	Ó
-	Frame, rejected	·	
4	Beacon	Save synchronization and hop information.	0:Station
7	20000	NextBeacon=Beacon time.	
		NextHop=dwell time.	1.
			I .
٠.		InSync=5s.	i

5.2.11.4 Initiate PAN FSM

State	Input	Action	Next State
0	NextBeacon=0	Build Initiate Frame from command and enqueue to transmit. Set NextBeacon to .33 seconds	0
0	Attach Request, not a duplicate address	Send Join Request to Host	0
O	Attach Request, duplicate address	Build Join Response with status of failure, duplicate address. Transmit Frame	0 .
0	Join Response	Build Attach Response with status indicated by Host. If status is acceptable, save device in network table.	0
0	Start Request	Build Beacon with required parms and enqueue to transmit. Set Test Alive count in all stations 1. NextHop=dwell time.	0:Network Coordination
0	Initiate Request	Build Initiate frame and enqueue to transmit	0

5.2.11.5 Network Management FSM

In this FSM, the following abbreviations are used.

- NC means network coordinator
- NMF means a network management frame.
- NMC means a network management request/response from host.

State	Input	Action	Next State
*	Nmtimer=0	Send NMC response to host, type request time- out.	0
*	NMC Remove Device from network and not NC	Enqueue NMF of type device exiting network (broadcast) to transmit queue. Set NMtimer. Send Device removed from network to host. Terminate station FSM and reset to initial FSM.	0
*	(NMC Remove Host or NMC Terminate Network) and NC	Enqueue broadcast NMF of type terminate network to transmit queue.	0
*	NMC Request Device take over network and not NC	Send NMC Response 8006 to host	
*	NMC Request Device list and NC	Build list and Send NMC Response 8005 to host	
*	NMC Terminate Network and not NC.	Enqueue NMF of type request termination to transmit queue. Set NMtimer	2
*	NMF request to terminate and NC	Send NMC request to host	
7	NMF request device list and NC	Enqueue NMF response 8005 and device list including this device to transmit queue.	
*.	NMF request device list and not NC	Enqueue NMF response 8006 to transmit queue.	
0	NMC Request Device take over network and NC	Enqueue NMF of type Request Take over network to transmit queue. Set NM timer.	1
0	NMC Request Device list and not NC	Enqueue NMF of type Request Device list to transmit queue, Set NMTimer	0

Network Management FSM (continued)

State	Input	Action	Next State
0	NMF request transfer NC and NC	Send NMC request to host	4
0	NMF request transfer NC and not NC	Enqueue NMF response 8002 to transmit queue	0
0	NMF response 8001 and not NC		
0	NMF response 8005 and not NC	copy device list and send NMC response to host	0
1	NMF response 8001 and NC	Terminate Network Coordinator FSM and start station FSM. Send NMC response to host.	0
1	NMFresponse 8002 and NC	Send NMC response to host	0
2	NMF response 8003 and not NC	Send NMC response to host.	0
2	NMI response 8004 and not NC	Send NMC response to host	0
3	Broadcast transmit complete	Set NMtimer. Send NMC response to host. Terminate network coordination FSM and reset to initial FSM	0:initial FSM
4	NMC response to transfer request status 8001	Enqueue NMF frame to transmit queue. Terminate station FSM. Init Network Coordinator FSM to state 0.	0
4	NMC response to transfer request status 8002	Enqueue NMF frame to transmit queue.	0

5.2.11.6 Network Coordination FSM

The Identify Procedure will check for all stations that this station has not detected traffic from within the Test Alive Count (number of beacons). It will build a list of stations to send Identify messages to and put them on the station queue. If several attempts to Identify a station fail, the SAR (search and rescue) flag is set. Receiving CLR or RFPs from a station will count as detected traffic. Note that after Start Request is received, the Test Alive variable is set to the 1. This will cause the network coordinator to immediately test for stations in the net on the first hop. This will guarantee that all stations in the network are together. Once it is first determined that all devices have synchronized, a Start Network Response is sent to the host.

State	Input	Action	Next State
*	Attach Request,	Send Join Request to Host	
ł i	not a duplicate		
	address.		
	This station is		
	coordinator.		
	Network is		
	infrastructured		·
*	Attach Request,	Build Join Response with status of failure,	
	duplicate address	duplicate address. Transmit Frame	
*	Join Response	Build Attach Response with status indicated by	
		Host. If status is acceptable, save device in	
		network table. Transmit Frame. Test Alive=1	
*	NextBeacon=0	Hop to next channel. Reset NextHop and	1
		NextBeacon to correct values. Build Beacon and	
		transmit. Execute IdentifyProcedure.	
		If station queue not empty, transfer to transmit	
		queue, indicating RFP in RFP Window required.	
+	\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\	Set RFPWindow timer.	
	NextHop=0	Hop to next channel. Reset NextHop Save source address and mark related station	0
1	RFP Frame		"
1	RFPWindow=0	entry as having a message for this station	2
1 1	and (ready queue	copy ready queue to transmit queue.	
1	not empty or RFPs received)		
<u> </u>	RFPWindow=0	<u> </u>	0
1 1	and awake		•
	window not 0		
1	RFPWindow=0	Tune to first control channel and send Beacon	3
1 '	and SAR	Time to hist condot channel and solid Beacon	,
<u> </u>	RFPWindow=0	Enter Sleep mode	0
2	Data Frame and	Send Data Command to Host	2
_	more expected	2014 244 COMMING W 4100.	-
	frames		
2	Data Frame, no	Send Data Command to Host	2
_	more expected		
	frames, and not		
1	all transmitted		

2	All received, All transmitted and awake window not 0		0
2	All received, All transmitted and SAR	Tune to first control channel and send SAR beacon	3
2	All received, All transmitted	Enter Sleep mode	0
3	Beacon Transmit Done and more control channels	Tune to next control channel and send Beacon	3
3	Beacon Transmit done and no more control channels	Enter Sleep mode	0

35 565-002-051

Microlink Radio Architecture and Protocol

Revision E

5.2.11.7 Station FSM

The AdjustClock procedure will sample beacons over a long time period (on the order of 10s of seconds) and determine the delta between the network coordinators clock (which is the network clock) and this stations clock. It will adjust the station clock in the absence of beacons.

The ModifyClock procedure will determine if the network clock in this station should be modified based on the calculations of AdjustClock. It also will set SAR if it is determined that sync can no longer be maintained by checking the InSync timer.

State	Input	Action	Next State
*	NextBeacon=0	Hop to next channel, Set NextBeacon and NextHop to correct values. If station queue not empty, transfer to transmit queue, indicating RFP in RFP Window required. Execute ModifyClock. Set RFPWindow. If station is acting as backup beaconer, send backup beacon	1
*	NextHop=0	Hop to next channel. Set NextHop to correct value.	1
1	Beacon Frame (not backup beacon)	Set Network Clock and other parameters. Execute AdjustClock.	0
1	RFP Frame	Save source address and mark related station entry as having a message for this station.	0
1	RFPWindow=0 and (ready queue not empty or RFPs received)	copy ready queue to transmit queue.	2
1	RFPWindow=0 and swake window not 0		0
1	RFPWindow=0 and SAR	Tune to first control channel	3
1	RFPWindow=0	Enter Sleep mode	0
2	Data Frame and more expected frames	Send Data Command to Host	2
2	Data Frame, no more expected frames, and not all transmitted	Send Data Command to Host	2
2	All received, All transmitted and awake window not 0		0
2	All received, All transmitted and SAR	Tune to first control channel.	3
2	All received, All transmitted	Enter Sleep mode	0
3	Beacon	Set Network Clock and other parameters. Execute AdjustClock.	. 1

5.2.11.8 Transmit Framc FSM

This FSM does not illustrate fragmentation. The inputs are either a frame at the head of the transmit queue, the backoff timer or the CLRTimer. For simplification, frames remain at the head of the queue until acted upon by an Action.

State	Input	Action	Next State
0	Frame in transmit	if Beacon then backoff = backoff_tablc[0]/2	1
	queue	else backoff = backoff_table[0]	<u> </u>
1	backoff=0.	transmit frame. remove from queue.	0
	medium is idle.	-	
	head of queue is		
	Beacon.		
1	backoff=0.	transmit frame, remove from queue.	5
	medium is idle.	backoff=backoff_table[chan retry]	
	head of queue is	_	
	broadcast.		
1	backoff=0.	transmit RFP on radio. Set CLRTimer.	2
	medium is idle. In		
	RFP window.		
1	backoff=0.	transmit RFP on radio. Set CLRTimer.	3
	medium is idle .		
	RFP required.		
1	backoff=0.	transmit frame on radio, Set CLRTimer	4
	medium is idle.		
1	backoff=0.	delete head of transmit queue, send Data	0
	retries used up.	Transmit status to Host.	 _
1	backoff=0. chan	retry = retry + 1.	5
	retries not used	chan retry = chan retry+1	
	up.	backoff = backoff table[chan retry]	
1	backoff=0. chan	put frame back on station queue and save retry	0
	retries used up.	count	
2	POLL received.	put frame on ready queue	0
2	CLRTimer=0.	Delete head of queue and send Data Transmit	5
	retries used up	status to Host.	
		backoff = backoff table[chan retry]	
2	CLRTimer=0.	retry=retry+1. put frame back on station queue	0
		and save retry count	1
3	POLL received.	transmit frame at head of transmit queue, set	4
		CLRTimer.	+-
3	CLRTimer 0.	Delete head of queue and send Data Transmit	5
	retries used up.	status to Host.	1
	CY DON	backoff = backoff table chan retry	0
3	CLRTimer=0.	retry=retry+1	١
	chan retries used	put frame back on station queue and save retry	-
3	CLRTimer=0.	count retry=retry+1	1
٠	CLKIMET-U.	retry=retry+1 chan retry=chan retry+1	1 *
		backoff=backoff table[chan retry]	
	<u> </u>	DACKOH-DACKOH BIOTE CHAILTERY	

4	CLR received.	delete head of queue. send Data Transmit status to Host. backoff=backoff table[chan retry]	5
4	CLRTimer=0. retries used up.	Delete frame and send Data Transmit status to Ilost. backoff=backoff table[chan retry]	0
4	CLRTimer=0.	retry=retry+1 chan retry=chan retry+1 backoff=backoff table[chan retry]	1
5	backoff=0.		0

5.2.11.9 Receive Frame FSM

Every received frame will set the Reservation Timer by the reservation within it. The reservation is assumed to be from the beginning of the frame. It is possible that this value may be used and then the frame has an invalid FCS. In that case it is optional to honor the reservation value. Only frames with good FCS checks and a Network Id matching the station's network id are processed.

This FSM does not illustrate the usage of fragmentation.

State	Input	Action	Next State
0	CLR to this station	Pass to transmit FSM.	0
0	POLL to this station	Pass to transmit FSM	0
0	RFP to this station	Enqueue frame. Transmit POLL on radio.	0
0	Broadcast RFP	Enqueue frame.	0
0	Unicast Frame to this station	Enqueue frame. Transmit CLR on radio.	0
0	Broadcast Frame	Enqueue frame.	0
0	Frame to other station	if this station is network coordinator, indicate that frame's source station has had activity	0

COLETE BY BELLED

APPENDIX C

Intermec

A UNOVA Company

Release Date: 06/12/1998	Documentation Type and Subject:	Documentation No.: 561-002-036
Authors: Tom Schuster	Theory of Operation	Page: 1 of 9
Authorization: Pat Kinney	Wireless Pcrsonal Area Network	Revision Level: A 06/12/98

Change Initial Release Date 6/12/98

Author
Tom Schuster

1.0 INTRODUCTION

This document provides the theory of operation for the short range radio transceiver module to be referred to as a wireless personal area network (WPAN). The WPAN module is intended for use in portable, handheld products.

The WPAN module will function as an RF modem. The implementation of this module will consist of an RF transceiver, a digital controller ASIC and the antenna. The architecture of the RF transceiver is a single conversion receiver and a direct launch transmitter. The architecture was chosen for its simplicity and ease of implementation which both translate to lower cost. The WPAN module includes all radio control, protocol implementation and host interface. The WPAN protocol is described in document 565-002-051. The hardware specification is defined in document 565-002-050.

This document also refers to the schematic and assembly drawings for the module. References to schematic designators are based on the 144-781-007 version of the schematic.

The 144-781-007 version of the schematic can be found in APPENDIX H

1.0 WPAN Module Operation

1.1 RF Transceiver

The RF transceiver architecture is a single down conversion receiver and a direct launch transmitter. The RF transceiver circuitry is captured on page one of the schematic. The input to the antenna is filtered by a bandpass filter, routed through a T/R switch, amplified and down converted to an IF frequency of 110.592 MHz. The IF signal is hard limited and baseband data is recovered with a quadrature detector. The output of the detector is sliced with a comparator and connects to the digital ASIC. In transmit mode the PLL is programmed to the desired channel and the data from the digital ASIC is filtered, attenuated and used to modulate the VCO control voltage.

U3 and U8 are linear regulators for the transceiver circuitry. U3 is a 3.3 V regulator and provides power for the receiver chain. The load on the receiver regulator is 30 - 35 mA. U8 is a 3.6 V regulator and provides power for the VCO and the PLL charge pump. The load on the U8 regulator is about 20 mA. The 3.6 V regulator provides a wider tuning range for the VCO as compared to a 3.3 V.

The antenna connection is referenced as PD1. The pad serves as a soldering point for either the coax pigtail of the basestation antenna or the spring finger connection for the scanner screw antenna. The L102 inductor is used for matching and as a block for harmonics of the VCO before they can radiate out on the antenna port. L1 is used as for ESD protection, its value chosen to be resonant at 2.4 GHz, presenting an open circuit to that node at that frequency. An added feature of this shunt inductor permits verification of the connection of the spring finger to the scannner screw antenna. PF1 is the pad for attachment of the shield braid of the base antenna coax cable. LC1 is a dielectric bandpass filter with a pass band from 2400 to 2500 MHz. Insertion loss of the filter is approximately 1.5 dB. C1 is a coupling and matching capacitor. All three RF ports of the UPG152TA GaAs FET switches are dc biased internally and must have a dc block on each. The U1 switch is used for a transmit/receive (T/R) switch, routing the signal from the transmitter or to the receiver. A high (+3.3V) on pin 6 and a low (0V) on pin 4 of U1 indicates receive mode. Conversely, high on pin 4 and a low on pin 6 of U1 indicates transmit mode.

1.1.1 Receiver

Continuing to the receiver from the above paragraph. C38 is a coupling and matching capacitor for the switch. L3 is matching component for the first LNA. U4 is a GaAs LNA with approximately 12 dB of gain and draws about 5 mA of current. C78 is a coupling capacitor. Its value was chosen to provide a short at 2.4 GHz. L9 is a matching inductor for the input of U5. U5 is the same component as U4 and provides about 12 dB of gain for 5 mA of current drain. C37, C80 and C36, C79 are supply bypass caps. Values were chosen to present shorts at the fundamental and third harmonic of the VCO. The R34/L8 and R19/L10 components are recommended by the manufacturer to promote stability at lower frequencies. At 2.4 GHz the inductors are open circuits and cause

Confidential

minimal loading effects. C43 is a coupling cap. L4 is a matching inductor for the RF port of the mixer. U7 is GaAs down conversion mixer and has approximately 6 dB of gain and draws about 9 mA. C85 and L11 provide the impedance transformation at 110 MHz to match the IF port of the mixer. L12 is a IF choke and provides dc current to the mixer. C86 is a coupling cap, it's value is chosen to be a short at 110 MHz. L13/C55 and L6/C58 are the manufacturer's recommended matching components for the SAW filter. The SAW BPF has a center frequency of 110.592 MHz and a nominal 3 dB bandwidth of 1.52 MHz. Insertion loss of the filter is about 4 dB. C59 is a coupling cap. C60 provides a short for RF frequencies prior to the IF filter. The IF amplifier, U10, has approximately 16 dB of gain and draws 5 mA. C64 is a coupling capacitor.

U12 is the demodulation IC. The IC consists of a limiter with about 50 dB of gain and a quadrature demodulator. The IC consumes about 8 mA of current. The input is an FM modulated signal at 110 MHz and the output is a baseband analog representation of the data. C30/C74 and L7 comprise the quadrature tank. The R13 resistor is used to de'Q the tank circuit, effectively widening the frequency response of the circuit. The tank circuit center frequency is shifts with parasitic capacitance, and variations of the tank components. For this reason the C30 and L7 are specified as 2% tolerance parts. Changes in board construction, layer thickness between layers 1 and 2, and trace length and width will also shift the center frequency of the tank. As an example, C74 was added when the layer 1 to 2 dielectric thickness changed from 7 to 14 mils early in the development. This change reduced the parasitic capacitance of the interconnect and C74 was added to compensate. The bandwidth of the tank circuit is approximately 10 MHz. This provides adequate bandwidth for component and board variations.

R12, C28 and R11 are used in the Received Signal Strength Indicator (RSSI). The signal is typically used to check a channel for activity. Revision 1 of the WPAN does not use the RSSI function due to the slow response times of the RSSI circuit and the ADC available on the H8.

R30/C67 and R32/C70 provide filtering of the analog data prior to slicing. The true output of the demodulator is connected to the non-inverting input of the comparator. The complement output of the demodulator is dc blocked and connected to the inverting input of the comparator. The inverting input node is pulled to the same dc voltage as the non-inverting input by R36. This method provides a simple threshold for the comparator to convert the analog data to digital data. A draw back of this approach is that when ever the receiver is on, the output of the comparator will toggle like random data and can also cause the ASIC to falsely trigger on noise. U106 is a singe comparator with response time of about 100 nS. The comparator draws less than 0.5 mA of current.

1.1.2 Transmitter and Synthesizer

The transmitter is direct launch type, which means there is no IF frequency and the VCO is tuned directly to the transmit channel center frequency. The VCO is referenced as OSC1. The VCO provides a output signal of about +8 dBm and consumes about 20 mA.

Confidential

The RF output of the VCO is matched with C13 and L5. R25, R24 and R4 compose a T-pad attenuator and reduce the signal level by about 3.5 dB. C14 and R5 provide the RF reference signal for the synthesizer. LC2 is a lumped LC low pass filter use to attenuate harmonics of the VCO. L2 is a matching inductor for the U6 switch. C12, C8 and C42 are coupling capacitors. U6 is a GaAs FET switch used to route the VCO signal to the mixer LO port or out to the antenna. A high on pin 6 and a low on pin 4 of U6 indicates transmit mode. Conversely, high on pin 4 and a low on pin 6 of U6 indicates receive mode. R20, R21 and R22 form a T-pad to attenuate the LO to the mixer by about 5.4 dB. U2 is the third GaAs FET switch. U2 was added early in the development to decrease LO leakage. In transmit mode the signal is passed through to the input T/R switch and in receive the leakage signal is terminated in to a PI pad.

U9 is the synthesizer IC. All PLL control signals from the digital side of the board are bypassed by capacitors C87 – C82 to contain any RF energy inside the RF shield. The counters of U9 are supplied power from the digital regulator(REG1), the charge pump is supplied by the VCO regulator(U8). The loop filter consists of C15, C16, C18, R7 and R8. The loop bandwidth is approximately 4KHz. R8 is used for fast lock mode. During fast lock mode U9 grounds pin 1, which effectively doubles the loop bandwidth of the synthesizer and allows the loop to lock faster. The modulation is introduced in to the closed loop by R104. The TX_1M signal is the digital transmit data from the ASIC. The 3.3V signal is divided down by the resistive divider formed by R104 and R6. The R104/R6 divider together with the gain of the VCO control the frequency deviation of the transmitter. C102 provides filtering of the data which helps to limit the spectral content of the transmitter to the channel width of 1.536 MHz.

1.2 Transceiver Control and Host Interface

The digital side of the module performs all the host interface, power management, radio protocol and control functions for the radio.

On page two of the schematic the host interface connector is a 12 pin ZIF flex connector and is referenced as J100. The pinout of the connector is shown in the table below.

Pin	Pin	Description	Comments
1	TXD	Data to transmit out radio - input	Idle high, when active "1" is high "0" is low
2	RXD	Data received by radio - output	Idle high, when active "1" is high "0" is low
3,4	GND	Ground	
5,6	Vin	+3.6 V to 6 V	
7	RTS	Request to Send-input	Asserted = HIGH
8	CTS	Clear to Send-output	Asserted = HIGH
9	RID	Ring Indicator-output	Asserted = HIGH
10	DSR	Data Set Ready-output	Asserted = HIGH
10	RESETL	Input	Asserted = LOW

12 +3.3V Regulated 3.3V to Host can be used for 5V to 3.3V logic level converters - 10 mA max	12	- output 3.3V logic level	
---	----	---------------------------	--

NOTE: There is no current limit protection of the 3.3V supply on pin 12. It is left to the host design to insure a load of less than 10 mA.

The microprocessor is a Hitachi H8/3048 referenced as U102. The processor contains 128KB of flash memory and 4KB of SRAM. The flash memory is sectioned into a lower and an upper bank. The lower portion of memory contains the reset vectors and the flash programming algorithm, along with the program code. The upper block is empty the first time the part is programmed. Any subsequent program code updates are written to the upper block of flash. The code is designed to code start execution in the lower bank. The code checks to see if the upper bank has been programmed. If it has then the code continues to run out of the upper bank. The 4KB SRAM is used for stack, variables and message buffers. The H8 runs with a 7.3728 MHz clock that is generated on the ASIC. The clock from the ASIC is not a 50% duty cycle since the ASIC divides the 22.1184 MHz crystal by three. The H8 has a duty cycle correction circuit on board the output of this is sent back to the ASIC on the PHO pin.

Q101 is a FET switch that is for re-flashing the H8 flash memory. The switch is controlled by the H8 and applies 12 V to the Vpp pin of the H8 when the part is to be reprogrammed.

REG1 is the 3.3 V linear regulator for the digital circuitry on the module. Total current for the digital regulator is about 35 mA. The regulator also performs the reset function for the processor and ASIC. The capacitor C106 is chosen to allow for a reset pulse of approximately 20 mS. The delay pin of the regulator is on open collector. This current source is used to charge C106. The charge time produces the reset pulse. For a manual reset the delay pin is pulled to ground, discharging the capacitor and produces a reset pulse of about 15 mS. CR103 is used to keep the delay pin node high impedance in the not reset condition so C106 does not discharge. In reprogramming mode, 12V is applied to the input of REG1 in order to program the flash memory. Power dissipation of REG1 limits the maximum ambient temperature to 30 C for reprogramming mode.

U101 is a 128 byte EEPROM and is used to store information such as the serial number, country code, and other network parameters. The table below shows the memory map of the 128 Byte EEPROM.

EE address	Data	Length (bytes)
0	22MHz Warp	1
1	Country Code	1
2	Network ID	2

Confidential

4	Network Address	2
4	Network Status	1
6	Reserved Bytes	7
7	Station Table	40
14	"Free Space"	70
54		4
124	Serial Number	•

The 4 pole switch SW100 is not loaded on this revision of the board. The intended use of the switch is to provide a means for a hardware address to distinguish different types of host devices that the WPAN module is plugged into.

The ASIC is on page three of the schematic and is referenced at U103. The ASIC is a 0.8 um CMOS gate array manufactured by Hitachi. The gate array is approximately 6000 gates. The functions of the ASIC include PLL programming, power management, HDLC and NRZI encoding of the radio transmit data, and clock recovery and HDLC, NRZI decoding of the radio receive data. The data must be encoded to provide adequate transitions for the transmitter such that the PLL circuit can not track the modulation. The ASIC adds an 80 bit header of a 1/0 pattern prior to each packet send to the radio. The header is required for the transmitter and receiver to settle to proper de levels.

The ASIC has two crystal oscillator inputs. The 32.768 kHz oscillator circuit is comprised of Y100, U100 and U104. This oscillator runs whenever power is applied to the module. The 32.768 kHz signal is used to clock a 16 bit counter on the ASIC which is used for beacon timing and power management. The 22.1184 MHz oscillator is comprised of Y101, U105, and Q100. Q100 is used as a switch control by the ASIC to turn on and off the supply voltage for the 22.1184 MHz oscillator. The oscillator is disabled in standby mode to reduce current draw. Varactors CR101 and CR102 operate in series with capacitors C127 and C128 to provide the load capacitance for the crystal. The voltage from the DAC on the H8 biases the varactors, allowing the frequency of the crystal to be tune to within 1 ppm at manufacturing test. The tuning is done via the host interface and must be done in gradual steps. If the tuning voltage is changed in too large of steps the frequency of the crystal will change too fast and produce a short pulse on the CPU clock. The short pulse will in turn cause the processor to lock up.

2.0 Board Construction

The PCB for the revision 1 of the WPAN module is designed to fit in the handle of the SabreTwo'th scanner. The total thickness of the board is 0.062 inches containing eight metal layers. The layer definition is shown below:

- Layer 1 Analog components
- Layer 2 Analog ground
- Layer 3 Analog supply and analog signal
- Layer 4 Analog ground
- Layer 5 Digital power
- Layer 6 Digital signal

Confidential

Layer 7 - Digital ground Layer 8 - Digital components

With this layer definition and the use of blind vias, the board can be viewed as almost two separated boards with about 20 signals traversing the digital/analog boundary.

The dielectric thickness between layers 1 & 2, 2 & 3, and 3 & 4 is specified on the fabrication drawing to be 14 mils +/- 1 mil. The component layers use ½ oz copper and the interior layers use 1 oz copper. Using these dimensions the 50 ohm microstrip trace width for the RF side of the card is calculated to be 24 mils. The 50 ohm stripline trace width is calculated to be 13 mils. The only RF signal on layer 3 is the VCO feed back to the PLL circuit.









MICROLINK SPECIFICATION

OGIEZES . OZELEO

2.400-2.483MHz
1.005 Mbps
2FSK
Asynchronous serial
Compliant
Compliant
1.3" X 3.9" X 0.3" Frequency Range
Data Rates
Modulation
Bus interface
FCC 15.249
BTSI 300-328
Size

								NOTES
SPECIFICATION	MIN	TXL	MAX	THUS	MI	MZ	OTA	
10000								
Generaliza Temperahira	-20		99	ပ္	-20~60	-20<>09	-2000	
Operant Languaine			96	٥				
Storage Temperature	۲,		2	اد				
Power Supply								was a second of the second of
Operating Voltage	3.6	4.8	0.9	Λ	3.6 min	3.6 min	3.6 min	Battery supply regulated down to 5.5 v on mount
Transmit Current			89	шĄ	115	95	9	22.1184 MHz crystal
Descrite Current		œ	100	Αm	140	125	06	22.1184 MHz crystal
NOCEIVE CHICKLE		30		mA A	55	38	15	Processor has clock but in its sleep mode, radio our
Standoy Current		3	,	Αm		œ	1.8	Processor doesn't have clock
Sleep Current		,	¥			15	7.1	Network maintenance only
Average Current		٥		¥.		2		
Timing .							0 7 6	Descent has clock but in its sleen mode, radio off ->receive
Standby to RX			5.7	Sui		2 m 8.1	CID 7'1	first valid bit
			٤	9		O 7mg	8 9 mS	Processor doesn't have clock, radio off->receive first valid bit
Sleep to RX			27	3				W. I'- It- author and arrive
Dower In	_		150	Sm	120mS	120mS	[35 田S	Power applied to acuve teceive
10 to 0 V			200	SI	740uS	640uS	400 uS	
IV O IV			999	يِ	S0099	490uS	480 uS	
KX to 1A.								





NOTES

M6

MZ

¥

UNIT

MAX

TYP

MIN

SPECIFICATION

Transmitter					Ì			
Power Output	9-	4-	.2	dBm	-1 +/- 1.5	-1	-2	conducted
Frequency Stability	-25		+25	ppm	+8,-6	8- ' 2+	9-/+	Temperature stability only, initial trimmed to +/-1 ppm
Emissions								
Sourious Emissions - US			-50	dBm	09-	-60	-60	In Band
Conducted -ETSI			-47	dBm	-55³	-55,	-55	Out of Band > 960 MHz
niceione			-50	dBm		09-	-60	In Band
Radiated -BTSI			47	dBm		-324	-52	Out of Band > 960 MHz
Innut								
Sensitivity		7.17		dBm dBm	-81 +/- 4	, 08-	c-82°	BER=1c-5 @670 kbps M1, 1 Mbps M2
		:		dr.		, 00		RFR=1e-5 @250 kbps M2
		ļ			ļ			Orecational
Max Input Power			-20	dBm	0	9		Operational
			+10	dBro				Survivability, by design, 1st LINA max power in - 113 will
						_		

Bench testing typically done at 3.6 V.
 Rainge of 18 Model 1s sent to Welch Allyn, measured at 25 C.

Highest spur is RX LO at Ch 50 Highest spur is RX LO fundamental and third harmonic

Using signal generator modulated with PN code data as transmitter.

Manufacturing test sets simil to 82 dB attenuation between DUT and golden unit for ping-pong test.

APPENDIX E



Page 1

S00E0000756C696E6B2020206D6F741E \$10700000000100F7 S1070038000FEF10B2 S10700E4000FEF1402 S10700E8000FEF18FA S1070060000FEF1C7E \$1070030000FEF20AA S10700E0000FEF24F6 S10700B0000FEF2822 S1070050000FEF2C7E S11301007A07000FFF107A055A0000007A06000FE4 \$1130110EF100480188838EC38ED7F5F7040F8FFEA S113012038C05E006C807A00000038020AD00100FA S113013069E001006F6000047A20123456784604A6 \$11301405A0001545E0066B40D0047045A0001547D S11301505E0066D47A0000003A520AD001006FE0D3 S113016000047A000000392C0AD001006FE0000876 S11301707A00000038360AD001006FE0000C7A00E3 \$1130180000036EC0AD001006FE000107A00000095 🟂 113019038AC0AD001006FE000147A0000003D0280 **§11301A00AD001006FE000187A00000037AE0AD0D0** \$11301B001006FE0001C18886AA8000FEF305E0091 \$11301C004385A0003181B977A0012345678010039 \$11301D06BA0000FEF140FF001006B010000010091 \$11301E06981010069705D000B9754701B877A0167 *\$10901F0000000010AF109 置\$11301F6F00118885E00641A6E780001A8FF4604B0 S11302065A0002146E78000147045A00021AF8557F S11302166EF800016E78000138DC7FDE70600B87B3 \$1130226547019006BA00008001E7A000008001123 \$11302367D0072207900000F6BA0000800167FCBAA [₩]\$113024672007FCB72107FCB7020F8FF38C9F8FAA2 S113025638CD7FD37270F8BF38D15E004A825E0013 £\$1130266300C7FF472207FF570007FF57020067FD6 〒S11302767FD670307FD672207FD6721019006BA09D S1130286000800127A00000800117D007020790031 S1130296000B6BA00008001E5A0001EC7A0100084E \$11302A60014691869101D0847045A0002A80D8035 S11302B654706DF60D065E0002A209606BA000087C S11302C600126D7654700D097A0000080012690157 S11302D60991698154705E0002A26B21000FF1E05E S10702E60910547033 S11302EA5E0002A26BA0000FEF3254700D087A016F S11302FA000FEF326910129012901290791074154F \$113030A69906680547028CE1108E80F5470010071 S113031A6DF67A06000FEF305E0002A26B21000828 S113032A001219016B20000800181D0142045A002A \$113033A038019006BA00008000EF80168E87ECF5C S113034A732046045A00036E04807FD67210190083 \$113035A6BA00008000E7FF472207A0000080011D6 \$113036A7D007040067F01805A0003780180686826 S113037A47045A00037601006D76547001006DF546 \$113038A0F850D9946045A0003AA5A00039E0FD0FA \$113039A0B7568890D901B590D0047045A00039880 S11303AA01006D75547001006DF501006DF40F853F S11303BA0F946F79000C46045A0003DE5A0003D2E4

S11303CA0FD00B756C4968890D901B590D004704B1 S11303DA5A0003CA01006D7401006D75547001005E \$11303EA6DF601006DF50F850F966F78000C4604C3 S11303FA5A00042C5A000420685868691C98460458 S113040A5A00041C68581750686E175619605A0027 S113041A042E0B750B760D801B580D0047045A00E9 S111042A0402190001006D7501006D76547016 S11304385E003D9E5E0005025E0002285E0022CE3C S10704485A00057CD1 S113044C01006DF601006DF50D0D18DD020504803B S113045C7A06000FEF946868A810443E68680A088E \$113046C68E87A06000FEF9568681750790800065B S113047C5280010078806BA1000FEF340DD06869B5 S113048C175179090006529178106AA8000FEF38B9 S113049C68688801E80F68E8FD01030518886AA8F4 S11304AC000FEF300CD801006D7501006D7654709F S11304BC6DF5020504807A01000FEF946A2D000F8C S11304CCEF956818188DED0F68181A0868980CD9F0 S11304DC17517909000652917A11000FEF3401007B S11304EC691001006BA0000FEF966E190004030550 \$11304FC0C986D75547018886AA8000FEF941888BE S113050C6AA8000FEF9554706A28000FEF9454708A S113051C01006DF66A28000FEF94474A7A06000F23 S113052CEF96558C0C88470EA8014714A802471E59 S109053CA803472A403029 S1080542010069805E88 S1130547004D8A40260100696001006B21000FF20B S113055702400C0100696001006B21000FF1FE5D90 \$1130567104008010069605E0045D85E0017E0018D S10E0577006D765470559E40FC5470DB S113058201006DF601006DF56DF40D050C9C7A0603 S1130592000FEF9A5E003E84010069E0475E0100AD S11305A26960F9206E89000B010069606F85000E95 S11305B2010069606B21000FF17E6F810010010060

S11306026D7501006D76547001006DF66DF50C8DFB S11306127A06000FEF9EF8206EE8000B7900001AAC S11306226FE0000CF8056EE800167900FFFF6FE03A S1130632000E6B20000FF17E6FE000106B20000FA4 S1130642F17C6FE00012F8046EE800176A28000FCC S1130652F188E80F6A29000FF160A92046067901A2 S1130662008040021911088908D96EE9001A6A2823 S1090672000FF1886EE8A0 S1130678001B6B20000FF1B86FE0001E6B20000F09 S1130688F1BA6FE000206B20000FF1866FE00022C2 S11306986A28000FF18B6EE8002419006BA0000F84 S11306A8F1B66D7501006D76547001006DF60D0696 S11306B80CEE47060C685C00FF487A00000FEF9EBA S11306C801008B21000FF1FE5D107A06000FEF9E0A S10506D86A288A S11306DA000FF1896EE800256A28000FF18A6EE896 S11306EA00267A00000FF1B669010B5169811B518A

S11305C269606B21000FF17C6F8100127A05000FC4 S11305D2F1B069500B5069D01B50010069616F90F2 S11305E200140100696018996E89000A69507960E3 S11305F20FFF69D0010069666EEC00176D7401008B

S113076A6F0C00087A03000FF1BE7A05000FF1C47A S113077A6838470EA801476CA8025870009C5A00B2 S113078A086E010069606F0000186BA0000FF01872 S113079A6BAC000FF016010069666F66001C6BA64D S11307AA000FFDC26B21000FF18617717A00000851 S11307BA95445E006C5A69D06A28000FF188175074 S10907CA6951177153018F S11307D069D169507908002052806BA0000FF1C6DE S11307E0F80168B819006BA0000FF1C2402E6950DF S11107F01D04457A010069666F6600186B20CF S11307FE000FF018190619C66B20000FF016090623 S113080EF80268B80D4052601770695553506BA0CA S113081E000FF1C0404A6B20000FF1C61D04454085 \$113082E010069666F6600186B20000FF018190638 S113083E19C66B20000FF0160906F80368B80D40B0 S113084E526017706B21000FF1C653106B21000F0D S113085EF1C079090020529119106BA0000FF1C25A S113086E01006D7301006D7401006D7501006D76EC S113087E547001006DF601006DF401006DF37A04FD S113088E000FF1BE7A06000FF1D6010069606E0802 Ш S113089E001A7358586000F87A03000FF1EA7A01CF S11308AE000FF18C6910730846786910700869900E S11308BE010069606F0000226BA0000FF186010039 \$11308CE69606E0800246AA8000FF18B175079082E S11308DE001852807A1000006D3E01006BA0000FCC S10908EEF1D00100696075 S11308F46F0000206BA0000FF1BA010069606E085C S1070904001B6AA8BE S1130908000FF1886AA8000FF1E2010069616F1114 S1130918001E791100206BA1000FF1B8189968C95D S11309287900000569B0401E010069606E08001A6C S11309387348470A188868C87900000540066B2080 S1130948000FF1BA69B0010069606F0000106BA074 S1130958000FF180010069606E0800256AA8000F85 S1130968F18919006BA0000FF1C80100696001004A S113097869616F0000186F11000819106BA0000F4F S1130988F1E06848A80347065C00FDAA400819007E S11309986BA0000FF1C601006D7301006D740100B6 S11309A86D76547001006DF67A00000FF1905E00C8 S11309B83DF00F8647166E68000A70786EE8000AE4 S11309C80FE1790000025E00044C40DC01006D7602 S11309D8547001006DF601006B20000FF198460475 S11309E81888401C7A00000FF1985E003DF00F86CD \$10909F8470C0FE1790039

S11309FE00025E00044C40E6F80101006D7654706E S1130A0E01006DF68A28000FF1BEA80346527A0063 S1130A1E000FF1C869010B5169816B20000FF1C4FD S1130A2E1D01453C19006BA0000FF1C87A06000F9A

S1070A3EF1E06B2054

\$11306FA6FE1001C7A01000FF1B069100B50699088 \$113070A1B506FE00014691079600FFF69906E68DE \$113071A001A734847186B20000FF1B679200018A5 \$113072A430C7A000000001A0AE07D0072400100BE \$113073A6D76547001006DF601006DF501006DF4DB \$113074A01006DF37A06000FF1D6010069606F00AB \$113075A001C6B21000FFDC219100D040100696011 S1130A42000FF1C06961090169E17A01000FF1C681 S1130A5269100B50699079200020451019006990A3 S1130A626B20000FF1C26961090169E101006D7631 S1130A72547001006DF65C0007800F8647206E6893 S1130A82000AE8FCC8C06EE8000A6B20000FF1BA45 S1130A926FE000066B20000FF1666FE000080100B2 S1130AA26D76547001006DF601006DF56DF4010070 S1130AB26DF37A03000FF1F77A05000FEF9A1A80AB S1130AC2010069D018440C4C5A000BCE0CCE1756B8 S1130AD2790E001E52E67A16000FF0206E68000AA4 S1130AE27368587000E46E68000AE803470EA801B0 S1130AF24730A802587000965A000BCC6F6000066B S1130B021B506FE00006586000C0790000086FE0D7 S1130B1200067A0000000000A0AE07D0070005A0014 S1130B220BCCA402584000A26F600006474EF9089D S1090B3269605C00FA4A50 S1130B38010069505870008C010069507901000A5D

S1130B486F81000C01006950F90C6E8900160100D0 S1130B586950F9036E89000A0CC8175001006951DD S1130B686F900008010069517A00000FF1905E004F S1130B783E160A04404EF8426EE8000A6B20000F45 S1130B88F1666FE00008403C6A28000FF160A82075 S1130B9846166B20000FF166472A6F60000846244A S1130BA818886EE8000A401C683846127A00000F5C S1130BB8F18C7D0070206A28000FF16440046838C5 \$1130BC81A0868B80A0C6A28000FF14C1C8C585093 S1130BD8FEF401006D736D7401006D7501006D768E S10B0BE8547001006DF67A0659 S1130BF0000FF1E45E0002A269E0460679000001FC S1130C0069E0F8016AA8000FF1CA6B20000FF18CAB S1130C107348470A180018885C00FA96404A79001D S1130C2000406BA0000FF1FA5E0002A26BA0000F5F S1130C30F1FC6A28000FF160A820472C5C00FDCE6F S1130C406B20000FF16247206B20000FF1BA6B217B S1130C50000FF1EA19106B21000FF1621D10450815 S1130C60F020F8015C00FA4A18886AA8000FF18E97 S1130C705C00FD3801006D76547001006DF60100D2 S1130C806DF501006DF401006DF301006DF21B9729 S1130C907A03000FF1617A04000FF18B7A06000FDA S1130CA0F1D618886AA8000FF0146AA8000FF14C56 S1130CB019006BA0000FF17E010069606F0000163F S1130CC06BA0000FF17C010069606E080021E82030 \$1050CD06AA80C S1130CD2000FF160010069606E080021E8036AA850 \$1130CE2000FF15E010069606F00001A6BA0000F33 S1130CF2F1BA010069606E08001F6AA8000FF1884A S1130D02010069606F00001C6BA0000FF166010016 S1130D1269606E0800226AA8000FF164010069602C S1130D226E08002068B8010069606E0D001E6A2812 S1130D32000FF1D4175072787908000501C052806F S1130D427A10000070FE010069F06E08000368C8A2 S1130D52010069700B9068081C8D4406684808D825 S1130D6268C8684817507908001852807A10000041 \$1130D726D3E01006BA0000FF1D07A05000FF186E1 S1130D82010069606F00001869D06A28D00FF1D46D

• 7

S1130D927378470E695079202000430679002000B9 \$1130DA269D06A28000FF1884608F8016AA8000F82 S1130DB2F18868384604F80168B8010069606E0871 S1080DC20021E80C5EB5 S1130DC70030F66A28000FF15FA80846067900008C S1130DD72D40047900005468391751521010106BD4 S1130DE7A0000FF1B818DD40260CD8175017700172 S1130DF70069F0010069617A1100000024010069AB S1130E07720AA168197800BAA9000FF14E0A0D0148 S1130E170069606E0800231C8D45CE010069606E71 S1130E270800236AA8000FF14D5C0007025E000268 S1110E37EA010069606E080021737847065EC8 S1130E450065E44006F8025E0064D60B9701006D68 S1130E557201006D7301006D7401006D7501006D03 S1130E6576547001006DF601006DF501006DF40115 S1130E75006DF37A03000FF1697A04000FF1D67A55 S1130E8506000FF15FF8206AA8000FF0140100694D S1130E95406E08001717506BA0000FF1620100693E S1130EA5406E080016E80368E8010069406E080012 \$1130EB5196AA8000FF17A1750101010106DF0017F S1130EC50069417A110000001A7A00000FF16A5E88 S1130ED50003B00B876868A8014606F80868E8406F S1130EE50C68684604F8044002F80C68E81AD56AE8 S1130EF52D000FF17A10351035010069407A100084 U S1130F0500001A0A856C586AA8000FF1686C5868C5 ₹ \$1130F15B86868E80CA80C46066838100868B8680C TI S1130F2538880368B86C586AA8000FF14D17506DDE S1060F35F07A004B S1130F38000FF14E0FD15E0003B00B877C60733055 S1130F484706790100084004790100040C985E0002 S1130F5830F65E0002EA6A28000FF1686AA8000FFA S1130F68F1F601006D7301006D7401006D750100E7 S1130F786D76547001006DF601006DF501006DF495 S10F0F8801006DF37A05000FF1D67A0623 S1130F94000FF0200D0C18CC5A00108A0CCB1753F8 S1130FA41773103310337A13000FF16A6930792000 S1130FB4FFFF471401006B20000FF1D669316F0065 面 S1130FC400121D01586000BC6F3000021D0C5860F3 S1130FD400B26B20000FF17E460E7900FFFE5E0026 S1130FE402F68BA0000FF17E010069506F0000123D S1130FF46BA0000FF17C0DC06AA8000FF160010022 S113100469506F00001069E0F8806EE8000A792CDA \$11310140020473A010069506E0800186EE8000B7E S1131024010069508E08000D88F56EE8000C790023 S113103400106DF0010069517A11000000197A0062 S11310440000000D0AE05E0003B00B8740167A002E S1131054000FF18C7D007010F8FF6EE8000B188807 S11310646EE8000CF8016AA8000FF14C5C0004C29D S1131074010069506F0000106BA0000FF18079002B S1091084000140100A0CFB S113108A6A28000FF17A1C8C5850FF0A19000100D3 S113109A6D7301006D7401006D7501006D765470F5

\$11310AA01006DF601006DF501006DF47A05000F7B \$11310BAEF9AF9057900FFFF5C00F4BC010069505E \$11310CA4756010069506A29000FF1606E890018B9

175

S11310DA18EE401E175617760FE4010069507A106D S11310EA000000190AC078406A29000FF14E688985 S11310FA0A0E6A28000FF14D1C8E45D81756791628 S113110A000B010069506F86000C01006950010050 S113111A6B21000FF1FE5D1001006D7401006D7505 S113112A01006D7654706DF619006BA0000FF1E0A2 S109113A790004136BA010 S1131140000FF18C18EE401617567900001E5260FD S11311507901000178006BA1000FF0260A0E6A28BD S1131160000FF14C1C8E45E019006BA0000FF1E458 S113117018886AA8000FF1CA1800F8015C00F5325B \$11311806A28000FF1886AA8000FF1E218886AA89B S1131190000FF1F7020E04805E0002DC6B21000FE9 S11311A0F1861B5166106B21000FF18619010D1099 S11311B05E0002B8030E6D7654707A00000FF18C55 S11311C06901794104146981F010F8015C00F4E2CA S11311D06A28000FF1886AA8000FF1E218886AA84B S11311E0000FF1F77A0000002CC401006BA0000F7F S11311F0F20218886AA8000FF01454706DF601000A S10B12006DF501006DF47A04A0 S1131208000FF14C7A05000FF0200D097929FFFF32 S1131218475EF60A1811402C0C1817507908001E5E S113122852800AD069001D0946040C1840360C186F S113123817507908001E52800AD06E09000A460227 S11312480C160A0168481CB145CEA60A44040C6899 S11312584012A10A441A68481C81450668480A08CD S113126868C80C1817507908001E52800AD040022A S11312781A8001006D7401006D756D76547001005B S11312886DF601006DF501006DF47A05000FF1D6D5 S1131298010069546E4C000D8CF26B20000FF18C28 S11312A87358586000EC7A06000FF1DC010069609D S11312B8460AF8035C0000EA5A00139A01006960C0 S11312C86E09000A586000900100695001006961C4 S11312D86F000018699001006950010069616E0887 S11312E8001B6E98000B01006960F9806E89000A82 S10712F80100695034 S11312FC010069616F0000146F90000201006960C5 S113130C790100016F810006010069606E8C000C8C S113131C790000106DF001006951010069607A11C7 S113132C0000001C7A10000000D5E0003B00B8757 S113133C01006950F9506E89000B01006950F904E1 S113134C6E8900140100695119005E00044C790087 S113135C0001403C010069606E08000C1CC8462A60 S113136C17546DF401006B21000FF1D60100696074 S113137C7A110000001C7A10000000D5E0003E8D6 S113138C0B870D004604F8804002F8015510190033 S113139C01006D7401006D7501006D7654700100CF S11313AC6DF66DF501006DF401006DF37A06000F16 S11313BCEF9A0C8D7A04000FF1D601006940F907FD S11313CC6F0000165C00F1AE01006960587000B843 S11313DC7A03000FF1DC0CDD4730727D010069608B S10713EC6E8D0018E6 · S11313F001006944010069606F4400186F84000EA5 S11314000CDD4676010069337A000000000A0AB058 S11314107D0070604064010069306E09000A460A6C S1131420010069605E003E4E406A010069406E0939

S11314300018472601006944010069606E4C0018D9 S11314406E8C001901006960F9026E8900180100B0 S1131450693318886EB8000A402001006960189941 S11314606E890018010069337A000000000A0AB08E S11314707D007060F8015E0064D601006960790146 S1131480000C6F81000C0100696001006B21000FEA S1131490F1FE5D1001006D7301006D746D75010046 S11314A08D76547001006DF601006DF501006DF26A S11314B07A05000FF14D7A06000FEF9AF9066B20BA \$11314C0000FF1805C00F0BA01006960475A010026 S11014D069606B21000FF17E6F8100185ED2 S11314DD0003101750010069626FA0001A68584785 S11314ED1C685817506DF0010069607A01000FF106 S11314FD4E7A100000001C5EQ003B00B876858176D S113150D507910000E010069616F90000C010069A3 S113151D6001006B21000FF1FE5D1001006D720181 S113152D006D7501006D76547001006DF501006D4F S113153DF47A04000FF17C7A01000FEFC669406F55 S113154D9000127A05000FF17E69506F90001079AA S113155D00000A6F90000CF8026E9800177A0100D3 S113156D0FEFE069406F90001269506F9000107991 S113157D00000B6F90000CF8036E9800177A0100B1 S113158D0FEFFA69446F94001269556F9500107945 S113159D00000A6F90000CF8016E980017F8036EA6 S11315AD98001601006D7401006D75547001006D85 S11315BDF601006DF57A06000FEFC60F856F50002A S10815CD0E6FE0000EAA S11315D27920FFFF4608F8036EE800164020F80C55 S11315E26EE800160C9947166E580016E87F1750DD S11315F2791000066E69001608896EE900166F55A7 S113160200146FE500147A00000FEFC65E00321476 S113161201006D7501006D76547001006DF50F8146 S11316227A05000FEFE06F1000106FD0000E6F10FC S113163200146FD000146E190016E97F89F76ED971 S113164200167A00000FEFE05E00321401006D759F S10D165254700F816F1000106BA09C S113165C000FF0086F1100146BA1000FF00E7A004C S113166C000FEFFA5A00321401006DF601006DF50B S113167C01006DF401006DF36DF27A03000FF18C2F S113168C7A04000FF18A7A05000FEF9E7C307320E8 S113169C474E684A19664036177601006B20000FD6 S11316ACF1CC0AE0680868C8F8106ED8000A7A0011 S11316BC000FEF9E01006B21000FF1FE5D10400442 S11316CC5E00051C6E58000A734846F40B567926C6 S11316DC000345C47D30722068CA18885E00315AF4 S11316EC6D7201006D7301006D7401006D75010064 S11316FC6D7654705C00F2D60C8846346B20000F67 S113170CF1BC462C6A28000FF18E462401006B2094 S113171C000FF1A0461A01006B20000FF1A846102F \$105172C6B202C

\$113172E000FF1EC46085E0005140C8847041900FE \$113173E547079000001547001006B21000FF1DC2C \$113174E471001006B21000FF1DC6E1900051751D3 \$113175E400219110C98547001006DF67A06000FB0 \$113176EF1DC01006960476401006B20000FF1D6C3 S113177E6F00000E7920FFFF4752010069606E0969 S113178E000A461201006B20000FF1D601006961B8 S113179E6F0000106990010069606E08000AE8FC91 S11317AEC8C0010069616E98000A01006B20000F29 S11317BEF1D6010069616F0000186F9000040100FA S11317CE69606B21000FF1BA6F81000601006D761E S11317DE547001006DF601006DF501006DF4010009 \$11317EE6DF36DF27A04000FF1FA7A05000FF02012 S11317FE7A06000FF1E66940472A020B04805E0068 S113180E02A26B21000FF1FC191069411D10451045 \$109181E696047086940FF S11318246961090169E1190069C0030B4034696005 S11318344730020B04805E0002A26B21000FF1E822 S1131844191069611D1045180CB80308190069E0E2 S11318547A000000000101006B21000FF1FE5D100D S1131864030B020E04807A03000FF1EE693047245F S11318745E0002A2693119107920004145160CE872 S11318840308190069B07A0100000002790000021B S11318945E00044C030E7A06000FF1E469604768A5 S10418A45EE1 S11318A50002A2696119100D036B21000FF1B879CB S11318B531002D1D10455018886AA8000FF1CA6B18 S11318C520000FF1B81D03453E190069E0020E041E S11318D5805E0002DC6B21000FF1861B5166106BE4 S11318E521000FF18619016A2A000FF01417521905 S11318F5210D105E0002B8030E7A01000000037981 S11319050000015E00044C7A06000FF1F26960479D S11319151E5E0002A2696119107920C01C451019C8 S11319250069E07A010000000B19005E00044C7A9E S113193506000FF1F05E0002A26961191079200C0E S1131945CE585000D0696079100CCE69E07A060053 S11319550FF1BC6960470669601B5069E018EE40E9 S1131965520CE817507908001E52800AD06F010006 S11319750447160CE817507908001E52800AD06FE8 S11319850100041B516F8100040CE817507908000D \$10819951E52800AD07F S113199A6F01000847160CE817507908001E528098 S11319AA0AD06F0100081B516F8100080A0E6A28C9 S11319BA000FF14C1C8E45A46B20000FF1EC471C60 S11319CA7A00000FF1EC69011B516981460E7A0114 S11119DA00000004790000035E00044C6A283B S11319E8000FF1F6471C7A00000FF1F668091A098E \$11319F86889460E7A010000000A790000015E0039 S1131A08044C7A06000FF1F46960470669601B50BC S1131A1869E06D7201006D7301006D7401006D75EC S1131A2801006D76547001006DF601006DF57A06BB S1131A38000FF1896B20000FF18C73084764686804 S1131A48DA0868E8A8184504188868E81A806868C5 S1131A5801006B21000FF1D00A8168196AA9000FEF S1131A68F18A7A05000FF1E268581A0868D8461412 S1131A785E00305C18885E00315A6A28000FF188CD S1131A8868D8401E6A28000FEF30460A5E00305CB2 S1131A9818885E00315A6B20000FF1865E0002CC74 S1131AA8400A1A91790000015E00044C01006D752A \$1091AB801006D7654707C S1136D3E2322001305181C08140C0E2D231F1B0BE5 \$1136D4E05292A241404020314151012052D2F1AD2 \$1136D5E2326130C1411312C05030B162321170EA5 \$1136D6E1403122F232C0C070525091714291D1C97 \$1136D7E2310282A0526060E23281D001406012B8F \$1136D8E053017222304101A141F082C0527252654 \$1136D9F051D2921230F270814041E1B050617247D

S1136D9E051D2921230F270814041E1B050617247D S1136DAE23152D1814162F0C050B241123181F024E S1136DBE14002910051E07252303212D1409081577 S1136DCE232E061E140D120005290C0A230918255C S1136DDE1430212D050224150512221F23033126FA S1136DEE14001B11051C2B3023210715140A0D0E3C S1136DFE14070817050912160D0A191114010C06A9 S1136E0E05100E040D130B180D0A0E00140619109E S1136E1E051102030D08130414091618050F151293 S1096E2E050F1200140917 S1136E340B150D06010E0519181314110A030D027E S1136E441604141607030D081902050E010B141079 S1136E5409130D1517110506181214010E1105173F S1136E64130B0D070212140C0F06050A04030D1864 S1136E740019140A0B090D0604030510190F14153F S1136E8417080D12110005020701140C0A0805164F S1136E94190E0D01181714031211051304100D0211 S1136EA409070D111002050E190814090F040D0326 S1136EB412000515180C141301172E2C1E2223304E S1136EC4201F2725292D2E2B2A2423312126272F41 S1136ED42826272022262324281F2E2B212C271E54 S1136EE42931232F302D2E2A252C27281F222E2406 S1136EF42529232F2B21273026202E1E2D31232C08 S1136F042A302E31282F2730292D2326202C2E2ACF \$1136F14242B27221F1E23212526232B2D2F272410 S1096F2426202E2C1F297B S1136F2A23212A30272228312E251E2527252122EE S1136F3A232A1F2B2E292024271E2C28232D3130C7 S1136F4A2E2F261E27212F1F232D221E2E202824D2 S1136F5A2729252B232630312E2A2C2A2E2A21258D S1136F6A23292D262730202C2E1F312823242B2F8A S1136F7A271E222A2B302431232A2C2027222F258C \$1136F8A2B282926232E212D27262C292B2C312E5A S1136F9A272A262F232428302B252D22272021296E

\$1136FFA2726291F2B1D252C2321241E272224263C \$113700A2B1D1F2623202C2427212A292B261E1F29 \$109701A231D2528272296 \$11370202C212B262A22231F2129272C201D2B2A01-\$1137030252223262428271E212A2B2C1D1E191F16 \$11370401D1C0F180C20141A111219131E150F10E1 \$1137050170E140D161B14161D130F20181A1915CC \$11370600C1B140E1E100F111C17191F120D0F1AD2 \$1137070161E190D0E181415111C0F1D1F20191B97 \$113708017121413100C0F101117191B20121415BA \$11370900E130F0D1A0C191D1C1614181F1E231B7A

\$1136FAA232E2D222726292F232C24212B2031225C \$1136FBA2728252A232D2E302B28252A2B312F2A20 \$1136FCA23242922272628202B2C2D252330212E41 \$1136FDA272A20252B211E29231F1D262728202462 \$1136FEA2B2A252C23222A21272829222328202A2E S11370A02125191A1C181E221D20231F24171920FC S11370B0211C1E1D1A1F23201B1D191C18221E24EF S11370C01F1A23172521191B18211E24221D1E1ADD S11370D01C25231B1F22191821171E201D242324BD S11370E01A1D19171B25231D1C251E1B2224191AC2 S11370F0201723211F181E182017191A221F0514E0 S1137100230028050D14080823272E100823272BF5 S1097110180423272B1CC8 S10E7116040F14192004191E23240484 S105724A00003E S1131ABE01006DF66DF50C8D7A06000FF01A01001B S1131ACE6960F9506E89000B01006960F90D6E8929 S1131ADE0014010069606E8D001601006961190021 \$1131AEE5E00044C0CDD47107A00000FF212010068 S1131AFE69010B71010069816D7501006D76547079 S1131B0E01006DF67A0000001C8E01006BA0000F20 S1131B1EF1FE01006B20000FF1A0471C7A00000FAC S1131B2EF1A05E003DF00F861A91010069810F81CC S1131B3E790000025E00044C01006D7654700100C1 S1131B4E6DF60F866E680017A804460601006960DC S1131B5E460C0FE17A00000FF1A05E003E16010064 S1131B6E6D76547001006DF601006DF501006DF493 S1131B7E01006DF36DF27A04000FF2067A05000F80 S1131B8EF01A7A06000FF01E7A01000FF1B4681AEB S1131B9E0A0A689AAA0C5840009E7A03000FF01F96 S1091BAE68390A0968B958 S1131BB41C89454A686847066868A80E45226A284D \$1131BC4000FF1B4C840010069516E98000A010085 S10C1BD469517A00000FF1905EE2 S1131BDD003E165A001C6801006F40000C0B70018A S1131BED006FC0000C686EAE044708010069505EBA S1131BFD003E4E40661A806838103078006B200025 S1131C0D0071225E0002F60B506BA0000FF1E66B23 S1131C1D20000FF1FA47086B20000FF1FC40045E21 S1131C2D0002A26BA0000FF1E87A0000001D9A01DA S1131C3D006BA0000FF1FE402668684608F8025CB0 S1131C4D00FE6E401601006F40000C0B7001006F1A S1131C5DC0000C010069505E003E4E5C00FEA20106 S1131C6D006F4000040B7001006FC000046D720121 S1131C7D006D7301006D7401006D7501006D765476

\$1131C8D7001006DF601006DF50F857A25000000D9 \$1131C9D10585000EE7A06000FF01A010069E57A2B \$1131CAD05000FF1B4010069606E080017A8044621 \$1131CBD3A7900001F5E0002F60B506BA0000FF185 \$1061CCDE66B209F \$1121CD0000FF1FA47086B20000FF1FC40045E8F \$1131CDF0002A26BA0000FF1E8188868D8F8046A14 \$1131CEFA8000FF01E5A001D7A6B20000071225EAF \$1131CFF0002F60B506BA0000FF1E66B20000F102 \$1131D0FFA47086B20000FF1FC40045E0002A26B3F \$1131D1FA0000FF1E8010069606E08000AE80F687F \$1131D2FD8010069606F00000C79100014111011B4 \$1131D3F101110010069616F11000E7921FFFF4628 \$1131D4F0419114004790100090898010069616EB2 \$1131D5F980016010069666E6E0017EE0F6AAE00EA S1131D6F0FF01E685846045E00305C7A0000001DB8 S1131D7F9A01006BA0000FF1FE18886AA8000FF0FB S1131D8F1F01006D7501006D76547001006DF60131 S1121D9F006DF501006DF47A05000FF01E7A0651 S1131DAE000FF01A0F847A24000000015860010E0F S1131DBE5E0034F40C88471AF8045C00FDA67A0021 S1131DCE000FF216010069010B71010069815A00BE S1131DDE1F027A04000FF1FE685847066858A80ED1 \$1131DEE457E010069606E08000A737847366A28DA S1131DFE000FF1CA47181899010069605E0015BA00 S1131E0E7A0000001F10010069C05A001F02010071 S1131E1E69617A00000FF1905E003E165C00FCE0F2 S1131E2E5A001F02010069606F00000E7920FFFF47 S1131E3E47187A0000001FD0010069C0F9010100A3 S1131E4E69605E0015BA5A001F02010069605E00E7 \$1071E5E32147A00BC S1131E6200002162010069C05A001F026858A808D4 S1131E7246086A28000FF1CA4742010069605E0001 S1131E823214010069606F00000E7920FFFF470AD7 S1131E927A0000002048010069C06858A808462852 \$1131EA2010069606F0100087909001E52917A11DC S1131EB2000FF02669101B506990400C0100696004 S1131EC25E003E4E5C00FC4440367A240000001062 S1131ED243080FC05C00FC7240267A24000000080C S1131EE2461E5C00FC266858A804470A0100696083 S1131EF25E003E4E400A0100696018996E89000A2C S1131F0201006D7401006D7501006D76547001005D S1131F126DF601006DF501006DF40F867A04000F71 S1131F22F1EE7A05000FF01A7A260000000746281F S1131F32190069C06A28000FF1B4C8200100695170 S1131F426E98000A010069517A00000FF1985E0050 S1091F523E165C00FBB624 S1131F5840687A26000000024608F8025C00FC0A81 S1131F6840587A260000001043080FE05C00FBD4B8 S1131F7840487A26000000084640010069506F0076 S1131F88000E7920FFFF46246A28000FF1B4C82008 S1131F98010069516E98000A010069517A00000F26 S1131FA8F1985E003E165C00FB5C400E5E0002A2E7 S1131FB869C046067900000169C001006D7401001A S1131FC86D7501006D76547001006DF601006DF5B4 S1131FD80F867A05000FF1EE7A26000000074620E6 S1091FE8190069D07A0023 S1131FEE0000204801006BA0000FF1FE01006B20E1 S1131FFE000FF01A5E00321440367A2600000002FA S113200E4608F8045C00FB5C40267A2600000010AB S113201E43080FE05C00FB2640167A2600000008F9 S113202E460E5E0002A269D046067900000169D010 S113203E01006D7501006D76547001006DF601009E S113204E6DF501006DF401006DF37A04000FF1EEED S113205E7A05000FF01A0F867A03000FF01E7A2607 S113206E00000005586000801A806A28000FF01FD7 S113207E103078006B20000071225E0002F60B50C7 S113208E6BA0000FF1E66B20000FF1FA47086B20EE S113209E000FF1FC40045E0002A26BA0000FF1E8F9 S11320AE010069506F00000E5E000A74683846081D S11320BE18885C00F9FA401C683BAB0E450E7A0199 S11320CE00000008790000035E00044C0100695012 S10920DE5E003E4E7A0094 \$11320E40000216201006BA0000FF1FE190069C019 S11320F4405A7A2600000002462C683BAB08460E80 S1132104010069505E003E4E5C00F9FE403E010051 S113211469507A01000000170A817D107070F80478 S11321245C00FA4A40267A260000001043080FE0B7 S11321345C00FA1440167A2600000008460E5E007D S113214402A269C046067900000169C001006D73EA S113215401006D7401006D7501006D765470010009 S11321646DF60F867A26000000146225C00F99A77 S113217401006B20000FF1A05860009A7A0100005E S11321840009790000015E00044C5A00221A7A26E0 S11321940000001043080FE05C00F9AC40787A2694 \$11321A40000000846701A808A28000FF01F1030DF \$11321B478006B20000071225E0002F60B506BA0C5 S11321C4000FF1E66B20000FF1FA47086B20000FB3 S10821D4F1FC40045E73

S11321D90002A26BA0000FF1E87A06000FF01E6856 S11321E968460818885C00F8CC40266868A80E453B S11321F9146868A80F420E7A0100000008790000EB S1112209035E00044C01006B20000FF01A5E0F S10C2217003E4E01006D76547086 S10B7122003F007F00FF01FFA4 S11322206DF60D067900FFFF5E0002B87A00000F1C S1132230F1905E003EC27A00000FF1985E003EC24B S11322407A00000FF1A05E003EC27A0000001C8EEE S113225001006BA0000FF1FE7A00000026260100A9 S11322606BA0000FF20218886AA8000FF1DA6BA6BF S1132270000FF18C19006BA0000FF1FA6BA0000F96 S1092280F1E619006BA059 S1132286000FF1EA6BA0000FF1E419006BA0000F38 S1132296F1EE6BA0000FF1EC6A28000FF15F5E000F S11322A630F601006B20000FF1CC68086AA8000F15 S11322B6F18A18885E00315A6A28000FF1686AA804 S11322C6000FF1F66D76547001006DF67A06000F74 S11322D6F1D4F0017A01000FF1D4F8015E00641A1A S11322E6686817507278792000074D066868E88098 S11322F668E86868175072787908000501C052804A S10523067A1047 \$1132308000070FE01006BA0000FF1CC19006BA057 S1132318000FF17E7900FFF6BA0000FF1821A8095 S113232801006BA0000FF19001006BA0000FF19861 S113233801006BA0000FF1A019006BA0000FF1B011 S113234818886AA8000FF14DF8036AA8000FF1E293 S11323587A00000FF0207909012C18995E00038691 S113236818886AA8000FF14C19006BA0000FF1BC83 S10423785E02 S11323790002A26BA0000FF1F019006BA0000FF18D S113238984F8036AA8000FF15E7900FFFF6BA000CF S11323990FF17C18886AA8000FF17AF83C6AA80042 S11323A90FF16819005C00FE6E01006D765470012E S11323B9006DF601006DF501006DF401006DF37A0D \$11323C903000FF18C7A05000FF1DA7A06000FF198

S11323D9D60F847A2400000010440668DC5A0026CB

S11323E914010069E4010069606E08000BA8105823 S11323F96000B8010069606F0000105E0011FC0103 \$1132409006BA0000FF1DC4758010069606E0800F9 S113241917737847380100696001006B21000FF1D7 S1132429DC6F0000146F1100021D104620010069C1 S1052439605EDF S113243B003E4E7A00000FF226010069010B710178 S113244B006981F80F68D85A0026140100696001ED S113245B006B21000FF1DC6F0000146F9000020180 S113246B0069606E080017E80FC82068D8A82058C8 S113247B60019669307308472401006960F9506E56 S113248B89000B0100696018996E8900145E0017AE S113249B660FC119005E00044C5A00261401006932 S11324AB605E003E4E5A002614010069606F000006 S11324BB165E0011FC01006BA0000FF1DC0100693A S11324CB606E080014E80FC83068D8A83058600153 S11324DB3869307308587000E669307358586000D7 S11324EBDE010069606E0800151750010069616F09 S11324FB90000801006960010069616F0000166FAC S113250B90000E010069606B21000FF17E6F81005A S113251B1001006960F9206E89000B010069606F7E S108252B00000C791012 S11325300006010069616F90000C01006960189940 S11325406E89000A010069606B21000FF17C6F81C4 S113255000120100696018996E8900177A00000F53 S1132560F1B069010B5169811B51010069606F81F0 S107257000147A00D5 S1132574000FF1B0690179610FFF6981010069609D S11325848F0000186BA0000FF1BC5E0017460C88A6 S11325944610010069617A00000FF1905E003E1656 \$11325A4406A6B20000FF1E44710010069617A006E S11325B4000FF1985E003E1640520FC179000002EC S11325C45E00044C404601006960F9506E89000BBA S11325D401006960F90D6E890014010069606E08D8 S11325E400151750010069616F9000086930735831 \$11325F4470679000006400479000001010069617E S11326046E9800160FC119005E00044CF80F68D8C8 S113261401006D7301006D7401006D7501006D7628 S1132624547001006DF601006DF501006DF40100B4 S11326346DF301006DF27A04000FF1897A06000F3C S1132644F1E20F825C00FD6C7A03000FF1F67A0567 S1132654000FF2026A28000FF1DA587001CCA80ABC S1092664587001AAA80F42 S113266A58700266A82458700122A825587000F2EE S10E267AA831470AA836587000A05A87 S11326850028C019006BA0000FF1E05E000C7A6A07 S113269528000FF160A820461E5E0011307A000064 S11326A5002D2A010069D079080001790000015E36 S11326B50056BA5A0028C801006B20000FF1CC68F7 S11326C5086AA8000FF18A188868C818885E00315E \$1,1326D55A01006B20000FF1D66E0800217378476C S11326E51A7A00000028EA010069D0F83C68B81994 S10B26F5006BA0000FF1EA5A8A S11326FD0028C879002AB05E0002B85E0010AA7ADC

S113270D0000002C0C010069D01988790000015ECD

S113271D0056BA5A0028C85E000E6801006B2000EE S113272D0FF1D66E08001673785870018E188868EC S113273DC801006B20000FF1CC68086AA8000FF1E6 S113274D8A18885E00315A6B20000FF16A6BA00065 S113275D0FF17CF83C68B87A0000002B3C4022193C S10F276D005E000F7C0D00587001505EEF \$11327790014A479002AB05E0002B8188868B87AEF S11327890000002A08010069D05A0028C86A2800F4 S11327990FF160463A01006B20000FF1D66B21005E S11327A90FF17C6F0000121D0146247A0000002EEF S11327B9CC010069D06B20000FF18C72586BA0001A S11327C90FF18C5E0008805E000BEA5A0028C801EC S11327D9006B20000FF1D66E08001A737858700048 S11327E9DE790000205E000F7C0D00587000D05E79 S11327F90008805E000BEA5E0014A47A0000002A37 S113280908010069D05A0028C86A28000FF24A460C S1132819106A28000FF17A46085E00531C5A0028F2 S1132829D4F803406E6838586000A068681A0868CC S1132839E8A80243085E0003185A0028D46868A867 S113284902463068480A0868C8A803450418886815 S1132859C81A80684801006B21000FF1CC0A81680D S1132869196AA9000FF18A5E00305C18885E00318C S11328795A40586868463C6A28000FF1F8A810467F S1062889166A28A0 S113288C000FF15F7328471CF8045E0030F6F80261 S113289C68E840346A28000FF15F73384706F8087B S11328AC5E0030F66A28000FF16968E85E000318D0 S11328BC401640140FA05E0045D8400C01006B205C S11328CC000FF1D65E003E4E01006D7201006D7377 S11328DC01006D7401006D7501006D76547001007A S11328EC6DF601006DF57A06000FF1D60F855C00CC S11328FCFABA6A28000FF1DAA80A477AA80F5870B6 S113290C00F0A824586000DA010069606E08001A0F S113291CE8A0A820586000D2010069606B21000F68 S113292CF17C6F0000121D01586000BE7A0000009B S113293C2D2A01006BA0000FF2025E0008807900C2 S107294C00136BA065 S1132950000FF18C010069606F00001E6BA0000F76 S1132960F1B87A05000FF1E45E0002A269D04606D0 S11329707900000169D018885E00060A790800020F S1132980402E7A00000FF1EA69010B516981792127 S11329900003432679002AB05E0002B85E0010AA44 S11329A07A0000002C0C01006BA0000FF2021988C1 S11329B0790000015E0056BA403CF83C6AA8000F5A S11329C0F1F67A00000FF18968090A09688917513C S11329D0177101006B20000FF1CC0A9068086AA8F7 S10A29E0000FF18A18885E64 S11329E700315A400A40100FD05E0045D840080114 S11329F70069605E003E4E01006D7501006D7654FE S1132A077001006DF66DF501006DF47A06000FF1A3 S1132A17D60F845C00F99A19556A28000FF1DA4732 S1132A270EA80F58700102A827470E5A002B200D35 S1132A37505C00F7E45A002B30010069606E09000E \$1132A471846727A00000FF02A7D0070606A280029 S1132A570FF160A82046486B20000FF18C72586B69

S1132A67A0000FF18C01006960F9506E89000B0119

S1132A77006960F9066E8900140100696018996E8F S1132A87890018010069610D505E00044C7A00004A S10F2A97002E7201006BA0000FF2025A26 S1132AA3002B307A0000002B3C01006BA0000FF2D6 S1132AB302F8025E0064D6406C19006BA0000FF1AB \$1132AC37E5C00F758010069606E080018A801478E S1132AD35418886AA8000FF17A01006960F9506EEE S1132AE389000B01006960F9066E8900140100690D S1132AF3606E0800181750010069616F9000160199 S1132B03006960010069616F0000126F9000180191 S1132B130069610D505E00044C401240100FC05E0A S1132B230045D84008010069605E003E4E01006D17 S1132B33746D7501006D76547001006DF601006DBE S1132B43F50F855C00F86E7A06000FF1DA6868A861 S1132B532446465E0008805E000BEA7A06000FF105 S1132B63D601006960F9506E89000B01006960F9B0 S1132B73066E8900140100696018996E89001801B2 S1132B8300696119005E00044C7A0000002ECC0138 S1062B93006BA030 S1132B96000FF20240666868A80A46547A00000FDD S1132BA6F1EA69010B516981792100034432F83C49 S1132BB66AA8000FF1F67A00000FF18968090A097C S1132BC668891751177101006B20000FF1CC0A9028 \$1132BD668086AA8000FF18A18885E00315A401CFA S1132BE67A000000262601006BA0000FF202400CBA S1132BF6686EAE0F47060FD05E0045D801006D75AE S1132C0601006D76547001006DF601006DF57A06CB S1132C16000FF1890F855C00F7986A28000FF1DA36 S1132C264714A80F5870008CA8264742A834474872 S1132C36A835474C406A79D02AB05E0002B8686835 S1132C460A0868E8A8034504188868E81A806868CA

S1132C64000FF18A18885E00315A5E0010AA4046AB S1132C745E0012860D00463E403018885E0013AA9A S1132C8440285E0011307A0000002D2A01006BA058 S1132C94000FF2021988790000055E0056BA400A52 S1132CA440140FD05E0045D8400C01006B20000F87 S1132CB4F1D65E003E4E01006D7501006D765470D0 \$1132CC401006DF60F865C00F6EA6A28000FF1DA5B S1132CD44712A80F474AA8204746A826471CA834E9 S1132CE4472240285E000BEA7A0000002D2A0100E6 S10E2CF46BA0000FF202402840265E97 S1132CFF0012860D00461E401018885E0013AA406D S1132D0F080FE05E0045D8400C01006B20000FF166 S1132D1FD65E003E4E01006D76547001006DF601D3 S1132D2F006DF50F855C00F6807A06000FF2026ADB S1132D3F28000FF1DA4750A8034716A806473AA808 S1132D4F0F477CA8204778A826474CA83447524001 S1132D5F5A5E000AA65E0017000D0047145E0016A7 S1132D6F747A0000002CC4010069E05E000318406F S1132D7F4E7A0000002DD840187A00000FF18E68AB S1132D8F090A09688940385E000BEA7A0000002DB1 S10B2D9F2A010069E040285EEE S1132DA70012860D004620401218885E0013AA40C0 S1132DB70A40140FD05E0045D8400C01006B200078

S1112C5601006B21000FF1CC0A8168196AA9F4

S1132DC70FF1D65E003E4E01006D7501006D76541D S1132DD77001006DF60F865C00F5D66A28000FF1C6 S1132DE7DA4746A8094722A80F477AA820470AA81E S1132DF726474AA834475040587A06000FF18E6890 S1132E0768470668681A0868E85E0017000D0047F7 S1132E17545E0016747A0000002CC401006BA000F5 S1132E270FF2025E000318403C5E000BEA7A0000D2 S1132E37002D2A01006BA0000FF20240285E001249 S10D2E47860D004620401218885E34 S1132E510013AA400A40140FE05E0045D8400C015B S1132E61006B20000FF1D65E003E4E01006D7654DA S1132E717001006DF50F855C00F53C7A01000FF1DE S1132E81DA681847066818A8244628681847105EA7 S1132E9100088001006B20000FF1D65E003E4E5EFB S1132EA1000BEA7A0000002ECC01006BA0000FF2A7 S1132EB10240126818A820470C6819A90F47060F89 S1132EC1D05E0045D801006D75547001006DF60F98 S1132ED1865C00F4E26A28000FF1DA472EA8034762 S1132EE130A80658700086A80F58700096A820587C S1132EF1700090A824586000845E00088001006B73 S10F2F0120000FF1D65E003E4E40785ECA S1132F0D000BEA40727A00000FF1EA69011B516966 S1132F1D8146207A00000FF20E010069010B710148 S1132F2D0069816B20000FF18C720870585C00F2FF S1132F3DE240445E0017000D0047147A0000002E95 S1132F4D7201006BA0000FF2025E00031840287A94 S1132F5D0000002F8A01006BA0000FF20240184000 S1132F6D167A00000FF18E68090A09688940084035 S1132F7D060FE05E0045D801006D76547001006DBA S1132F8DF60F865C00F4246A28000FF1DA474EA888 S1132F9D09471EA80F4762A8204706A824472E40BC S1132FAD527A06000FF18E6868470668681A086839 S1052FBDE85EC8 S1132FBF0017000D0047407A0000002E7201006BCD S1132FCFA0000FF2025E000318402C5E000880017F S1132FDF006B20000FF1D65E003E4E5E000BEA7AC6 S1132FEF0000002ECC01006BA0000FF2024008403D S1102FFF060FE05E0045D801006D765470A9 S113300C01006DF6F8FF6AA80008001B7A0000089E S113301C001A7D0070007900A5196B80FFA855304B S113302C7A06000FF22E5E003E84010069E019114D S113303C6F81000C010069667A160000000E010015 S113304C6BA6000FF2325C0004BA01006D7654706A \$113305C01006DF601006DF47A040000712A7A0601 S113306C0008000C6B200008000E46746E6800010A S113307CE8E0C8146EE800017A00000000010AE0E0 S113308C7D0072507A0000000010AE07D0072603D S113309C7D607200790000D56BA000080D0E1899B1 S11330AC19007C60772067087920000147F21751DA S11330BC0D1910190D9017F010300AC069006BA08F S11330CC000800000B590D9017F010300AC069006D S11330DC6BA0000800027D6070200A09A90245C09B S11330EC01006D7401006D76547001006DF57A0564 S10930FC000800107A0137 S1133102000FF18CE808A80846247A0000000001A8

S11331120AD07D0070007A15000000017D507050C5

\$1133122F8106AA8000FF1F86910726840227A0058 \$1133132000000010AD07D0072007A15000000012F \$11331427D507250F8406AA8000FF1F86910706857 \$1133152699001006D7554706DF601006DF5010002 \$11331626DF47A040008000C7A05000FF2360C861E \$1133172A601460C7900A5196B80FFA8FE2D400C10 \$1133182790000D56BA00008000E18EE19007C40EF \$1133192772067087920000147F21A806A28000F15

S11331A2F18A78006A280000713217500CE917512D S11331B20910791083006BA0000800001A806A28A5 S11331C2000FF18A78006A280000716417500C809D S11331D218886BA0000800027D4070205E0002A2E5 S11331E269D0A60146105E0002A269511910792025 S10931F2000845F2401044 S11331F87900A5396B80FFA879005ABB6B80FFA8BA S113320801006D7401006D756D76547001006DF6E2 S11332180F86F8015C00FF3A19006E690017A905CA S113322847020B505C0003526F61000C0FE05C0016 S113323803987A00000FF206010069010B7101007E S113324869816E690017A9014708A9034704190091 S11332584004790000016AA8000FF23A01006D7673 S1133268547001006DF601006DF501006DF4010064 S11332786DF3790C00017A03000FF2067A06000F49 S1133288F22E067F0100696019116F00000E792083 S1133298FFFF47020B510C9C010069656B00FF247A S11332A8101017707A010000010C1A81010069607E S11332B86F81000C010069606F00000C7920000A1E S11132C8585001B6010069606F0000126B21BE S11332D6000FF17C1D105860014A010069606F00FF S11332E6000E6B21000FF17E1D1047060CCC5860B2 S11332F600A4010089806E040017A40246326A281D S1133306000FFD70471A0CCC4708010069605E0087 S1133316161C7A01000000060DC05E00044C4066CF S113332601006F3000240B7001006FB0002440567A S1133336A403473EA401473A5E003E840F85472214 S11333460CCC4708010069605E00165401006960F0 S1133356F9106E89000B010069610DC05E00044C12 S1133366402401006F3000240B7001006FB000246C S113337640140C4817507910000417F001006B2113 S1133386000FF1FE5D1001006F3000140B70010098 S11333966FB00014400C010069606F0000105E00FD S11333A60A74010069606F00000C7910000D6A2927 S11333B6000FF1F81751521017707901003D5310A0 S10933C66B21000FF23838 S11333CC1901010069606F810008010069606E0CCD S11333DC0016737C4710727C010069606F01000C4D S11333EC1B516F81000C6A28000FF1F8A8104614C9 S11333FC0CC8175011900CC9175109100CC917514E S113340C09104004F80A50C06BA0000FF1FA010037 S113341C69606F0000086BA0000FF1FC40586B2032 -S113342C000FF18C7308464E0CCC464A5E003E8469 S113343C0F854742010069606F00000C7910000D84 S113344C6A29000FF1FB1751521017707901003DD9 S113345C53106B21000FF2381901010069606F8160 S113346C000801006960F9106E89000B01006961A4

S106347C0DC05E1E S113347F00044C0FD54704010069E501006D730189 S113348F006D7401006D7501006D76547079200024 S113349F0246127A00000FF222010069010B71013A S11334AF00698154707A00000FF21E010069010B4C S11334BF7101006981547001006B20000FF22E1905 S11334CF116F81000C01006B20000FF22E7A100097 S11334DF00000E01006BA0000FF2327E27737046BE S11334EF02551E54706B200008001C790108035EFE S11334FF006C3619117920000143020B510C9854BA S113350F707A000008002201006B80FF2001006B1D S113351F20000FF23201006B80FF28790000876BC7 S113352F80FF247F2F72707F2F72507F2F7040285F S113353F2FE8F8C806382F7F2772707F2770607FB7 S113354F2772507F2772402827E8F8C80638277F4C S113355F2F70707F2770707A000008001A7D007238 S108356F207D00722024 S11335747D0072207D0072207D00702054707A01D9 S11335840008000E0C884708790000BA699054704A S11335946A28000FF15E470EA8014712A8024716D5 S11335A4A803471A4020790000D669905470790022 S11335B400B669905470790000D26990547079000F S11335C400BA69905470790000BA6990547001008B S11335D46DF601006DF56DF47A05000FF2360F8671 S11335E40D147F2772307A00000000E0AE00100F7 S11335F46B80FF207A000008002001006B80FF2804 S1133604730C470A6E68001670786EE800160B5443 S113361411146B84FF247F2F72707F2F72507F2FBD S11336247240282FE8F8C806382F7F2772707F2746 S113363470607F2772507F2770407F27723028275D S1133644E8F8C80638277F2F70707F2770705E00F3 S113365402A2695119107920000E45F21A806A28D1 S1073664000FF18AD4 S113366878006A280000713217507910032D6BA076 S1133678000800001A806A28000FF18A78006A2876 S11336880000716417500C8018886BA000080002B1 S11336987A000008000C7D0070205E0002A26951C7 S11336A819107920001045F2020C04806E68001786 S10836B8A80446085EB1 S11336BD0002DC6FE000187A060008001A7D6072C3

\$113712A079498000009000A5A5A6A7A7A8A8A9DE \$113713AAAAAABACACADADAEAFAFB0B1B1B2B2B35B \$113714AB4B4B5B6B6B7B7B8B9B9BABBBBBCBCBDAB \$113715ABEBEBFC0C0C1C1C2C3C328C86808A8484C \$113716AE8882C86808A848E88828C86808A84891 \$113717AE8882BC86808A848E88828C86808A84881 \$10F718AE88828C86808A848E88828C86808A84881 \$10F718AE88828C86808A848E88828C8D5 \$11336EC01006DF601006DF501006DF101006DF046 \$11336FC7A050008001A7A060008001C6960731821 \$113370C472C5E0002A26BA0000FF2387F27727068 \$113371C7D5072207C60730047065E00326A40085C \$113373C732047127D507220790000015E00349C88

S11336CD107D6072107D6072107D6072107D60706F S11236DD10030C6D7401006D7501006D7654704F

S1053A9C6B2099

S113374C5E0034C640466B20000800107318471006 S113375C7A00000800117D0070305E001A2E402C97 S113376C6960730847267D5072106A28000FF23A7C S113377C46107A0000000000801006B21000FF1FED6 S113378C5D1018885E00315A5E0035107FF67200A9 S113379C01006D7001006D7101006D7501006D7695 S11337AC567001006DF01A806A28000FF18A7800B7 \$11337BC6A28000071321750791003006BA00008BE S11337CC00001A806A28000FF18A78006A28000029 S10937DC716417500C801B S11337E218886BA0000800027A000008000C7D0013 S11337F270207900A5196B80FFA801006D705670C6 S113380201006DF101006DF07FF4702028BAC870D8 S113381238BA7FD670107FD672207A01000000D6C S113382219005E00044C7FF6722001006D700100E5 S11338326D71567001006DF601006DF101006DF0BD S11338427F6772007F6672007F60720019006B806E S1133852FF687A06000FF250010069607A010000E5 S10A38623AAE1F9046065E1A S1133869004C284030010069607A0100003B141FB4 S113387990460C7A0000003AAE010069E040167ADD S11338890000003B8C010069E0F8046AA8000FF20B S11338994B5E004BB201006D7001006D7101006D4A S11338A976567001006DF101006DF07F6772007F3B S11338B96672007F60720019006B80FF6828BD7F03 S11338C9BC726028BCE88738BC6A28000FF24A47F2 S11338D91C7A0000003B8C01006BA0000FF250F829 S11338E9046AA8000FF24B5E004BB2402C7A000028 S11338F9003AAE01006BA0000FF25019006BA00052 S10A39090FF24601006B20E0 \$1133910000FFD7A7A100000001A01006BA0000F5E S1133920F24001006D7001006D71567001008DF17F S113393001006DF001006B20000FF24C5D000100EE S11339406D7001006D7156707FBA72705470010011 S11339506DF66DF27A06000FF2446E68000138BB12 S11339607FBC72706E6800017A01000FF248681A19 S1133970088A689A69601B5069E07A0000003990EF S113398001006BA0000FF24C6D7201006D76547053 S113399001006DF66DF27A06000FF23C01006960D9 S11339A0680838BB7FBC7270010069600B7001004D S11339B069E01B7068087A01000FF248681A088AE7 S11339C0689A7A00000FF24469011B516981460E1E S11339D07A00000039E601006BA0000FF24C6D7212 S11339E001006D7654706A28000FF24A471C6A2859 S10F39F0000FF24838BB7FBC72707A00F4 S11339FC00003A2A01006BA0000FF24C54707A01BB S1133A0C000000C19005E00044C7FBA72707A003E S1133A1C0000394801006BA0000FF24C54707FBABF S1133A2C72707A000000394801006BA0000FF24C50 S1133A3C01006B20000FFD766E080014A8034604E9 \$1133A4C5E00540E547001006DF101006DF07ECFD8 S1133A5C7320473A6A28000FF24AA8014B307A00CC S1133A6C00003B8C01006BA0000FF25028BD7FBC02 S1133A7C72607F6672007F60720019006B80FF6851 S1133A8CF8046AA8000FF24B5E004BB2400A010026

S1133A9E000FF2505D0001006D7001006D715670E3 S1133AAE7ECF7320471E7FD6722028BDA8104646AF S1133ABE7A0000003B1401006BA0000FF2507FBC93 S1133ACE726040327A00000FF240010069010B71FE S1133ADE010069811B7128BD68987FBC72607A01F0 S1133AEE000FF24669100B5069906911792101009B S1133AFE45045E004C2819006B80FF687F667000D9 S1133B0E7F60700054707ECF7320474828BDA8058F S1133B1E46427FD67020F8016AA8000FF24A7A0056 S1133B2E00003B8C01006BA0000FF25019006BA03B S1133B3E000FF1EC18886AA8000FF17A01006B20CF S1133B4E000FFD7A7A100000001401006BA0000F24 S1113B5EF240401618886AA8000FF24A7A0056 S1133B6C00003AAE01006BA0000FF2507FBC7260F3 S1133B7C7F6672007F60720019006B80FF6854705E S1133B8C28BD6AA8000FF2467FBC72606A28000F39 S1133B9CF2466AA8000FF2497A0000003BC2010009 S1133BAC6BA0000FF25019006B80FF687F667000E9 S1133BBC7F60700054706DF27A00000FF24629BDDC

S1133BCC6E8900017FBC72606E0800017A01000FDF S1133BDCF249681A088A689A6B20000FF24617702B S1133BEC7A20000001074310F8016AA8000FF24B79

S1133BFC7A0000003CBE402018886AA8000FF24BE3

S1073C0C01006B2024 S1133C10000FFD7A6B21000FF2466F81000C7A00D1 S1133C2000003C3601006BA0000FF25019006B80BD S1133C30FF686D72547001006DF601006DF57A062F S1133C40000FF2400100696029BD68897FBC726081 S1133C507A05000FF2497A00000FF24669011B5100 S1133C606981471C010069600B70010069E01B70E9 S1133C7068086859088968D919006B80FF6840345E S1133C807F6672007F60720019006B80FF6801001C S1133C906966686E685D1CDE4708F8026AA8000F52 S1133CA0F24B5E004BB27A0000003B8C01006BA02B S1133CB0000FF25001006D7501006D765470010023 S1133CC06B20000FF24029BD68897FBC72607A00C6 S1133CD0000FF24669011B516981461E7F6672001E S1133CE07F60720019006B80FF687A0000003B8CD3 \$1073CF001006BA0C0 S1133CF4000FF250547019006B80FF685470010077

\$1133D346B80FF28790080806B80FF247900FFF6B \$1133D446B80FF2C7F2F72707F2F72507F2F7240F5 \$1133D547F2F7030282FE8F8C806382F7F27727019 \$1133D647F2770607F2772507F2770402827E8F8E8 \$1133D74C80738277F2F70707F2770707F277030B3 \$1133D847D1072107D1072107D1072107D107010F1 \$10D3D9401006D7001006D7156709E \$1133D9E01006DF501006DF47A04000FF258010074 \$1133DAE6BA4000FF25419117905011C01C05215B0 \$1133DBE0AC50FD07A100000011C01006FD0000458 \$1133DCE0B51792100094DE01A8001008FC00A00E1 \$1133DDEF80A6AA8000FFD7001006D7401006D757C

\$1133D046DF101006DF07A010008001A7D10721043 \$1133D147F27723001006B20000FFDA07A10000091 \$1133D24001A01006B80FF207A00000800200100C3 S1133DEE547001006DF56DF40F85020C0480010012 S1133DFE6951470801006910010069D0030C0F9046 S1133E0E6D7401006D75547001006DF56DF40F85C0 S1133E1E020C04801A800100699001006950460664 S1133E2E010069D1400A01006F500004010069814C S1133E3E01006FD10004030C6D7401006D75547094 S1133E4E01006DF60F864728020104807A00000FE8 S1133E5EFD7068090A09688901006B20000FF2548D S1133E6E01006FE0000401006BA6000FF254030181 S1133E7E01006D76547001006DF60201048001009C S1093E8E6B26000FF25444 S1133E94472201006F60000401006BA0000FF2547C S1133EA47A00000FFD7068091A0968891A800100F4 S1133EB46FE0000403010FE001006D76547001000B S1133EC46DF601006DF50F850FD05C00FF1E0F86A3 S1133ED447080FE05C00FF7240EE01006D750100BD S1133EE46D76547001006DF56DF40F850FD14006A5 S1133EF401006F11000401006F10000446F2020C6B S1133F04048001006B20000FF25401006F90000440 S1133F1401006BA5000FF254030C6D7401006D7560 S1053F245470D3 S1133F2601006DF601006DF501006DF47A06000FCF S1133F36F1D60C850C0D0D8D0100696046105E00EE S1133F463E84010069E0460619005A003FFA010062 S1133F566960F9206E89000B010069606E8500189E S1133F66010069606E8D0019010069606B21000F04 S1133F76F17C6F810012010069606F8D000E0100F3 S1133F8669606B21000FF17E6F810010010069608A S1133F96F90F8E8900177A04000FF1B069400B50CF S1133FA669C01B50D10069616F9000146940796013 S1133FB60FFF69C0AD034710AD04470C01006960EB S1133FC67901000E6F81000C010069606F00000C1E S1133FD679100014111011101110010069616E9806 S1133FE60016010069617A00000FF1905E003E162A S1133FF67900000101006D7401006D7501006D7694 S1134006547001006DF601006DF57A06000FF1D6C5 S10740160D0D0D85F6 S113401A01006960460E5E003E84010069E04604C0 S113402A1900404401006960F9506E89000B0100CF \$113403A6960F90F6E890014010069606F8D0016BA S113404A010069606F85001879258005470C010015 S113405A6960790100086F81000C01006961190027 S113406A5E00044C7900000101006D7501006D7653 S113407A547001006DF601006DF501006DF4010044 S113408A6B25000FF1D67A150000001C01006B2481 S113409A000FF1D66F44000C7914FFF2404E6950B8 S11340AA6B21000FF17E1D1047086B20000FF18071 S11340BA69D069505E0011FC0F86472A6E580003C6 S11340CA6EE8000BF8C06EE8000A790000016FE0A0 \$11340DA00067900FFF6FE0000219006FE0000498 S11340EA18886EE8000C0B95793400040D4446AE2A S11340FA01006D7401006D7501006D765470010044

\$113411001006DF37A03000FF0200F8519990D91BA \$113412040307900001E01C052100AB06E08000A27

S109410A6DF501006DF4E7

S11341307368471C7904001E01C052140AB4694014 S113414069D06E4C000B17546FD400020B950B59B9 S11341500B516A28000FF14C17501D014DC4101962 S113416010190D9001006D7301006D7401006D75DF S1134170547001006DF601006DF501006DF401004D S11141806DF301006DF27A03000FF18C7A05E5 S113418E000FFD747A06000FF1D6010069646E4CBF S113419E00191754010069606F00001A69D00100FC S11341AE69606E0900184702703C69307348470213 \$11341BE704C0C445860017CAC024758AC044772F6 S11341CEAC0B587000D6AC104714AC124768AC1345 S11341DE58700086AC1C587001005A00434269584E \$11341EE19005C00FE1401006960010069616F0032 S11341FE00106F90001A01006B20000FF1DC587054 S113420E013601006B20000FF1DC18996E89000A4B S113421E5A004346895079208003460E18886AA8CE S113422E000FF17A19005E0022206958790000020D S113423E40105C00FE38010069606E0800191750CA S113424E69585C00FDB401006960010069616F008A S113425E00106F90001A5A004346010069607A10EC S113426E0000001C5C00FE927910000E01006962D1 S107427E6FA0000C1D S11342820100696019116F81001A010069606F08E9 S11342920010F003F8015C00FC8A7A00000FFD7242 S11342A27D0070505A004346010069646F44000C5B S11342B27914FFF26DF4010069617A110000001CA7 S11342C2010069607A100D00001A5E0003B00B87D7 S11342D279140006010069606F84000C7908800576 S11342E279000083404C6A28000FFD72A8114650E1 S11342F269507920800146346930724869B0790086 S113430200056BA0000FF1EA18886AA8000FF1BE3D S11343127A00000FF1B869017911002069817A00ED S113432200002E7201006BA0000FF202695879009E S10D433200045C00FCD019006BA02D S113433C000FF1EC40041900400479000001010065 S113434C6D7201006D7301006D7401006D750100D7 S113435C6D76547001006DF601006DF501006DF47D S113436C01006DF301006DF21B87F302790BFFFF63 S113437C18BB7A04000FFD747A05000FFD727A06DF S113438C000FF1D6010069606E08001768D80100AF S113439C69606F00001869C06B20000FF18C730802 \$11343AC461C68584606F80568D8401268581750D9 S11343BC791000800DB85C00FC425A0045BC7900B1 S11343CC00146BA0000FF1EC7C5073704708685814 \$11343DCE87F880868D86B20000FF18C7348470479 S11343EC7D5070406858473AA802587000CAA80318 S11343FC5870010CA8055870011EA80C5870016A5D \$113440CA810477CA811473CA8124774A8135870ED S113441C00BCA81558700100A81A5870011A5A004B S109442C45B001006960C7 S113443269416F81001A6B28000FF1800CB00CB82F S11344425C00FAE06AAB000FF17A5A0045BC010045 S113445269606F00001A69F0010069607A10000057 S1134462001C5C00FCA07910000E010069626FA0C0 S1134472000C6978F0040CB85C00FAA801006960C9

S113448269416F81001A5A0045BC010069606F00DE

S113449200187920800346186B20000FF18C7058A5 S11344A26BA0000FF18CF8046AA8000FFD7340049E S11344B2F80768D80100696069416F81001A0DB874 S11344C240100100696069416F81001A6B28000F76 S10844D2F1800D305AD9 S11344D7004570010069607A100000001A5C00FC56 S11344E72079100006010069626FA0000C7908802A S11344F705790000835C00FB0819006BA0000FF12D S1134507EC5A0045BC010069607901000E6F810017 S11345170C6B28000FF180F0030CB8404C18886A24 S1134527A8000FF17A19005E00222079088000792B S11345370000805C00FACAF80768D84078694079B7 S1134547208003460AF8046AA8000FFD73400C197B S1134557006BA0000FF1ECF80768D80100696069E7 S1134567416F81001A0DB80D305C00F9B240460165 S11345770069607901000E6F81000C6B28000FF150 S113458780F004F8015C00F9960100696069416FE5 S113459781001A694079208001471A19006BA0002D S11345A70FF1ECF80768D8400C19006BA0000FF165 S11345B7EC19004004790000010B8701006D7201BA S10645C7006D730D S11345CA01006D7401006D7501006D76547001006F S11345DA6DF601006DF501006DF401006DF36DF2E5 S11345EA7A03000FF1EC7A05000FF1D67A06000F70 S11345FAFD720F847A2400000020585000A00100A4 S113460A69D47A04000FF1DA010069506E08000BCC S113461AA810462A010069506E080017E80F68C8F6 S113462AA80F460C5C00FB400D00586001E2406292 S113463A684CAC0E465C5C0001EA5A00481A010058 S113464A69506E080014E80F68C8A80F460C5C008D

S113465AFD040D00586001B840386848A801460EA8 S113466A79080004790000015E0056BA4024684CB7 \$113467AAC05461E6B20000FF18C730847067900BF S112468A00014004790000020D08790000055E6C S11346990056BA010069505E003E4E5A00481A7A23 S11346A92400000008586000B87C60735047087DF6 S11346B96072505A00481A7C607370465C1A800113 S11346C90069D06868E80717500D026868E81F1781 S11346D9500C005860013AA8004748A80C4772A832 S11346E910470AA8124706A81A586001247A040038 S11346F90FFD736848472C68481A0868C87908FF89 S1134709FFF00218885C00F8140D00470C010069D9 S113471950790180036F81001A7900001469B05A35 S113472900481A18886AA8000FF17A19005E002255 S1134739200D204606790080004004790080030D8D S113474921791100800D080D105C00F8B25A004857 S113475910190069B05E0011BA5A0048105A00488D S11347691A7A2400000004586000A61A800100691E \$1134779D07C6073704754F8075E0053DC7A0400F8 S10647890FFD9C81 S113478C0100694058700082010069406B21000FE0 S113479CF1826F8100166868E807175001006941BF \$11347AC6F90001801006940790100026F81001AB2 S11347BC010069407901000A6F81000C0100694114 S11347CC19005E00044C40426868E81717500C004E S11347DC461EA800470CA8104708A8124704A81A9C S10947EC460E18886AA8BD S11347F2000FF17A19005E0022206869E907175157 S113480279110080790880070D105C00F7F8F80729 S113481268E84004F80768E86D7201006D730100EE S11348226D7401006D7501006D76547001006DF6B2 S113483201006DF501006DF301006DF21B877A062C S1134842000FF1D6F8076AA8000FFD7219006BA0D9 S1134852000FF1EC010069606E090018464E6A28E7 S1134862000FF24A587000AC0100696001006961EE S11348726F0000106F90000E010069606B21000F41 S1134882F17E6F81001001006960F9036E89001ADC S113489201006960F9016E890018010069617A00FA S11348A2000FF1905E003E165A004934010069601F S11348B26E08001917500D05010069616E19001A7E S11348C217510D1D010069620FF36E2A001B68BAAD S11348D2010069620FF36E2A001C6EBA0001010026 S10948E269627903000A7B S11348E86FA3000C01006962010069636F22001064 S11348F86FB20016010069626FA0001801006960B8 S11349086F81001A0100696069716F81001C0100E0 S11349186960F9076E89001401006960F9506E89AD S1134928000B0100696119005E00044C0B8701004B S11349386D7201006D7301006D7501006D76547020 S113494801006DF601006DF51B877A06000FFD96D0 S11349588B20000FF18C7308461A01006960790115 S113496800056F81001A0100696119005E00044C9A S11349785A004A76010069606E08001988806AA89E S1134988000FFD7201006960F9206E89000B0100B7 S113499869606B21000FF17C6F810012010069606E S11349A86F0000166BA0000FF182010069616F901F S11349B8000E010069606B21000FF17E6F81001009 S11349C8010069606F01001A69F101006960010062 S10949D869616E0800197C S11349DE6E9800190100696018996E89001A0FF01B S11349EE0100696168086E98001B0FF0010069618F S11349FE6E0800016E98001C0100696018996E899A S1134A0E0018010069607901000F6F81000C01002C S10D4A1E6960F90E6E8900177A052D S1134A28000FF1B069500B5069D01B500100696147 S1134A386F900014695079600FFF69D001006960B4 S1134A486F00000C791000141110111011100100DE \$1134A5869616E980016790000146BA0000FF1ECE0 S1134A68010069617A00000FF1905E003E160B8721 S10D4A7801006D7501006D765470A5 S1134A8201006DF6F8BF38D47FD672007FBA725037 S1134A927FBA724028BAE8FC38BA188838B8F80BDA S1134AA238B97FB272507FB2724028B2E8FC38B291 S1134AB2188838B0F80338B17FB270407FB27050B2 S1134AC27A06000FFD7A5E003E84010069E07A10E6 S1134AD20000001A01006BA0000FF240010069609F S1134AE2F9406E89000B0100696618886EE80014AB S1134AF218886AA8000FFD945C0001E25C0001F6CC S1134B02790000026BA0000FFD8AF8038AA8000F67 S1134B12FD92F8A33864F88838657900B4006B8094 S1134B22FF6A01006D76547001006DF601006DF4A8

\$1134B320F8601006BA6000FFD765C0001C80D0014 \$1134B4247647A04000FF2447A01000FF23C6A28A7 \$1134B52000FF24A47208F60000C0B5069C07A16AE \$1134B620000001401006996684818006AA8000F42 \$1094B72F24838BB4024A8 \$1134B786F60000C7930000769C07A160000001ACB \$1134B8801006996010069100B70010069901B709F \$1134B98680838BB7FBA70507FBC72707FBA707077

S1134B98680838BB7FBA70507FBC72707FBA707077 S1134BA801006D7401006D76547001006DF67A068B S1134BB8000FFD7A6A28000FF24B46420100696033 S1134BC86E080014A803460E7A010000000C1900B0 S1134BD85E00044C40286A28000FFD70472001003D S1134BE869606F01000C1B516F81000C0100696141 \$1134BF819005E00044C5E003E84010069E0010077 S1134C086960F9406E89000B010069607A10000040 S1094C18001401006BA072 S1134C1E000FF24001006D76547001006DF6010034 S1134C2E6DF57A06000FFD7A5E003E840F854720EF S1134C3E6B20000FF24679100006010069616F9037 S1134C4E000C0100696119005E00044C010069E565 S1134C5E010069607A100000001A01006BA0000FB9 S1134C6EF24001006960F9406E89000B0100696031 S1134C7E18996E89001419006BA0000FF2460100FA S1134C8E6D7501006D7654700F817EBC732047FAEA S1134C9E7FBA72507FBA72407FBA72606F1000167C S1134CAE0C004628A800470EA8014710A802471278 S1134CBEA80347144016F80B38B94010F80538B954 S1134CCE400AF80338B94004F80138B97FD6702089 S1134CDE547018886AA8000FF24A7A0000003AAE9F S1134CEE01006BA0000FF25054707A0000000394896 S1134CFE01006BA0000FF24C54707ECF7320470C52 S1094D0E7FD672107FD66F S1134D147020190054707A01000FF24C6A28000FB5 S1134D24F24A470C7A000000394E0100699040248D S1134D3401006B20000FFD766F00000C7920000742 S1134D4446087A00000039E640067A0000003990EB S1134D540100699079000001547001006DF27EBC79 S1134D6473704606790000014016190001006B2196 S1134D74000FF24C7A02000039481FA147020B507D S1094D8401006D72547081 S1134D8A01006DF601006DF501006DF401006DF38B S1134D9A7A03000FF24A7A04000FFD947A06000F90 S1134DAAFD960F857A25000000105840008C7A255C S1134DBA0000000B461C01006B20000FF1A87A01C9 S1134DCA000000140A817D1070705E00540E5A00AF S1134DDA50AE7A25000000D461C5E004D5E0D00A3 S1134DEA586002C06B20000FF1F2587002B65E00E0 S1134DFA540E5A0050AE7A250000000C46380100C1 S1134E0A6B20000FF1A847167A00000FF1A85E0084 \$1134E1A3DF05E003E4E19006BA0000FF1F26848A7 \$1134E2A47107A00000FFD7E5E004B2A188868C876 S10A4E3A40045E00540E5A0F S1134E410050AE010069E5010069606E08000BA81D S1134E51405860011A68384754010069606E0800BF

S1134E61156AA8000FFD935E004D5E0D00460C7A95

S1134E7100000FFD7E5E004B2A4004F80168C80162 S1134E810069606E08001473784714010069606E4C S1134E910800156A29000FFD9A1C98587002060132 S1134EA10069606E0800156AA8000FFD9A01006987 S1134EB1606E080014E80F4730A801474CA8024768 S1134EC176A8044744A8054740A806473CA80747D5 S1134ED142A80858700084A80D4750A80E587000C5 S1134EE186A80F47365A0050A66838461C01006947 S1134EF1606B21000FF1826F810016010069606B04 \$1134F0121000FF1846F81001801006961790000AB S1134F110140105E0049485A0050AE0100696179B0 S1134F210000035E00044C5A0050AE010069605E4B S1074F31004C965A3C S1134F350050A65E005492010069606E090016587F S10E4F4570015E7909002818997A00B9 S1134F50000FF2065E0003865A0050A60100696045 S1134F605E00579A5A0050A65E0055505A0050A64B S1134F70683846085C0001485A0050AE0100696078 S1134F806E080014E80F4722A80358700118A804FB S1134F904770A8064778A80758700100A80D473243 S1134FA0A80F587000F65A0050A60100696001006D S1134FB069616F0000106F900016010069606F0056 S1134FC0000C7910FFFA010069616F90000C5A001F S1134FD0509C01006960790100066F81000C01009A S1134FE06960010069616E0800096E98001701008C S1134FF06960010069616F00000E6F9000185A002B S1135000509C010069605E0055D25A0050A6010010 S113501069606E090018460C0100696019116F81FE S113502000164012010069606E0800191750010053 S113503069616F900016010069606B21000FF17CBB S10950406F8100186A28CC S1135046000FF1601750010069616F90001A7A052C S1135056000FF020010069606E59000C6E89001C77 S11350666E58000C175079100009010069616F90A1 S1135076000C6E58000C471E790000106DF00100FC S113508669607A01000000D0AD17A100000001D43 S10450965EB7 S11350970003B00B87010069605E005452400801A9 S11350A70069605E003E4E01006D7301006D74017E S11350B7006D7501006D76547001006DF66DF50194

\$11350E714E80F4720A8044774A8065870009AA824 \$11350F70758700130A80D58700202A80F587000A5 \$1135107A85A0053046940471801006B20000FFD9B \$1135117966B21000FF1826F0000101D015860018A \$1135127DC010069606F0000107920FFFF470A0166 \$11351370069606F00001069B0010069606F0000CA \$11351470C7910FFFA010069616F90000C01006986 \$1135157605E0054525A00530C5A0053046B2000EB \$11351670FF18C7348587001940100696018996EA7 \$113517789001801006960F9046E89001401006947 \$109518761790000015AE9 \$113518D005220010069606E09001858700168F81A \$113519D3C6AA8000FF1F618886AA8000FF17A5A34

S11350C7006DF401006DF37A06000FFD967A030074 S11350D70FF1827A04000FF1F4010069606E080091 S11351AD005304010069606E090019A9024708A99A S11351BD0447405AQ053046B20000FF18C73484789 S11351CD1601006960790180036F8100180100697F S11351DD6179000003403C010069606F000018799B S11351ED20800358600110F83C6AA8000FF1F65AAC S11351FD00530401006960790100846F8100160178 S113520D006960790180016F81001801006961797D S113521D0000035E00044C5A00530C5A005304184A S113522DDD010069606E090019470EA9014754A9F3 S113523D024750A903475C407C69404724FD0101A6 S113524D0069606A29000FF1826E89001B7A0000E3 S113525D0FF182010069616E0800016E98001C4017 S113526D56010069606E08001B6AA8000FF1F40175 S113527D0069607A01000FF1F45E08001C6E98004D S113528D014004190069C0010069606F000D1069D4 S106529DB04024F6 S11352A0010069606E08001B6AA8000FF184010008 S11352B069607A01000FF1846E08001C6E98000189 S11352C04002FD0401006960010069616F00001083 S11352D06F90000E010069606B21000FF17E6F81F9 S11352E0001001006960F9016E890018010069600D S11352F06E8D001A010069617A00000FF1905E0062 S11353003E164008010069605E003E4E01006D7368 S113531001008D746D7501006D76547001006DF6B9 S111532001006DF501006DF21B971B977A00DA S113532E000071960FF17A02000000085E006CDA3C S113533E5E003E840F86460AF83C6AA8000FF1F61A S113534E407AF8406EE8000BF8066EE80014F80395 S113535E6EE8001618886EE80017790000026FE0F8 S113536E00187A050000001A0AE5790000086DF0AD S113537E7A01000000020AF10FD05E0003B00B8721 S113538E7A05000000220AE50FD00B75F93C6889F6 S113539E0FD00B75F90268890FD00B75F904688963 S11353AEF0040FD1F87C5E00641A790000156FE0EA \$11353BE000C0FE1790000015E00044C0B970B9773 S11153CE01006D7201006D7501006D76547062 S10B7196FFFF0000FFFF0020D1 S11353DC01006DF66DF50C8D7A06000FFD9C5E00D8 S11353EC3E84010069E0471201006960F9506E893E S11353FC000B010069666EED00146D7501006D768D \$113540C547001006DF601006B20000FF1A84722C7 S113541C01006B20000FF1A85E004B2A7A06000FE6 S113542CF1F25E0002A269E046167900000169E01F S113543C400E7A0100000009790000015E00044C62 S113544C01006D76547001006DF60F867A00000F22 S113545CFDC468090A0968891A096EE900150FE187 S113546C7A00000FF1A85E003E165E004D5E0D0042 S113547C460E01006B20000FF1A81FE04602558276 S113548C01006D76547001006DF6F8025C00FF406B \$113549C7A06000FFD9C01006960587000A00100A1 S11354AC6960790101006F8100160100696079015E S11354BC00016F810018790000286DF0010069600B S10954CC7A100000001A32 S11354D27A01000FF2065E0003B00B8701006960D7 S11354E26B21000FF18C6F810042010069606B2116

S11354F2000FF17E6F810044010069606B21000F8F

S10B5502F17C6F8100466A2868 \$113550A000FF1881750010069616F90004801008B S113551A69606B21000FF1866F81004A6A28000FC7 S113552AF18B1750010069616F90004C01006980AA S113553A7901003A6F81000C010069605C00FF0880 S113554A01006D76547001006DF6F80E5C00FE825F S113555A7A06000FFD9C01006960476601006960D4 S113556A790101008F810016010069607901000167 S113557A6F810018010069606F81001A0100696077 S113558A790100026F81001C01006960F9126E89B9 S113559A001E790000126DF07A010000719E01006C S11355AA69607A100000001F5E0003B00B870100D7 S11355BA69607901001E6F81000C010069605C005A S11355CAFE8601006D76547001006DF601006DF5DA S11355DA7A06000FFD9C0F85F8045C00FDF40100B7 S11355EA6960476C010069606F5100186F81001689 S10955FA010069606F511D S1135600001A6F8100186E58000D88F2010069615C S11356106E98001A010069606E09001A471E79002D S113562000106DF0010069607A010000001C0AD1CD

S11356307A100000001B5E0003B00B870100696054 S11356406E08001A175079100008010069616F9004

S1135650000C010069605C00FDF801006D7501003B

S11356606D76547001006DF601006DF50F85F80834

\$1135680010069606F8500160100696018996E89D0 \$113569000180DD0010069616E980019010069605D

S11356705C00FD687A06000FFD9C010069604730FC

S11356A0790100066F81000C010069605C00FDA2B5 S11356B001006D7501006D76547001006DF66DF595 S11356C00D060D850CE85C00FD127A06000FFD9CAA S11356D001006960471C010069606F8500160100C4 S11356E06960790100046F81000C010069605C004D S10756F0FD606D7573 S10956F401006D76547004 S113719E30362F31302F39382030373A35383A31AE S11271AE3300524144494F2056312E30320A00EB S104724C003D S11356FA01006DF501006DF47A05000FFDA00100AB S113570A69504708010069505E003E4E1A80010044 S113571A69D07A010008001A7D1072307D10721067 S113572A7F2772307F2772701888382F38277A04B7 S113573A000800107A00000000010AC07D007030E1 S113574A7A00000000010AC07D0072307D107220C8 S113575A7D1072107A1400000017D4070207900D7 S113576A000B6BA00008001E7FF672007FF5700024 S113577A5E0035105E00305C18886AA8000FF17A62 S113578A19005E00222001006D7401006D755470C9 S113579A01006DF601006DF501006DF401006DF371 S11357AA01006DF21B971B977A03000FFDA87A0478 S11357BA000FFDA07A06000FFD9C0F856F5000169E \$11357CA0C005860075AA80058700082A801587043 S11357DA0090A80258700138A80358700250A8040F S10957EA5870026AA805D4 S11357F0587003FEA80658700730A8075870072A87 S1135800A8085870042CA8095870043CA80A5870B9

\$11358100456A80B58700712A80C587004C2A80D9F S113582058700658A80E587001EEA8115870065604 S1135830A812587001A8A81358700652A8145870DA S1135840034EA815587003C2A817587005E0A8188D S1135850587006505A005F2A5E00305C6E5D001876 S11358608DFF6AAD000Ff18A5A005A2E7A000000AB S113587000180AD0010069F068080C8A01006971F7 S11358800B7168190C92F8085E0053DC0100696022 S1135890790100086F81000C010069607901000141 S11358A06F810016010069606E8A0018010069604A S11358B06E8200190C2817500CA917510910792071 S11358C0008043180100696018996E89001A01006C S11358D06960F9026E89001B5A005CD00C207A01C1 S10958E00000001A0AD1C9 S11358E60CA85E0064560C8847120100696018997A S11358F66E89001A01006960F901401001006960AF S113590618996E89001A0100696018996E89001B3E S11359165A005CD07A1500000018010069F5685534 S1135926010069700B70680DF8085E0053DC0CD832 S1135936175079100008010069616F90000C01008E S11359466960790100026F810016010069606E8545 S11359560018010069606E8D0019010069601899CC S11359666E89001A010069606E89001B0CD81750F5 S11359760C591751091079200080432201006960EF S1135986790100086F81000C0100696018996E891D S1135996001A01006960F9026E89001B4036010095 S11059A669610CD07A110000001C0C585EE1 S11359B300641A0C88472001006960790100086FAC S11359C381000C0100696018996E89001A0100694D S11359D360F9036E89001B5A005CD07EBC732047B8 S11359E3FA048019006BA00008000E5E0002A26B8B S11359F3A0000800127ECF732047FA7A0000080043 S1135A03117D0070607A00000800117D0070400170 S1135A13805A005F2A19006BA00008001E7A000058 S1135A230800117D0072205E00305C18885E00312E S1135A335A5A005F2A19006BA00008001E7A00005E S1135A430800117D0072205E00305CF8015E0031B5 S1135A535A5A005C3E7A0000005F4401006BA000C8 S1135A630FF20219006BA00008001E7A0000080060 S1135A73117D007220010069404616F9097900FF7F S1135A83FF5E00058201006B20000FEF9A0100699D S1136A93C06E5800184722195540160D501770014F S1085AA30069417A11C5 S1135AA80000001A0A81188868980B5579250100A6 S1135AB845E4402E195540240D507960000F1770A5 S1135AC80D511771010069427A120000001A0A92F6 S1135AD878006A28000071BE68A80B557925010072 S1135AE845D67F277230010069407A100000001AF9 S1135AF801006B80FF207A000008002001006B8001 S1135B08FF28790080806B80FF247900FFFF6B8079 S1135B18FF2C7F2F72707F2F72507F2F72407F2F40 S1135B287030282FE8F8C806382F7F2772707F272F S1135B3870607F2772507F2770402827E8F8C807CD

S1135B58305CF8015E00315A18885E0035827A009C

S1135B4838277F2F70707F2770707F2770305E0032

S1135B680008001A7D0072107D0072107A00000887 S1135B78001A7D0072107D0072107A000008001A65 S1085B887D0070105ABD S1135B8D005F2A6E5800186AA8000FFDA46E580015 S1135B9D19175069B06E300001188869B06E5D0038 S1135BAD1A17556930095069B001006940461EF94C S1135BBD097900FFFF5E00058201006B20000FEFE5 S1135BCD9A010069C0790101046F81000C7A00000B S1135BDD0060C201006BA0000FF20269305E00028A S1135BEDB85A005F2A6E5D00186AAD000FF15F6A46 S1135BFD28000FF15F5E0030F65A005F2A19006B22 S1135C0D210008001A77416708795000017A0100D4 S1135C1D08001A77087D1067405A005F2A5A005F02 S1135C2D2A5A005F2A6E5D0018ED036AAD000FF16C S1075C3D5E18885E03 S1135C410035825A005F2A6E5800194710F0017A14 S1135C5101000000180AD118885E0064566E5D00C8 S1135C61183DDC5A005F2A1AD5190040187FE870E4 S1135C71507EE8735046FA6B00FFE017700A856F97 S1135C817000060B506FF000067920001045DEF815 S1135C911411351A084EFAF8085E0053DC01006944 S1135CA160790100066F81000C01006960790100CF S1135CB10A6F8100160FD0F90811301A094EFA0142 S1135CC10069616E980018010069606E8D00190108 S1135CD10089605E0054525A005F2A5A005F2A7AB2 S1135CE100000800117D0070207900000B6BA000FA S1135CF108001E5E00305C18886AA8000FF17A194A S1135D01005E0022206E5800195E0030F6F8016A28 S1135D11A8000FFDAA6F50000C7920000A462A5EE4 S1135D2100305C6E58001C88FF6AA8000FF18A18C5 S1085D31885E00315AF8 S1135D366E58001D6AA8000FFDAB470818886AA8AC S1135D46000FFDAA19006BA0000FFDA6190069B08B S1135D56010069404628F9097900FFFF5E000582C3 S1135D6601006B20000FEF9A010069C06E58001AFB S1135D7617507910000A010069416F90000C190050 \$1135D86404C6E58001B471A6F70000617700100CE \$1135D9669417A110000001A0A816E58001B68983E S1135DA640266F7000067960000F17706F71000649 S1135DB61771010069427A120000001A0A927800EB S1135DC66A28000071BE68A86F7000060B506FF059 S1135DD600066E58001A17506F7100081D0145A281 S1135DE60100694019116F8100146E580018461E8F S1135DF6010069407901AAAA6F81001218886AA86D S1135E06000FFDA47900028F5E0002B84008F80175 \$1135E166AA8000FFDA47A0000005F6A01006BA067 S1135E26000FF2025A005F2AF8085E0053DC0100F4 S1095E3669607901000C13 S1135E3C6F81001601006960790100066F81000C06 \$1135E4C68381800010069616E98001801006960D7 S1135E5C6E3900016E890019010069605E005452AC S1135E6C6E580018587000B6190069B05A005F2AB1 \$1125E7C0FD05E0069765A005F2A5C00F8705AF6 S1135E8B005F2A6E58001847087FD370705A005F62 S1135E9B2A7FD372705A005F2A19006BA00008D086

S1135EAB1E7A00000800117D0072207A1500000094

S1135EBB18010069F5685D17550D5D0DD00C801840 S1135ECB880D0D010069700B7068081750090D01DE S1135EDB0069700BF0680817500D050CD518DD011F S1135EEB0069700B800B706808175009055E003051 S1135EFB5C19006B210008000C77216708792000DE S1135F0B0147EE6BAD000800006BA5000800027A98 S1135F1B000008000C7D007020F8015E0035820B38 S1135F2B970B9701006D7201006D7301006D740185 S1135F3B006D7501006D76547001006DF60F865E71 S1135F4B0023B86A28000FF1DAA810450C01006B86 S1135F5B20000FF1D65E003E4E01006D76547001A9 S1135F6B006DF601006DF501006DF401006DF37A1F S1085F7B03000FF1DA40 S1135F807A04000FFDA05E0023B87A06000FFDA876 S1135F906A28000FFDA4586000DC6838586000AE21 S1135FA069600B5069E01B50010069416F90001457 S1135FB069607960007F466EF8085E0053DC7A05FC S1135FC0000FFD9C010069507901000C6F810016DF S1135FD001006950790100086F81000C686818009D S1135FE0010069516E980018010069506E6E00013D S1135FF06E8E00196A28000FFDA618000100695171 S10D60006E98001A010069506A2925 S113600A000FFDA76E89001B010089505E005452FF S113601A7A00000FFDAB68091A0968896A28000F1B S113602AFDAA460E6A28000FFDAB46065C00F6C0C0 S113603A4062010069405E0032147900028F5E00FA S113604A02B840506838A829464A69661B560100B6 S113605A6B20000FF1D66F0000141D06460C7A005F S113606A000FFDA669010B51698140286838A829E7 S113607A462269600B5069E001006B20000FF1D6DB S113608A010069416F0000146F9000140100694017 S113609A5E0032146838A810450C01006B20000F0A

S11360AAF1D65E003E4E01006D7301006D7401006D S11360BA6D7501006D76547001006DF60F865E00F1 S11360CA23B86A28000FF1DA464A7A06000FFDC699 S10D60DA6868D80168E847286A28BE S11360E4000FFDA447125E00305CF8015E00315AD3 S11360F418885E003582401801006B20000FFDA053 S11361045E003214400A5E00305C18885E00315A26 S11361146B20000FFDA85E0002B86A28000FF1DAB4 S1136124A810450C01006B20000FF1D65E003E4E12 S109613401006D765470B9 S11371BEFC05ACC45A7212936E3D06A32EC3AF3EA9 S104724E003B S113613A7FCB701054707FCB721054707FCB700079 S113614A54707FCB720054707FC9700054707FC939 S113615A720054707FCB702054707FCB72205470BD S113616A18880A08A80245FA547055D055DA55C059 S113617A55EE55CE40EA55CA55CE55B455E255BCEE S113618A40DE55BE55C255A855D655AA40D26DF61D S113619A0C8655B418EE55C8559C0C68E880A8803E S11361AA460455984002559A55B6558410060A0E67 S11361BAAE0845E255AA5C00FF7C559255A25C00E4 S11361CAFF6E559CFE01F601400C7ECB730046041B \$11361DA18EE40060A06A66445F05C00FF5855808E

S11361EA5C00FF640CEE4702558C0CE86D76547023 S11361FA6DF65C00FF5818EE18665C00FF385C0008 S113620AFF5E5C00FF2A18887ECB770067080CE9DA S113621A100914890C9E5C00FF460A06A60845DA92 S109622A5C00FF125C00A1 S1136230FF380CE86D76547001006DF66DF50100C1 S11362406DF401006DF20C850F960C0D0FE45C00EB S1136250FF22F8A05C00FF400C8846180C585C0034 S1136260FF360C88460E5C00FF0AF8A15C00FF288C S11362700C8847085C00FF08F801404418EE0CD86D S113628017501B500D0E40225C00FF6E0CEA175293 S113629017720AC268A80CE817501DE047065C0094 S11362A0FEEA40045C00FED80A0E1CDE45DA5C00FF S11362B0FEA65C00FE8A5C00FE8C5C00FEAC1888C6 S11362C001006D7201006D746D7501006D7654707E S11362D001006DF601006DF56DF46DF36DF21B9721 S11362E01B870C830F950C0618EE010069F5790ED7 \$11362F000080C38175017F001D053E00D800C8CB7 S1136300F80818C80C8C1C6843060C6CF401402275 S11363100C681750175419400D0517F001D053E0BD S109632088010C840D50FD S113632617F001D053E00D8847020A0418BB1888F9 S11363360C8A19EE0CCC46020B5E19000DEE4602D1 S11363460B500D0E5A0063F20CA8460A0DEE4706D2 S11363560CCD18D6400EA6084506FD0886F840045E S11363660C6D1866185540185C00FE02F8A05C0017 S1136376FE200C884704FE01400418EE40060A0578 S1136386A56445E40CEE4704F80140740C385C003F S1136396FE000C88465C1855401E0CB81750177042 S11363A6010069710A8168185C00FDE60C884704DF S11363B6FE0140080A050A0B1CD545DEAE0147322C S11363C65C00FDB65C00FD9C5C00FDA2F8A05C00D0 S11363D6FDC00C8846065C00FDA040065C00FD9AE4 S11363E640E608D31A040CA80A080C8A0C44586020 S11363F6FF565C00FD445C00FD465C00FD661888A3 S11364060B870B976D726D736D7401006D750100CA S10964166D7654706DF672 S113641C01006DF50C8E0F950C06AE8044220CE831 S113642C17500C6917510910792000804E120C601A S113643C0FD10CE85C00FDF40C884704F801400211 S113644C188801006D756D7654706DF66DF501004C S113645C6DF40C8E0F940C0D1866AE8044220CE86F S113646C175017550950792000804E145C00FCE835 S113647C0CD00FC10CE85C00FE4A0C884702F601F4 S113648C5C00FCCE0C6801006D746D756D765470F7 S113649C6DF601006DF51B870F857900FFFF69F020 S11364ACF80168D818EE40140FF1F0020CE8559A74 S11364BC0C884706188868D840068E02AE8045E8DA S11364CC0B8701006D756D7654708DF601006DF5DA S11364DC6DF401006DF31B877A03000FF020F401B7 S11364ECF6020C8E18886EF800010CE8470EA80111 S11364FC4728A802587000925A0065D418EE7A0105 S109650C000000010AF189 S11365120C6808E80C605C00FF3A0A0EAE1E45E8FF S11365225A0065D418EE406001006B20000FF1DCC4

S11365320CE917517909001E52910AB169006911D7

\$11365421D1046420CED1755790D001E52D50AB5A1 \$11365520CEC100C100C0CC8880E0C600FD15C00F3 \$1136562FEF27A010000000A0AD10CC888100C401D \$11365725C00FEE07A010000000B0AD18C110D4090 \$11365825C00FED0404C0A0E6A28000FF14C1C8EAF \$11365924596403E0C607A01000FF17C0C685C0069 \$11365A2FEB20C607A01000FF17EF8045C00FEA4D6 \$11365B26A28000FF15E6A29000FF15F14986A29B4 \$11365C2000FF160149868F80FF10C40F8065C00B3 \$11365D2FE820B8701006D736D7401006D756D761B

S11365E254706DF601006DF51B877A05000FF020DB S11365F2FE020CE07A01000FF17C0CE85C00FE184C S10766020CE07A0129 S1136606000FF17EF8045C00FE0A0CE07A01000F2C S1136616F17EF8045C00FDFC0FF10CE0F8065C006A S1136626FDF26E780001E80C6AA8000FF15F6E783F S11366360001E8036AA8000FF15E6E780001E82005 S11366466AA8000FF1601900403A69717909001EC1 S113665652910AD1697010101010880E0CE05C007B S113666FDB269717909001E52910AD17A110000AE S1136676000A69701010101088100CE05C00FD947C S113668669700B5069F07920000A45BE0B8701003A S10966966D756D76547071 S113669C1B970FF07A010000802001006981010032 S11366AC69705D000B97547001006B20000FEF10A4 S11366BC7A6000FFFFFF7A20000080004506790015 S11366CC000154701900547001006DF501006DF453 S11366DC01006DF37A05000080007A03000080202D S11366EC6858A8A046286E58001FA8FF4620189981 S11366FC01006F54001240046C3808890FC01B74DD S113670C0F8046F46E58001E1C89460255821900EF S113671C01006D7301008D7401006D7554706DF69C S113672C01006DF501006DF40F84196640247905A0 S113673C000601C052657A15000071D66F50000432 S113674C1770010069510A811F9444040D60400CB8 S113675C0B56792600104DD67900FFFE01006D749E S113676C01006D756D76547001006DF601006DF5C8 S113677C01006DF401006DF301006DF27A06000F57 S109678CFDAC0F840F9523 S11367920FC055940D03792000014D067920000F96 S11367A24F087900FFFE5A006858F84038407900D3 S11367B2000F5E006B24792300084C100D3017F093 S11367C278006A28000071CE3842400E0D3017F06E S11367D278006A28000071C638431933405E790094 S11367E2000F69E019BB40300FC1685801006B22E9 S11367F2000FFDB25D200FC001006B21000FFDB63A S11368025D1017500D03685917511D104710696028 S11368126961090169E10B5B792B00064DCA68586D S113682217501D0347121888384218883843F84015 S113683238407900FFFB401E0B750B746F70001813 S11368421B506FF000180B50469418883842384396 S1136852F8403840190001006D7201006D730100A7 S11368626D7401006D7501006D76547001006DF652 S113687201006DF501006DF401006DF27A06000F5E S1096882FDAC0F855C0073

S1136888FEA00D05792000014D067920000F4F0860 S11368987900FFFE5A006964F84038407900000F17 S11368A85E006B24792500084C100D5017F0780011 S11368B86A28000071CE3842400E0D5017F0780057 \$11368C86A28000071C638437904000601C052548E S11368D87A14000071D66F41000401006940010078 S10568E86B221D S11368EA000FFDBA5D200D00461218883842188838 S11368FA3843F84038407900FFFD405E79003A9801 S113690A69E019DD0D54790C000601C052C47A14E9 S113691A000071D640246F4100040100694001005F S113692A6B22000FFDBE5D200D0046140DDD4C08E0 S113693A69606961090169E10B5D792D025A4DD6D5 S113694A188838423843F8403840792D025A4C04A2 S113695A191140047901FFFC0D1001006D72010048 S113696A6D7401006D7501006D76547001006DF649 S113697A01006DF501006DF401006DF301006DF283 S113698A1B971B877A04000FFDC87A06000FFDAE19 S113699A0F8219556F03000C793300045E004D5EB3 S11369AA0D0046F87E407370461079080006790097 S11369BA000D5E0056645A006B0A02086EF8000164 S11369CA04800D33587000EC010069407A200000FD S10969DA8000586000B8C3 S11369E07A0000005F4401006BA0000FF20219005E S11369F06BA00008000E5E003E84010069E0587040 S1136A0000927900D11A6DF07A0100006B240100F4 S1136A1069605E0003B00B87010069607A010000C1 S1136A206B2C0A907A0500006B241AD001006BA02D S1136A30000FFDB2010069607A0100006B500A90FA S1096A401AD001006BA056 S1136A46000FFDB6010069607A0100006B6E0A90C2


\$1136A561AD001006BA0000FFDBA010069607A012B \$1136A6600006BC80A901AD001006BA0000FFDBE8F \$1136A76010069405C00FDF00D0546160100694001 \$1136A867A10000040005C00FDDE0D054004790527 \$1136A96FFFF0D5546226DF30FA17A110000001871 \$1136AA6010069405C00FCC60B870D0517730100E5 \$1136AB669400AB0010069C06E78000103080D58E8 \$1136AC617987900000D5E0056640D3347040D5582 \$1136AD64732188838400D33460C5C00FBD00D0055 \$1136AE647045E0001C67A0000008000010069C008 \$1136AF601006960470E010069605E003E4E1A801F \$1136B06010069E00B870B9701006D7201006D733C \$1116B1601006D7401006D7501006D76547000

\$11371CE010204081020408000000000400000006E \$11371DE40004000000080004000000C00040005D \$11371EE00010000400000014000400000180004A \$11371FE40000001C00030000001F0000200000158 \$113720EF20002000001F40002000001F600020088 \$113721E0001F80002000001FA0002000001FC0067 \$108722E02000001FE00020051 \$10772500000800086 \$113682418500D0046FA547068987900A5796B805F \$1136834FFA8F84138406B20000FFDAC55E2F84043 \$113684438407900A5006B80FFA8547001006DF6ED



Mermec


Wireless Solutions

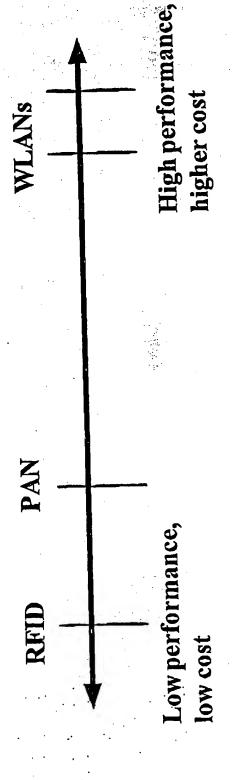

- · Continuum of needs for wireless products
 - · No one product which can fill all needs
 - Family of complementary devices

Targeted Applications

- Cable replacement (point to point)
- Barcode scanner to portable/mobile computer
- Printer to portable/mobile computer
- Personal area connectivity (peer to peer)
- hand held computer to numerous peripheral devices including scanners, printers, wide area network radios, etc.

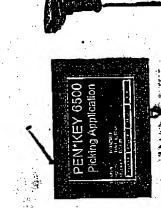



Applications Solution Requirements

- · Very low cost
- · Low power consumption
- · Small size
- Interference immunity
- Ease of use
- Standardized interfaces
- Unlicensed, international usability

'ire Replacement Concept

Complementary to WLAN/IEEE 802.11 devices

-lower range

-lower throughput


·Lower complexity than WLAN devices

-reduced RF specifications

-reduced MAC/PHY complexity

Features which do not add recurring costs


-peer to peer with up to 10 nodes per PAN

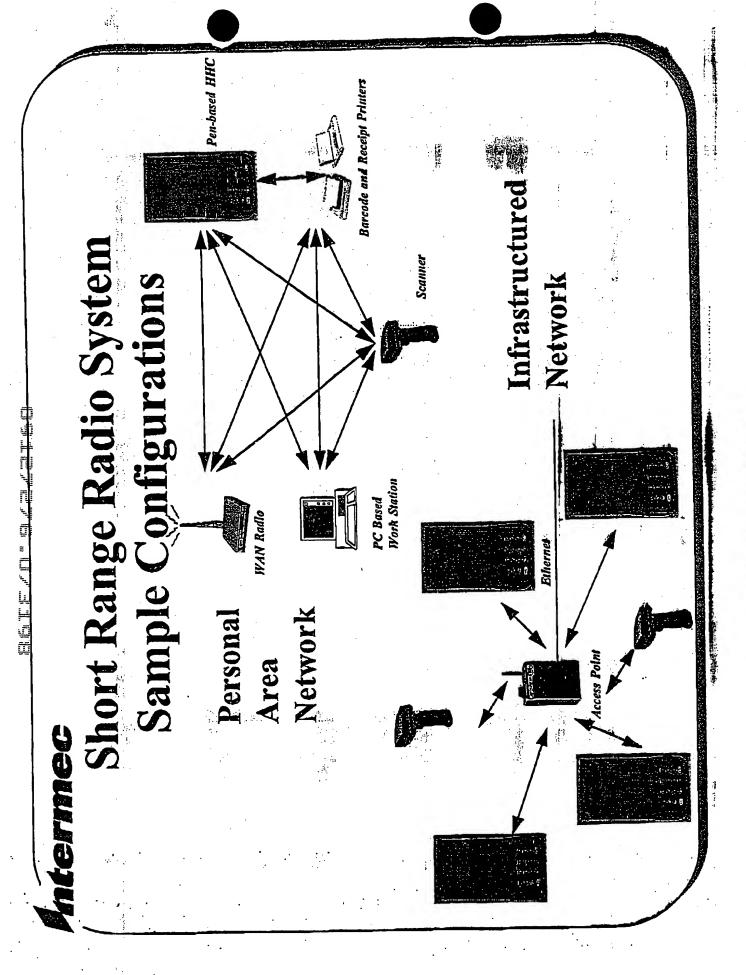

Short Range Radio System

onfigurations

Network Personal Area

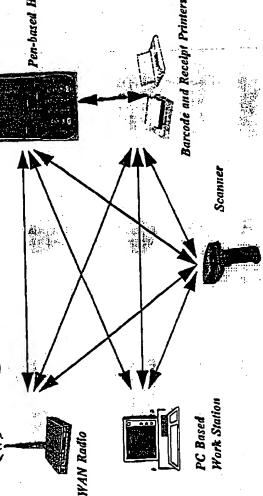



Personal Area Network (PAN; Peer-to-Peer)

- Multiple Networks co-habitate (20 or more)
 - Up to 10 devices in a single PAN
- Dynamic PAN and device IDs with network initiation
 Network maintained devices coming and going
- Temporary devices also supported

Mermec

Short Range Radio System



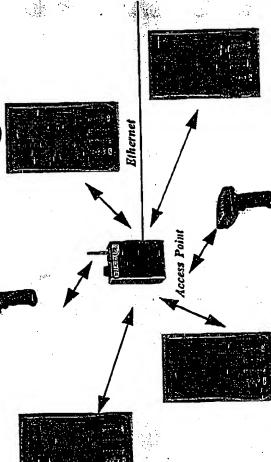

Limited Infrastructure Network

Limited Infrastructured Network

- Main device (access point) has power at all times (fast access)
 - Support for more than 10 devices
- Ethernef access points with higher layer protocol
 - Communications to the NT Base (SFAR Base)
- Switch from PAN to LAN and back

Short Range Radio System Desirable Features

Interface

- Simple interface for intelligent and "dumb" devices
- Dumb devices
- » Serial, RS232 like interface (19.2kbps)
- Intelligent devices (Ability to establish and control net parameters)
- » Serial, RS232 like interface (up to 115.2kbps)
- » Parallel/ PC Card optional

Very Low Power Consumption

- Minimized while not operating (e.g. 6mA or less)
- Operational, fast, low power comm. (e.g. 80mA or less)
- Very low full day average (e.g. 10mA avg. over 10 hours)

Fast Response (Variable Speeds)

- "Wired Response" (e.g. avg. response time under 125mS)
 - Various speeds for optimum response/range/current
- CSMA/CA; collision sense/collision avoidance

Short Range Radio System Desirable Features ntermec

Immunity

- Frequency Hopping to avoid fixed interferers and multipath interference
- Able to coexist with other frequency hopping systems
- Reduced range decreases the impact of co-located networks
- High data rate reduces "air time"

Size

- Under 1/3rd the volume of typical 802.11 radios

TOC -

- In mass production, should be under 25% of the projected cost of an 802.11 radio

Short Range Radio System Desirable Features

Non-licensed, ISM bands

World Wide Regulatory

- 2.4GHz frequency hopping: ETSI 300 328

- Low power output: FCC Part 15.249

- Japan: RCR 33

doc.: IEEE 802.11-98/239

Area Network Medium Access Proposal for a Wireless Persona Control and Physical Layer

Slide 1

Pat Kinney, Intermec Technologies

Submission

Introduction


messages and short distances between devices. Typical applications such as the mobile worker and Physiological Monitoring involve short Key attributes for these devices include:

- low cost
- small size
- low current drain
- minimal operator intervention

Features

- Dynamic addressing: allows the network to be intiated and maintained with minimal operator intervention
- temporarily split from its PAN, attach to a non-PAN device, detach from that device Temporary network: allows a device to and resume participation in the original

Sample Configuration

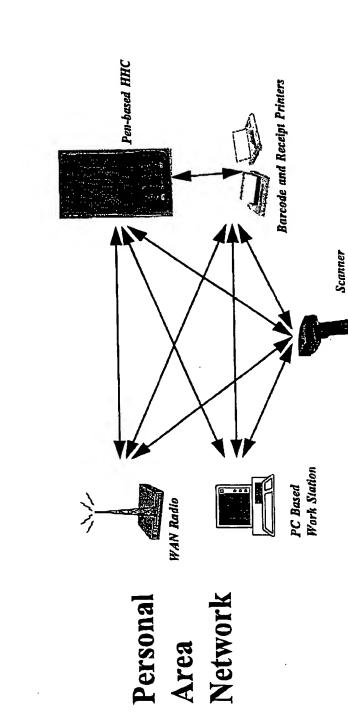

ubmissior

Cost

behind this proposal is a system design with driven by complexity and high performance One of the major drivers behind WPAN is the lowest possible cost. Cost is typically relaxed requirements on hardware cost possible for the lowest recurring costs. requirements. The design philosophy drivers and which leverages existing technology and componentry where

S

Pat Kinney, Intermec Technologies

noissimo

Cost

- MAC greatly simplifies requirements on RF
- design
- SIFS/DIFS/PIFS are greatly relaxed, etc.
- Low MAC S/W overhead (estimate 25% of 802.11)
- Low MAC/PHY gate count (estimate 10% 802.11)
- Single conversion receiver
- Direct launch VCO

Power Consumption

- Minimal MAC complexity allows:
- reduced ASIC current drain
- reduced microprocessor on time
- Minimal transceiver performance requirements allow:
- reduced active componentry
- drain @ 3.3V for connection maintaince Above results in less than 6 mA current

Coexistence

with a high speed aggregate data rate to aid CSMA/CA protocol, Frequency Hopping, It's essential that these devices operate satisfactorily in congested spectral environments. The proposal is for in Coexistence with:

- 20 other co-located PAN networks
- WLAN FH networks

Range

The majority of requirements for PANs are Intermec Technolgies' implementation of this proposal has a demonstrated range of met with a maximum range of 10 meters. cubicle environment and in shipping and greater than 10 meters as verified in a receiving areas.

Submission

Regulatory

Worldwide

.- US:

Part 15.249

- Europe:

ETS 300 328

- Japan:

RCR 33

Slide 10

- 2.4 GHz operation
- world wide regulatory
- reduced non-desired emissions from host device
- wide bandwidths allow simple high speed modulation/demodulation methods
- low cost componentry from PCS and WLAN products

Frequency Hopping

world wide regulatory as spread spectrum

 low cost, low current drain, spread spectrum technique interference immunity from narrow band sources

allows a simplified strategy of coexistence in a congested area

- Low transmit power: <1 mW
- low current drain
- complimentary to an effective coexistence strategy
- allows submission under FCC 15.249 (no hop sequence constraints)
- low device count
- reduced consumer concerns about safety

Submission

- 1 Mb/s aggregate data rate
- more effective coexistence strategy due to reduced transmit durations
 - reduced average current drain
- reduced response times yield reduced host current drain

Protocol Requirements

- Support Functional Requirements in CFP (except only 10 stations)
- Support Power Management
- Support Auto Configuration
- Support Temporarily Split Networks

Basic Protocols

- Initialization
- Normal Operation
- Termination

Initialization Protocol

- One Station is "coordinator"
- Others "join"
- Coordinator broadcasts inits
- Others unicast attaches
- Coordinator accepts or declines
- coordinator starts normal operations When all expected stations attach,

Normal Operation Protocol


- Coordinator periodically broadcast synchronization information (beacons)
- After beacons, stations transmit to powered down stations by requesting other stations interval sending to that station to leave receiver on, and after a short
- Stations transmit to powered up stations at any time

Termination Protocol

- Coordinator broadcast (after beacons) termination notification
- This is repeated several times

- CSMA/CA
- P-persistent with reservations (the reservation is similar to that in 802.11)
- response from recipient Unicast frames all have an immediate

Frame Sequences: Initiation

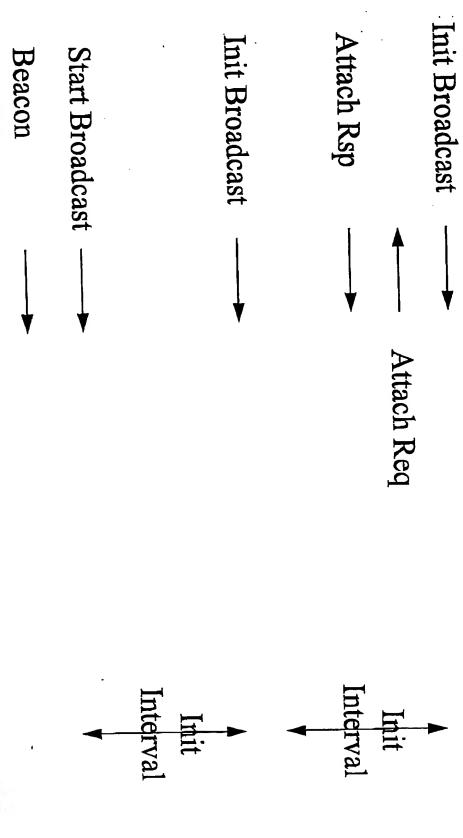


のタルミアピアは、Cファヨル9倍

Slide 22 Charles and Shide 22

doc.: IEEE 802.11-98/239


Send to Powered Down Sta Frame Seq's:Normal Op

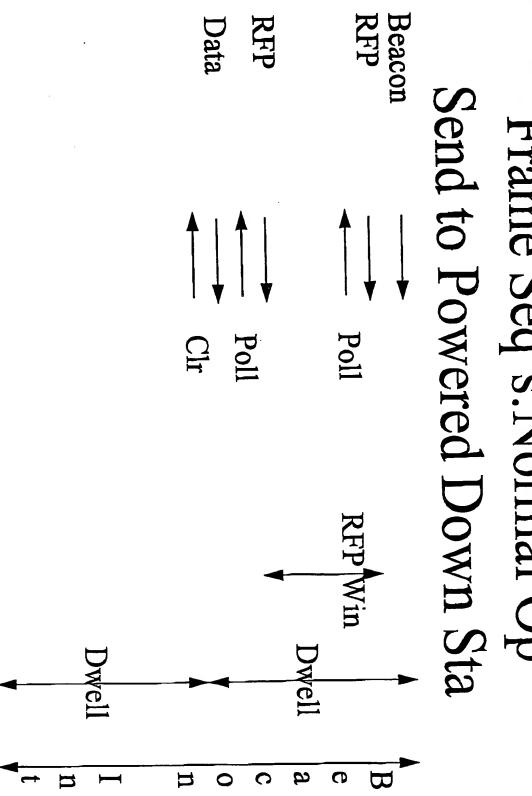


OISIAE》是不是。ID不当工写的

doc.: IEEE 802.11-98/239

RFP Beacon Data Send to Powered Up Sta Frame Seq's:Normal Op Poll RFP Win



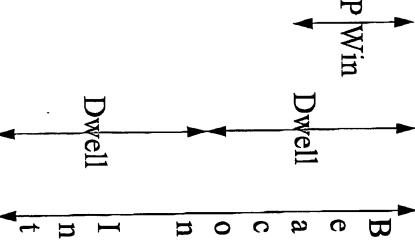


Differences from CFP

- 10 vs 16 nodes per network
- this number is arbitrary
- Currently at 1.5 cubic inches
- shape factor dictated by host device

Summary

- Dynamic: self initiating, self contained network
- Cost: minimal cost, low relative to host
- Power Consumption: less than 20 mW for connection maintenance
- Coexistence: both WLAN networks and PAN networks
- Range: greater than 10 meters in cubicle environment

APPENDIX H

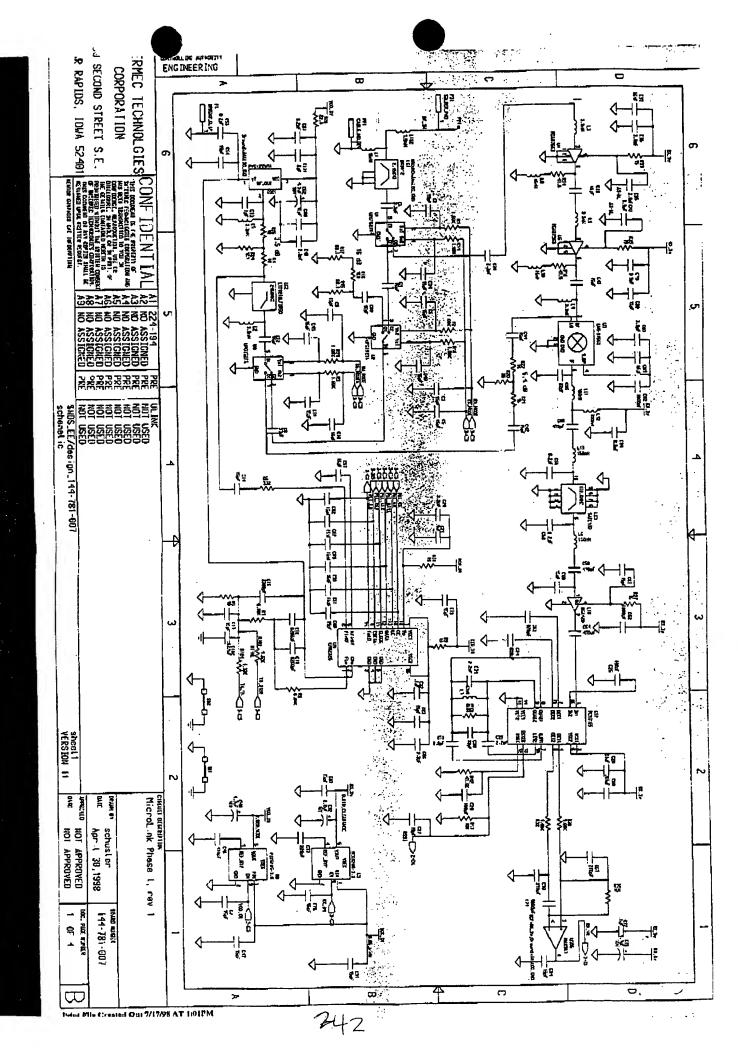

OSIEVE . OVET98

OGIEVEVE "OVELSE


245

Print File Created On: 7/17/98 AT 1:01PM

DOLEAND " OMENICA

2119

Print Pile Crested On: 5/24/98 AT 0:35AM

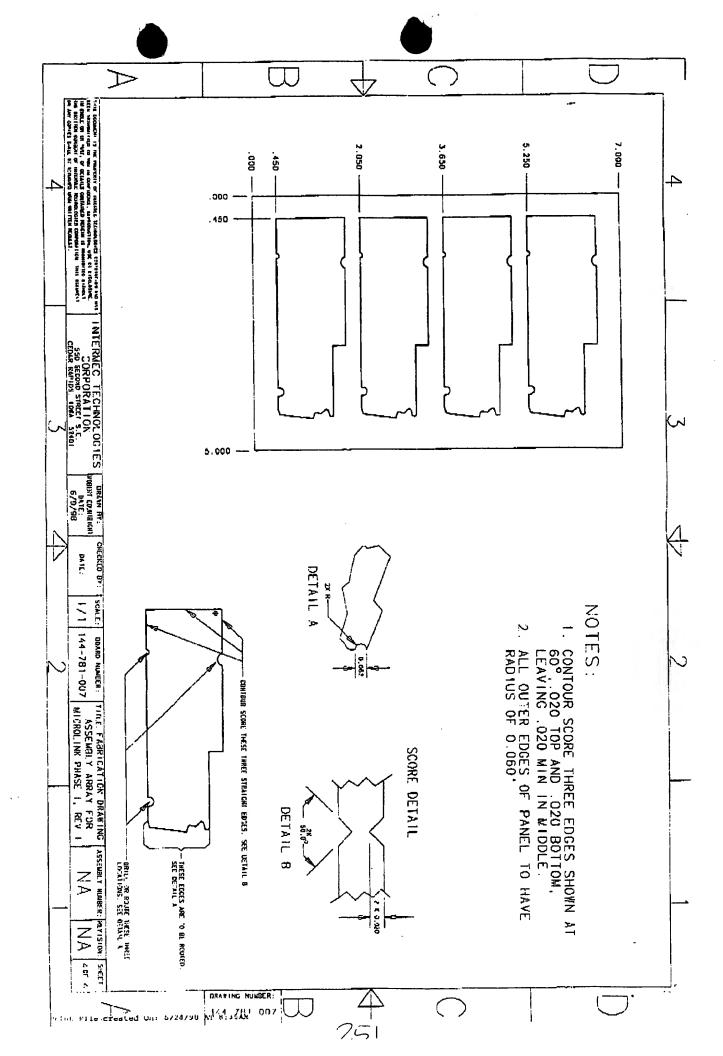

APPENDIX I

Confidential Intermec- bom_224-194-PRE

Page 1

COMPANY PART NO	٥.	COUNT DESCRIPTION	REPER	ence		
144-781-007	1	RAW PCB ULINK	No_ref	_		
149-034-601	1	custom microlink-1, CUSTOM MICRO	LINK PHASE-	-1 U103		
212-064-102	1	H8 3048F, MICROLNK HD64F3048VF	U102			
301-397-154	1	vis res, 392(0603)	R13 "			
301-397-442	1	vis res, 392K(0603)	R117			
301-397-481	1	vis res, 1MEG(0603)	R116			
301-398-000	2	vis res, 0(0603)	L100	L101		
301-398-169	1	vis res, 10MEG(0603)	R118			
301-403-001	6	vis res, 10(0402)	R4 R113	R6 R114 ·	R25	R100
301-403-018	7	vis rcs, 15(0402)	R9 R27	R10 R33	R21 R35	R22
301-403 -0 34	1	vis res, 22.1(0402)	R26			
301-403-051	8	vis res, 33.2(0402)	R120 R124	R121 R125	R122 R128	R123 R133
301-403-066	2	vis res, 47.5(0402)	R19	R34		
301-403-081	2	vis res, 68.1(0402)	R15	R17		
301-403-085	1	vis res, 75(0402)	R20			
301-403-105	1	vis res, 121(0402)	R24			
301-403-114	1	vis res, 150(0402)	R16			
301-403-147	1	vis res, 332(0402) -	R5			
301-403-169	1	vis res. 562(0402)	R115			-44
301-403-193	8	vis res, 1.00K(0402)	R1 R18	R2 R23	R3 R30	R14 R32
301-403-254	1	vis res, 4.32K(0402)	R104			
: 301-403 - 273	2	vis res, 6.80k(0402)	R7	R8		
301-403-289	10	vis res, 10.0K(0402)	R11 R109 R130	R36 R119 R131	R107 R126	R108 R129
301-403-354	1	vis res, 47.5K(0402)	R12			
301-403-385	8	vis res, 100K(0402)	R101 R111	R102 R112	R105 R127	R110 R132
302-386-007	. 1	pcap, 2.2uF	G35			

Confidential I	nterm	ec- bom_	224-194-PRE					Page 2
302-386-010	4	pcap, 4.7uF		C4	18	C52	c75	C107
302-387-009	1	pcap, 4.7uF		C1	L18			
302-409-221	1	cap, 39pF(06	03)	C3	30			
302-410-038	2	cap, 1000pF(0603)	CI	116	C129		
302-410-154	1	cap, .022uF(0603)	c	102			
302-410-162	21	cap, .1uF(06	03)	c: c: c:	21 101 106 112 120 130	C22 C103 C109 C113 C121	C72 C104 C110 C117 C124	C100 C105 C111 C119 C125
302-417-001	1	cap, .5pF(04	02)	C.	131			
302-417-002	1	cap, 1pF(040	2)	C	13			
302-417-006	5	cap, 2.2pF(0	402)		29 74	C38	C49	c73
302-417-208	3	cap, 3.3pF(0	1402)	c	1	C20	C56	
302-417-209	3	cap, 3.9pF(0	1402)	d	36	C79	C83	-50
302-417-213	5	cap, 8.2pF(0	1402)		:51 :84	C53	C55	C58
302-417-316	43	cap, 15pF(04	102)		22 26 211 219 233 240 245 257 278 288 292	C3 C7 C12 C23 C34 C42 C47 C60 C80 C89	C4 C9 C14 C27 C37 C43 C50 C61 C81 C90 C108	C5 C10 C17 C31 C39 C44 C54 C76 C87
302-417-318	3	cap, 22pF(0	402)	•	C85	C114	C115	
302-417-320	1	cap, 33pF(0	402)	•	C8			
302-417-326	2	cap, 100pF(0402)		C25	C28	•	
302-417-330	1	cap, 220pf(0402)	1	c77			
302-418-149	2	cap, 8200pF	(0402)		C16	C18		0129
302-418-231	4	cap, 270pF((0402)		C67	c70	C127	C128
302-418-234	4	cap, 470pF	(0402)		C46	C59	C64	C80
302-418-237	2	cap, 820pF	(0402)		C24	C63	282	c122
302-418-238	6	cap, 1000pl	(0402)		C62 C123	C71 C126	C82	C122
302-418-244	1	cap, 3300p)	F(0402)		C15			
302-418-350	2	cap, 0.01w	F(0402)		C26	C69		
303-092-500	2	diode, MMB	D4148		CR100	CR103		
303-130-501	2	varactor,	MMBV3102L		CR101	CR102		
304-223-501	1	pnp 2res,			Q100			
304-224-501	1	sw 6324, F	DC6324L		Q101			

Confidential Ir	nterm	ec- bom_224-194-PRE	13/			Page 3
304-225-501	1	amplifier 420, BGA420	Ulo			
309-123-524	1	inductor, 100nH(0603)	t.11			
309-124-503	1	inductor, 1.5nH(0402)	L102			
309-124-507	4	inductor, 3.3nH(0402)	L2	L4	L5	L9
309-124-508	1	inductor, 3.9nH(0402)	L3			
309-124-515	3	inductor, 15nH(0402)	Ll	L8	L10	`
309-139-501	2	inductor, 150nH(0805)	L6	L13	•	
309-139-503	1	inductor, 330nH(0805)	L12			
309-380-519	1	inductor, 47nH(0603)	レフ			
310-741-502	3	TC7SU04F, TC7SU04F	U100	U104	U105	
310-798-501	1	MC13155, MC13155D	U12			
311-747-005	1	CONNJ 12P, RECEPTACLE	J100			
312-116-501	1	crystal, 32.768KHZ	¥100			
312-118-501	1	crystal, 22.1184MHZ	Y101			
312-125-501	1	vco, PVS-2250A	oscı			
333-118-503	ı	reg 5205, MIC5205-3.3	צט			
333-118-505	1	reg 5205, MIC5205-3.6	បន			
333-136-502	1	reg 2987, LP2987IMM-3.3	REG1			
343-024-502	1	filter lowpas, 2450MHZ LTF3216Lf2	R5G LC2			
343-028-501	1	filter bndpas3, 2.45GHZ B69812	LC1			
343-029-501	1	filter bndpas8, 110.6MHZ SAFC110	FC3			
350-006-501	2	amplifier lna, MGA87563	U4	US		
350-039-501	3	UPG152TA, UPG152TA	U1	U2	U 6	
350-065-501	1	AT24C01A, 128X8 EEPROM	U101			
350-070-501	1	mixer 91563, IAM-91563	υ7			
350-072-501	1	LMX2326, LMX2326 3.0GHz	9ט			
350-108-501	1	MAX987, MAX987EUK	106			
653-351-001	1	radio shield, RADIO SHIELD	RS1			
806-876-001	1	label	NO_REF			
810-090-101	1	COMNP 1P, GND SPG CLIP	P1			

EOF